

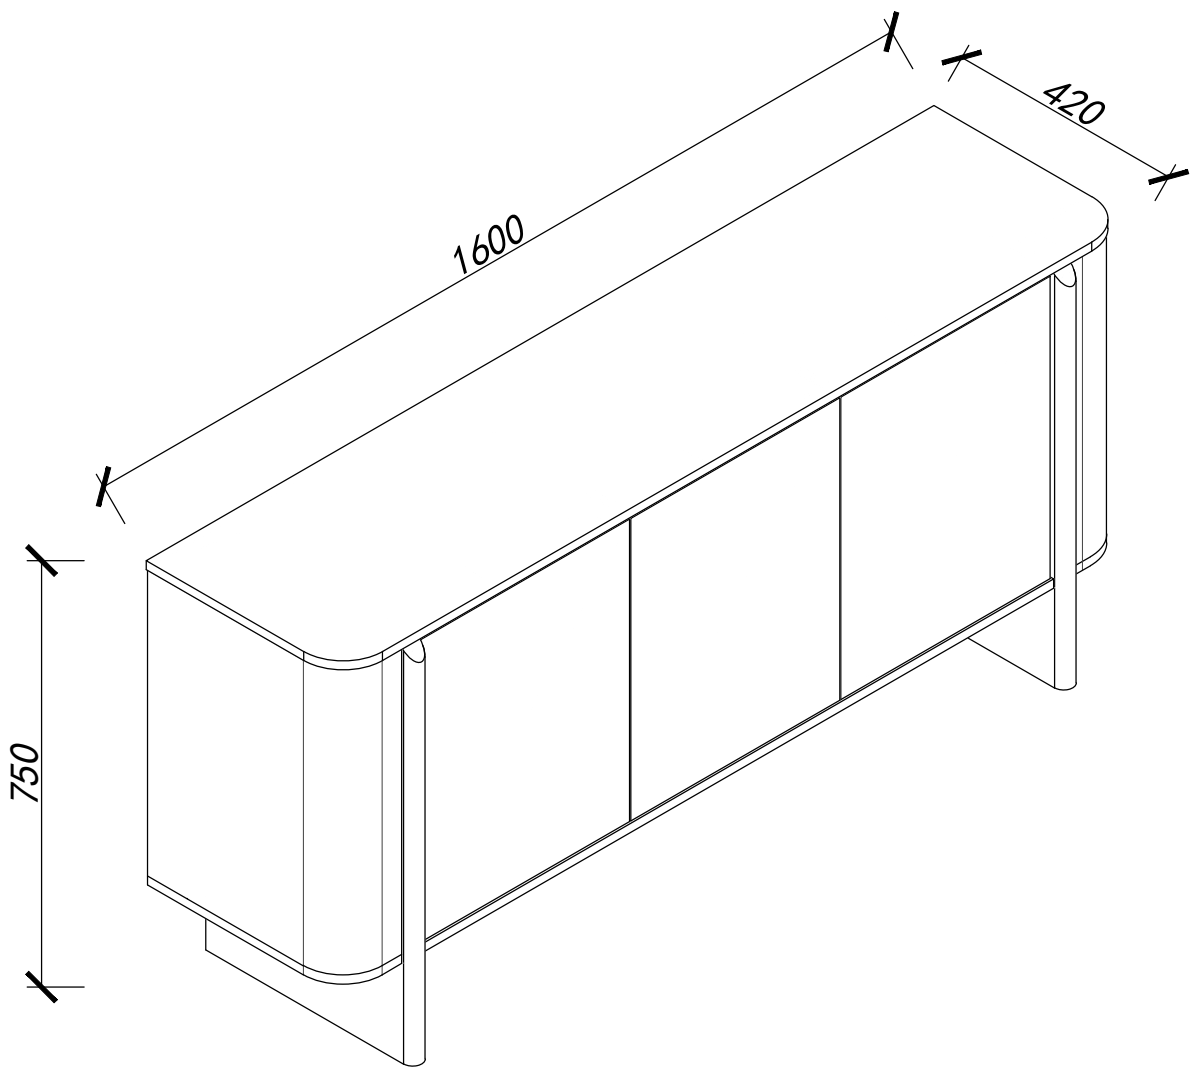
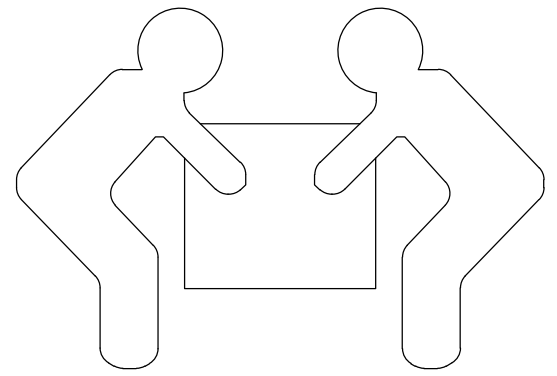








KOKETTO

Assembly Instruction

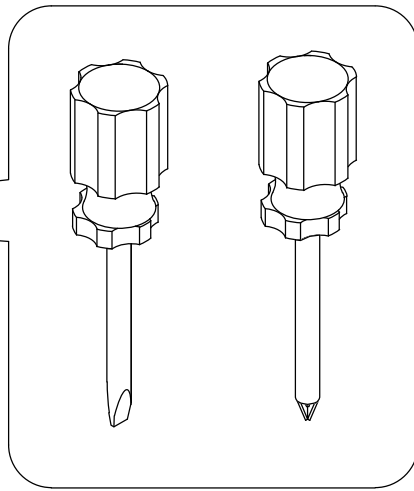

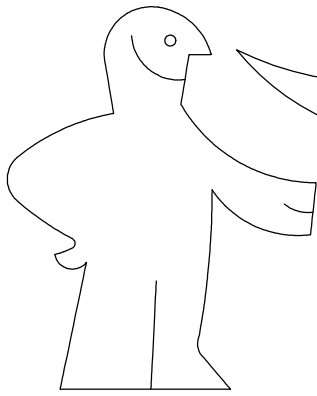


2 person recommended

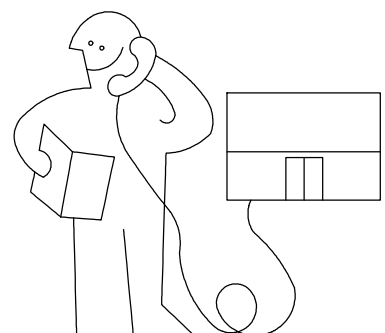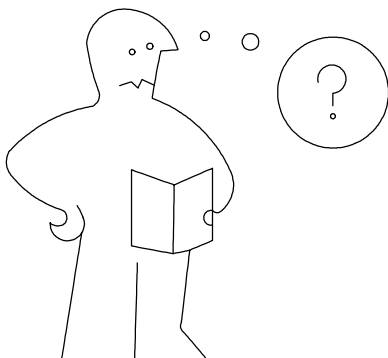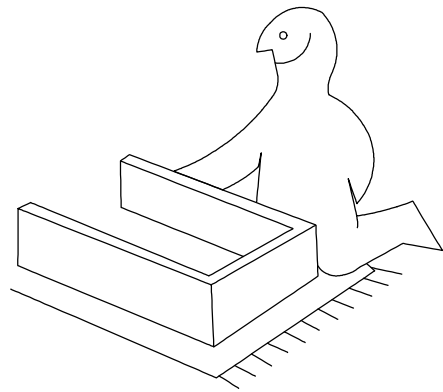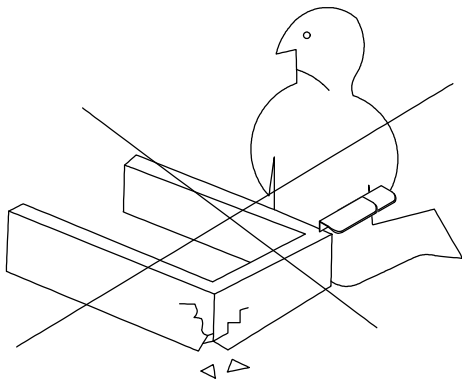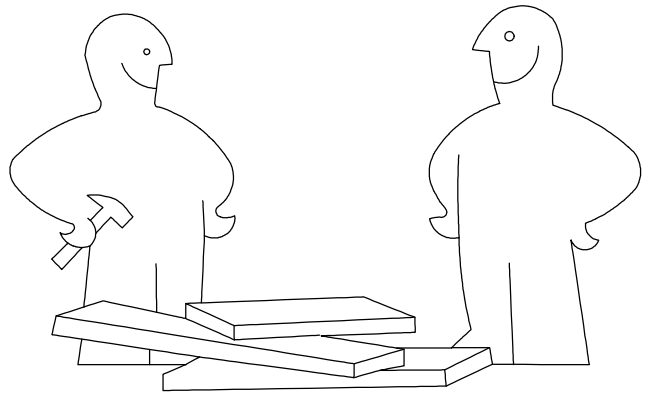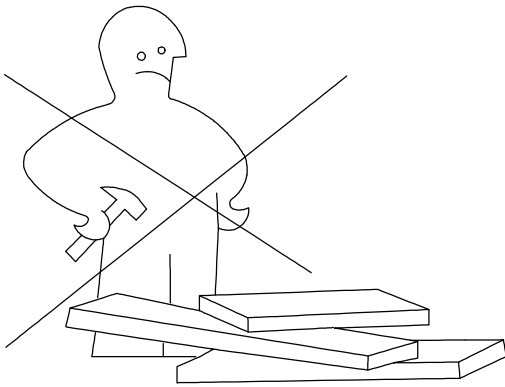

Panel No	Panel Sizes	Quantity
1	1600*400*16	1
2	1286*400*16	1
3	554*396*120	1
4	554*396*120	1
5	538*377*16	1
6	538*377*16	1
7	729*420*36	1
8	729*420*36	1
9	418*350*16	2

Panel No	Panel Sizes	Quantity
10	409*350*16	1
11	1286*60*18	1
12	1286*100*18	1
13	152*60*16	2
14	548*430*5	2
15	548*421*5	1
16	532*425*16	1
17	532*425*16	2

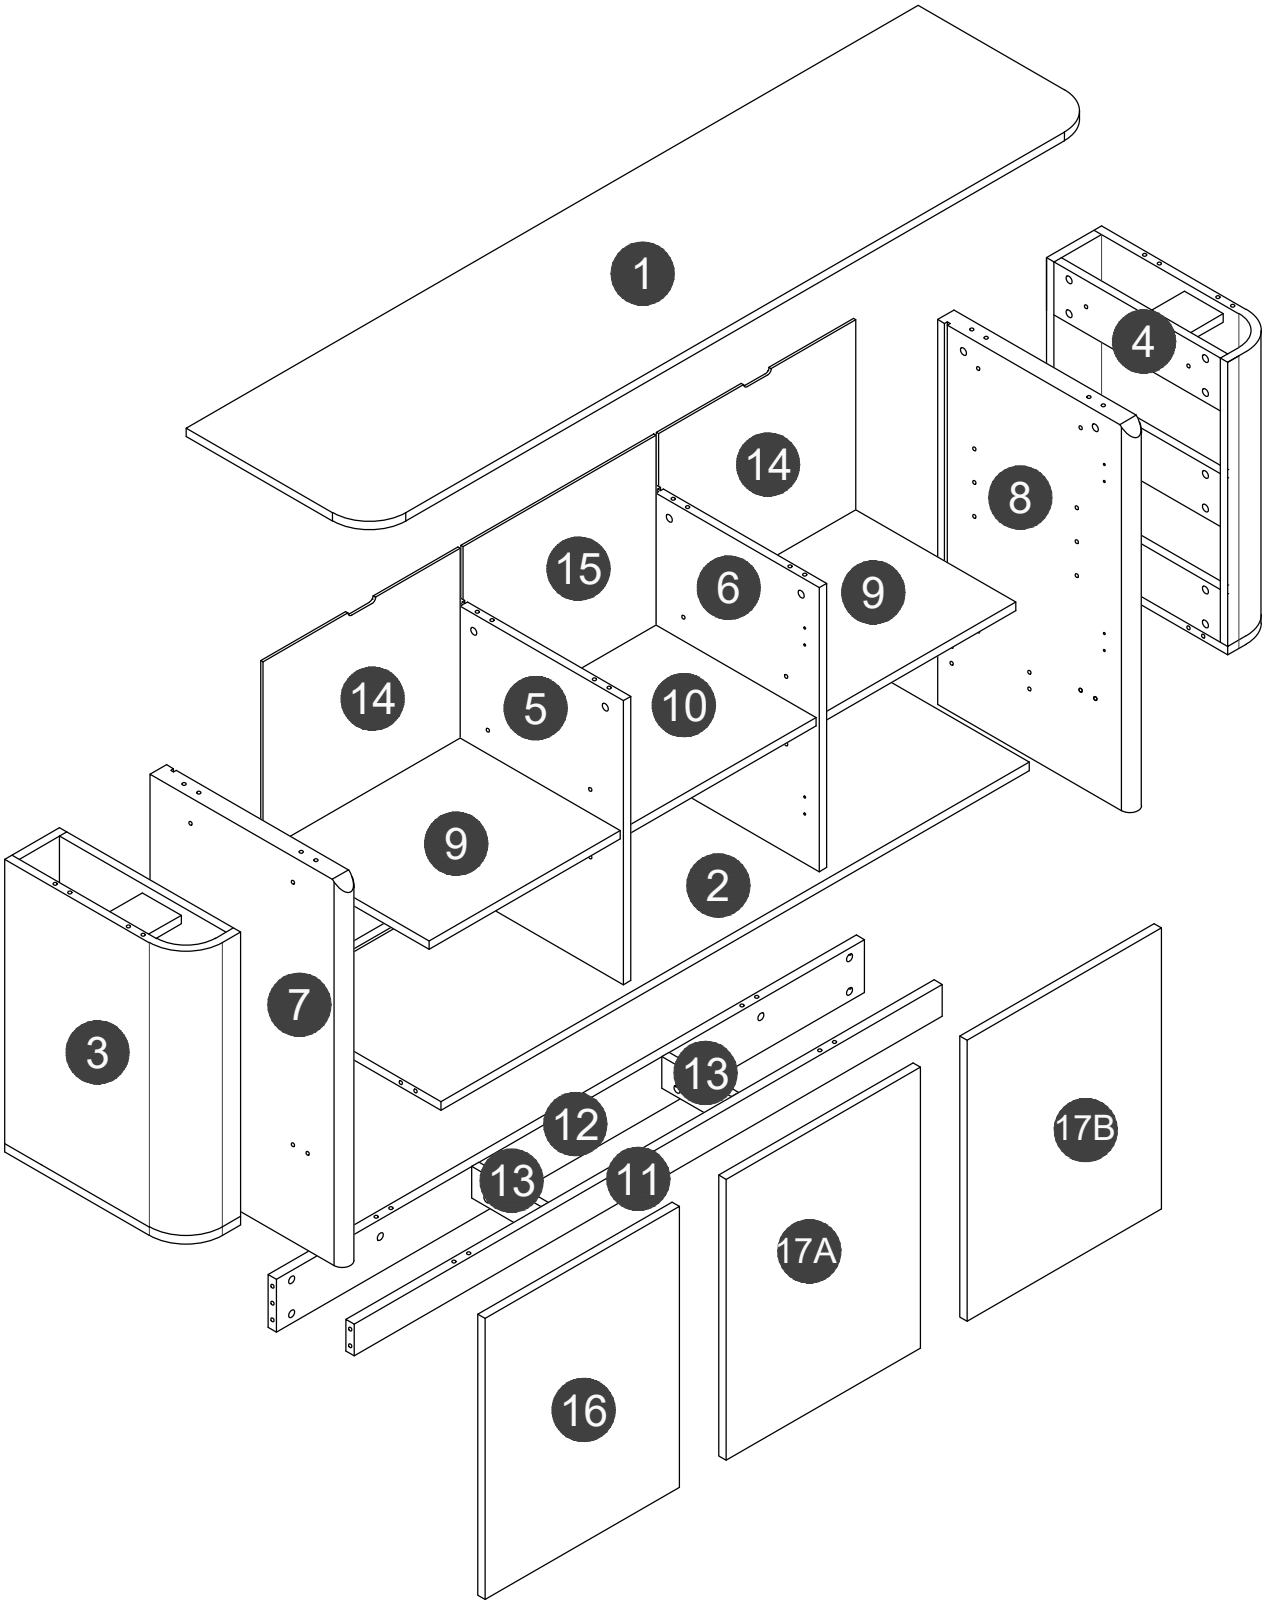


Fittings




M6*40

A1=32



Φ8*40

A2=4



Φ8*30

B=36




Φ15*12

C=32




Φ21

D=32

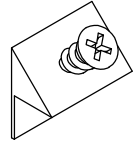


E=12

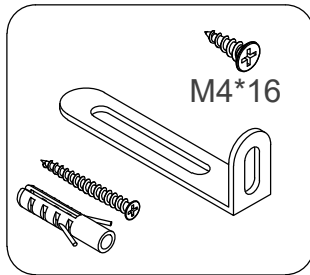


M4*16


F2=2




H =1

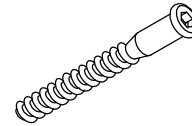

Q=8

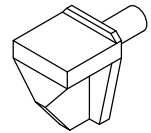


L=12

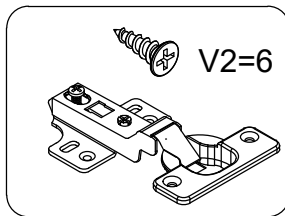


V2=6

I2=2

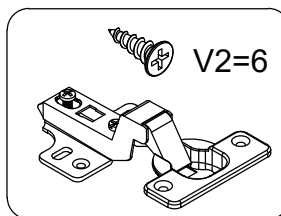


V2=6

I3=4

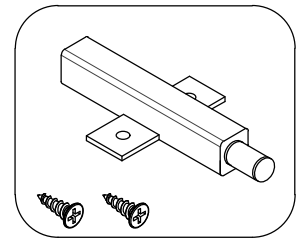


K=3


STEP 1

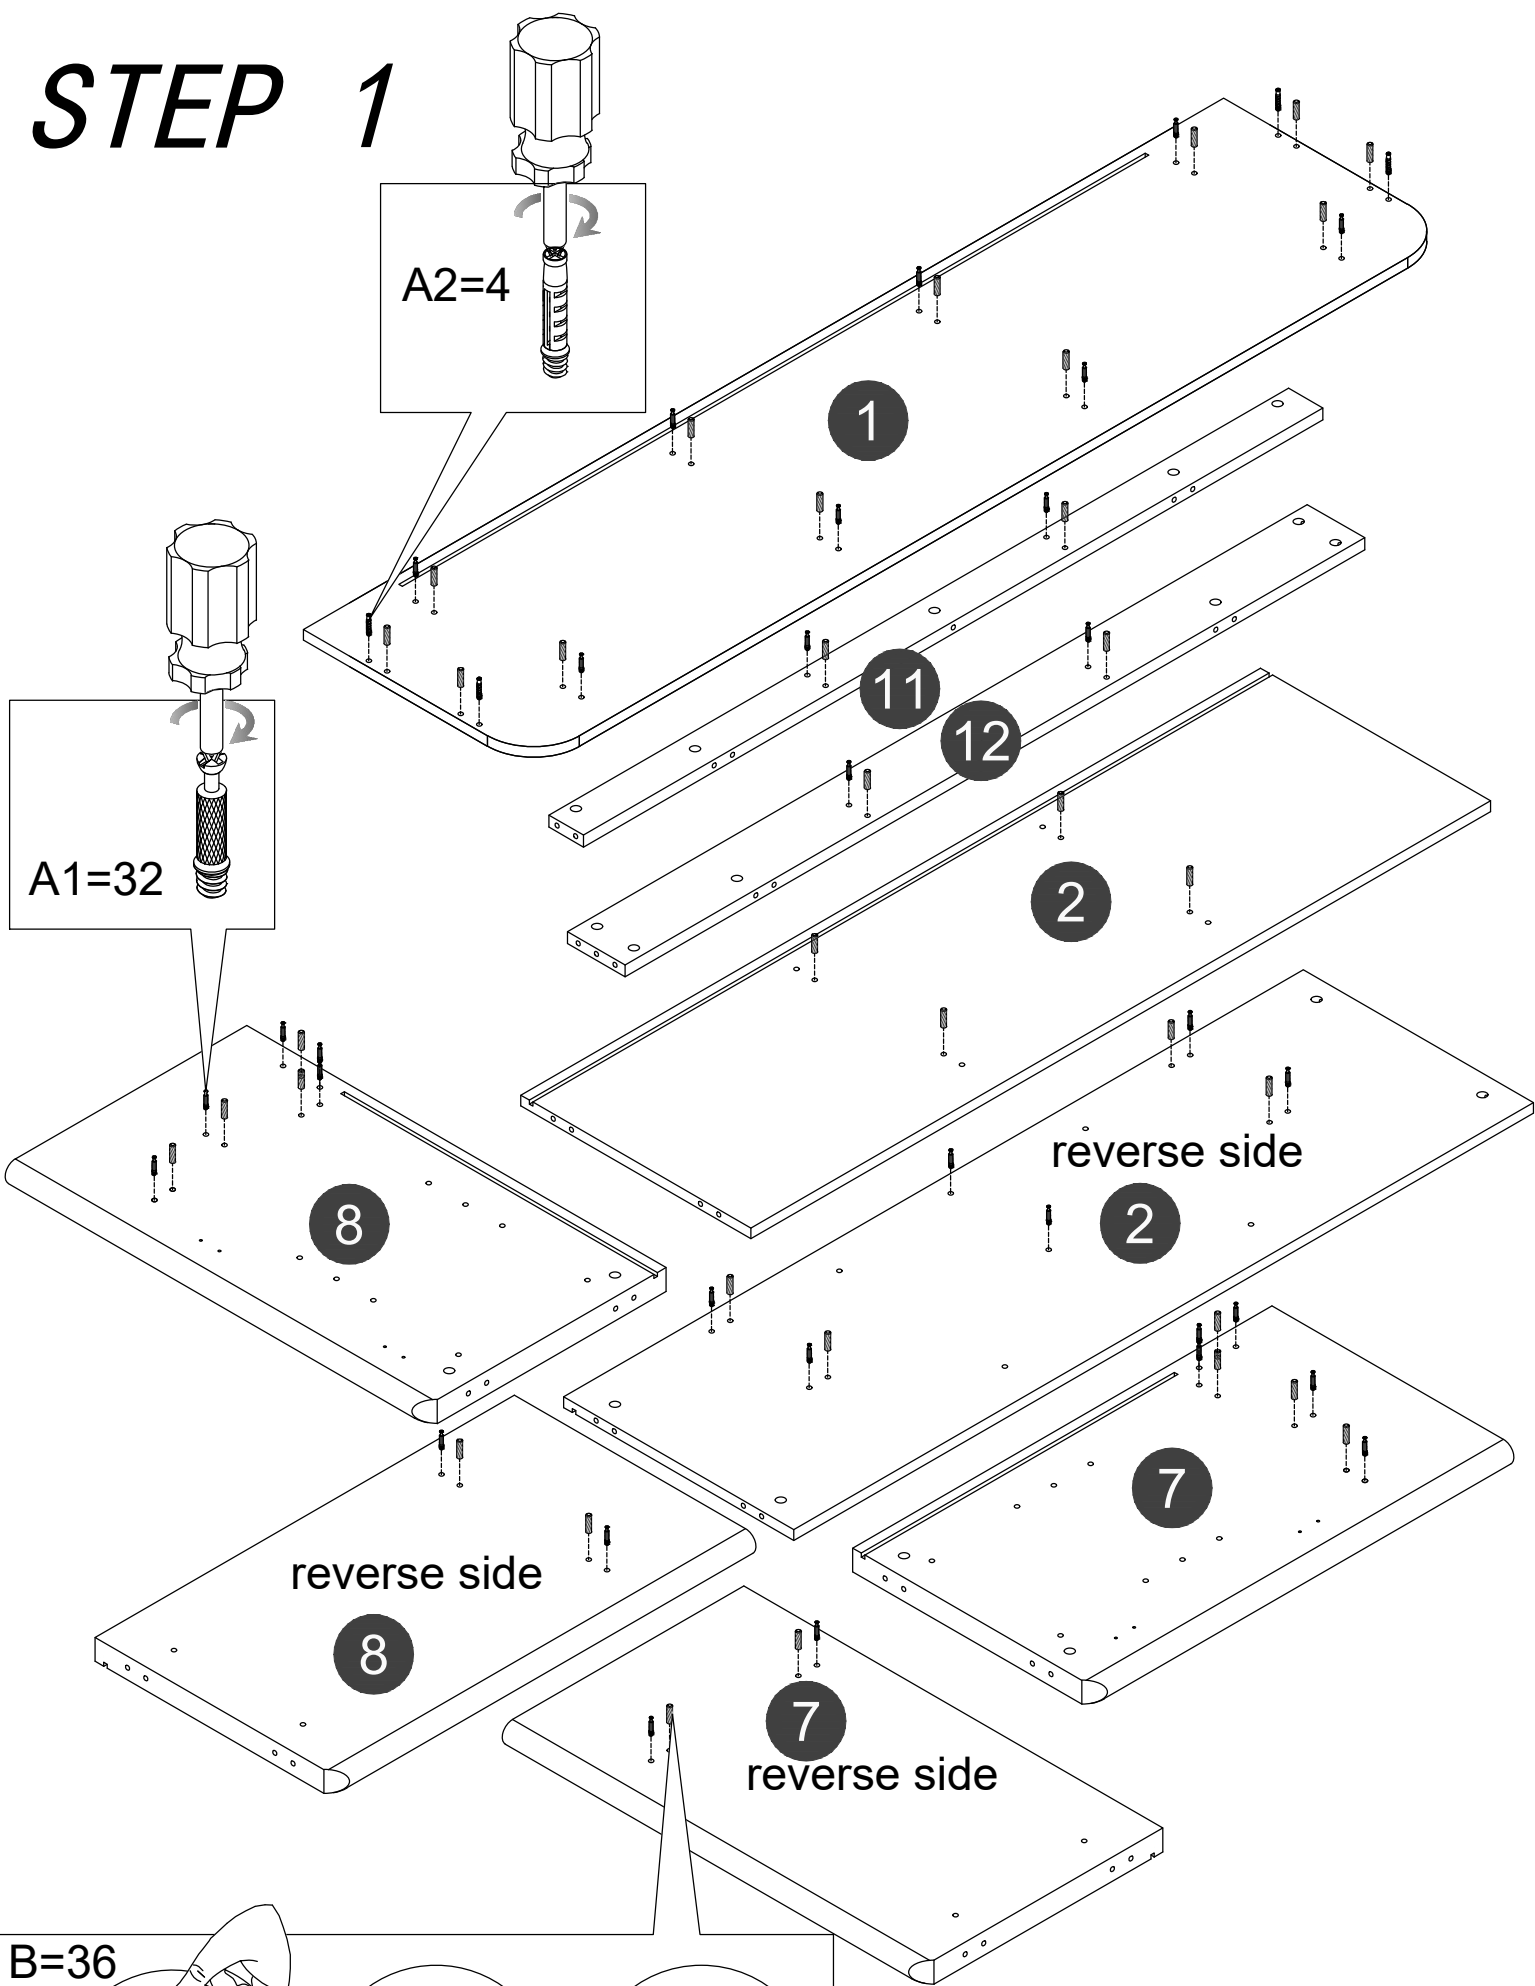


B=36

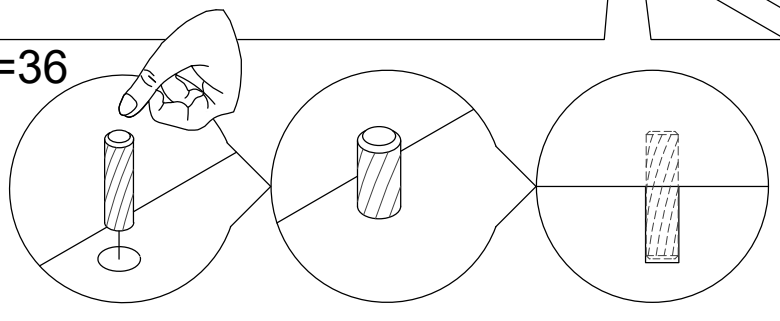


STEP 2

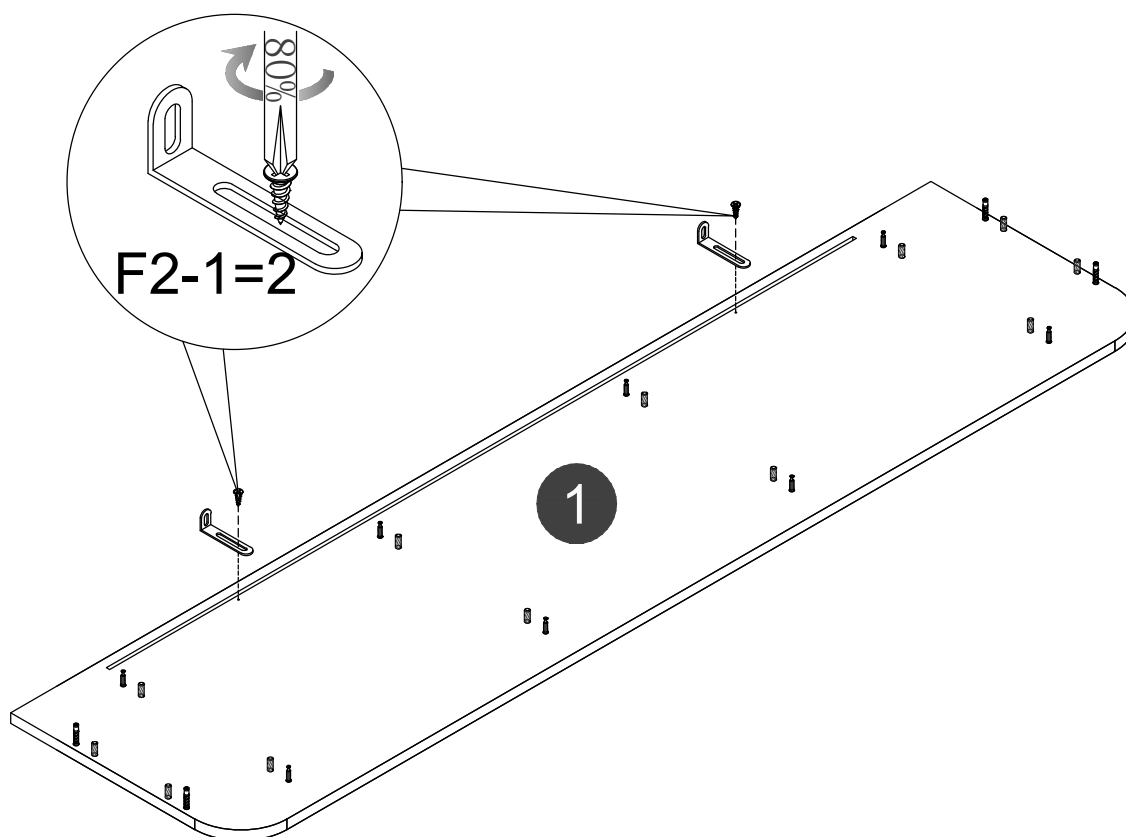


STEP 3

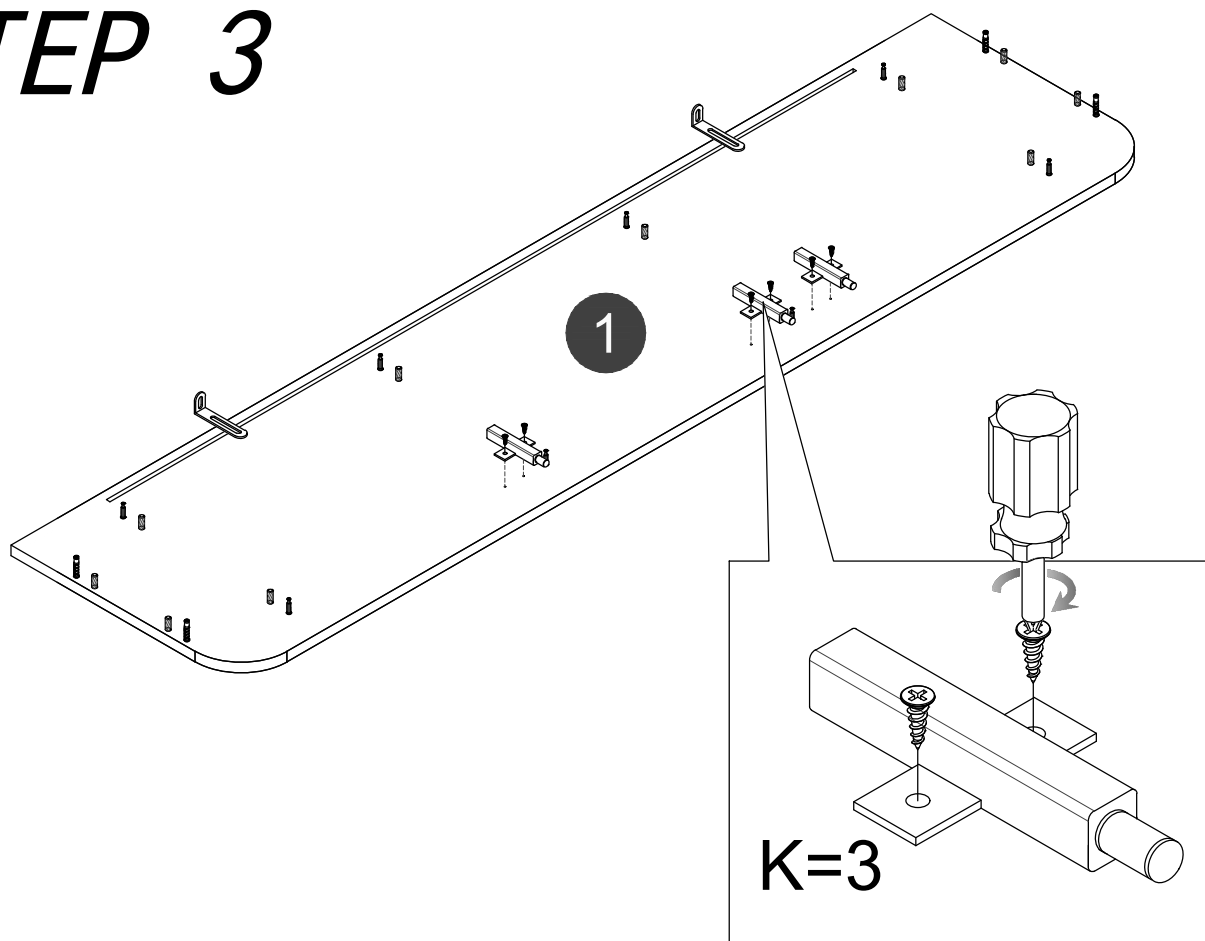


STEP 4

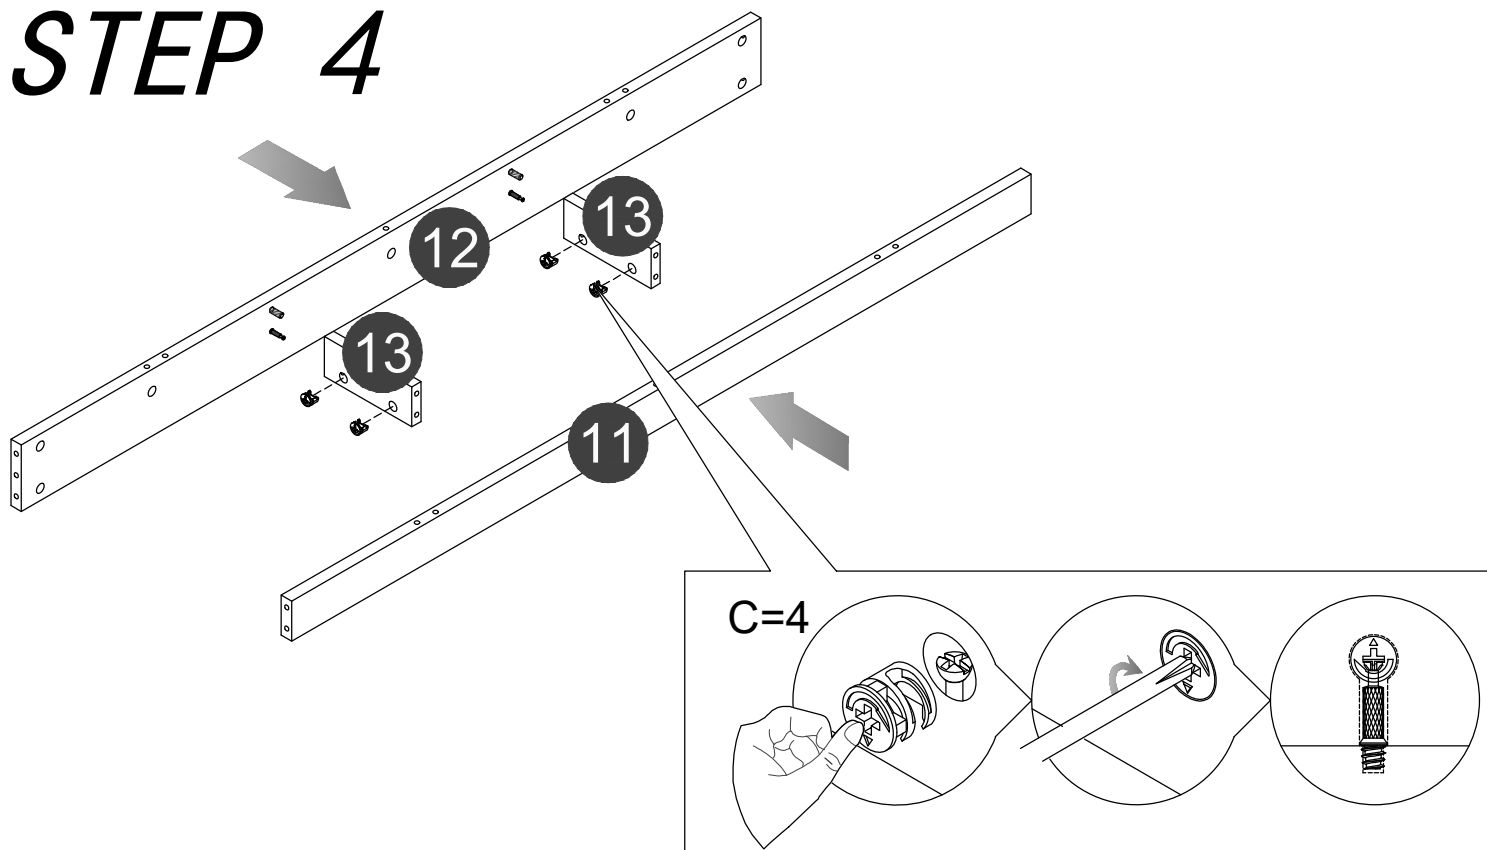


STEP 5

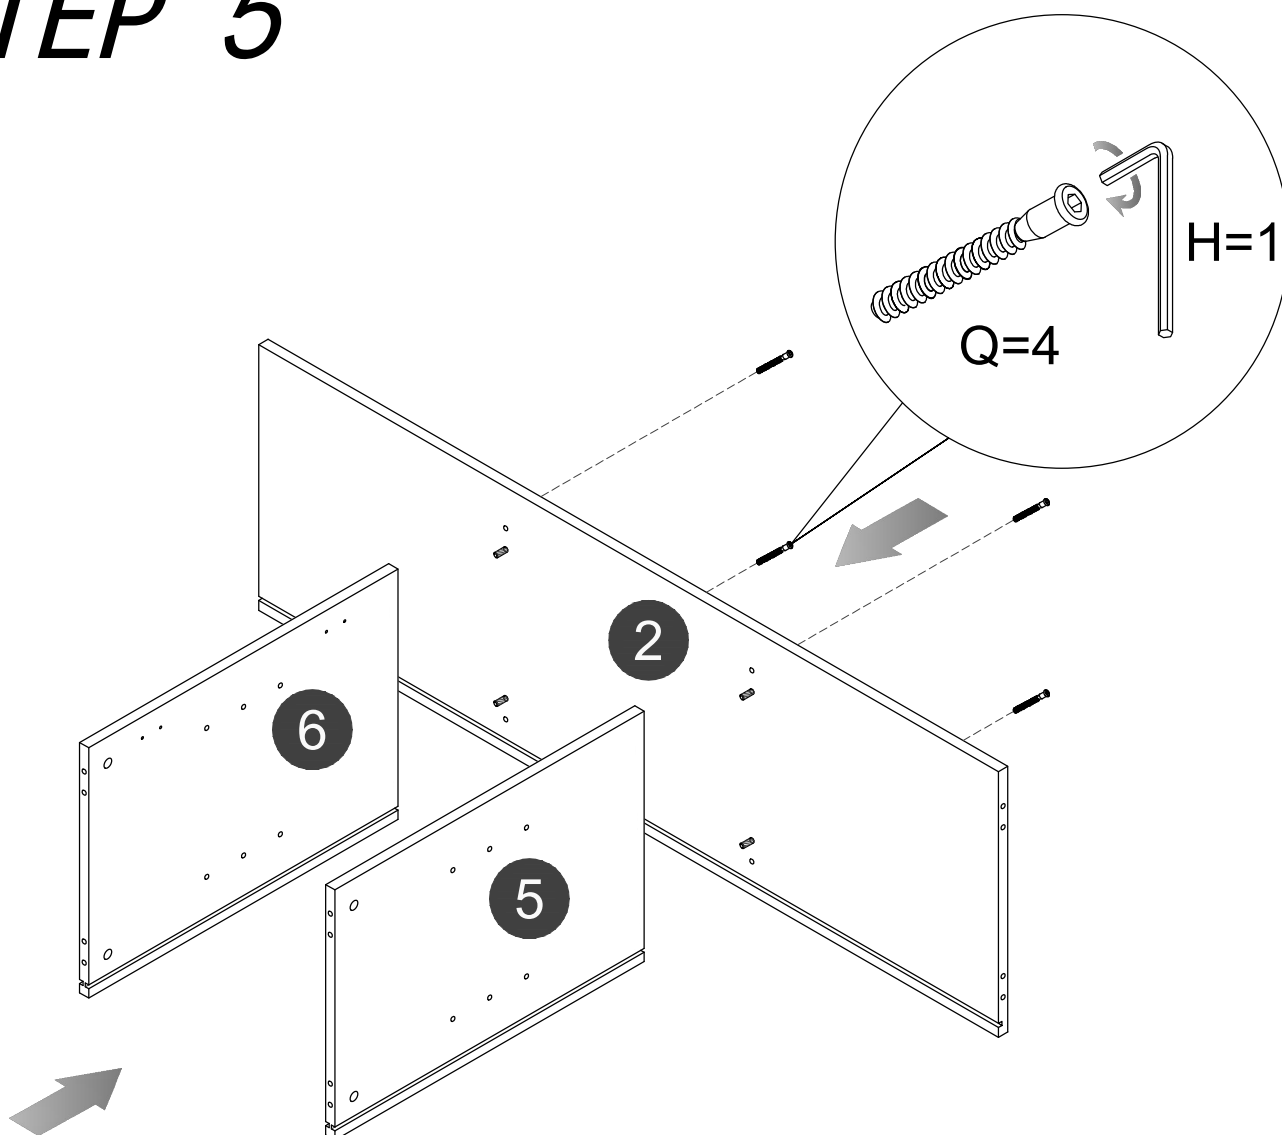


STEP 6

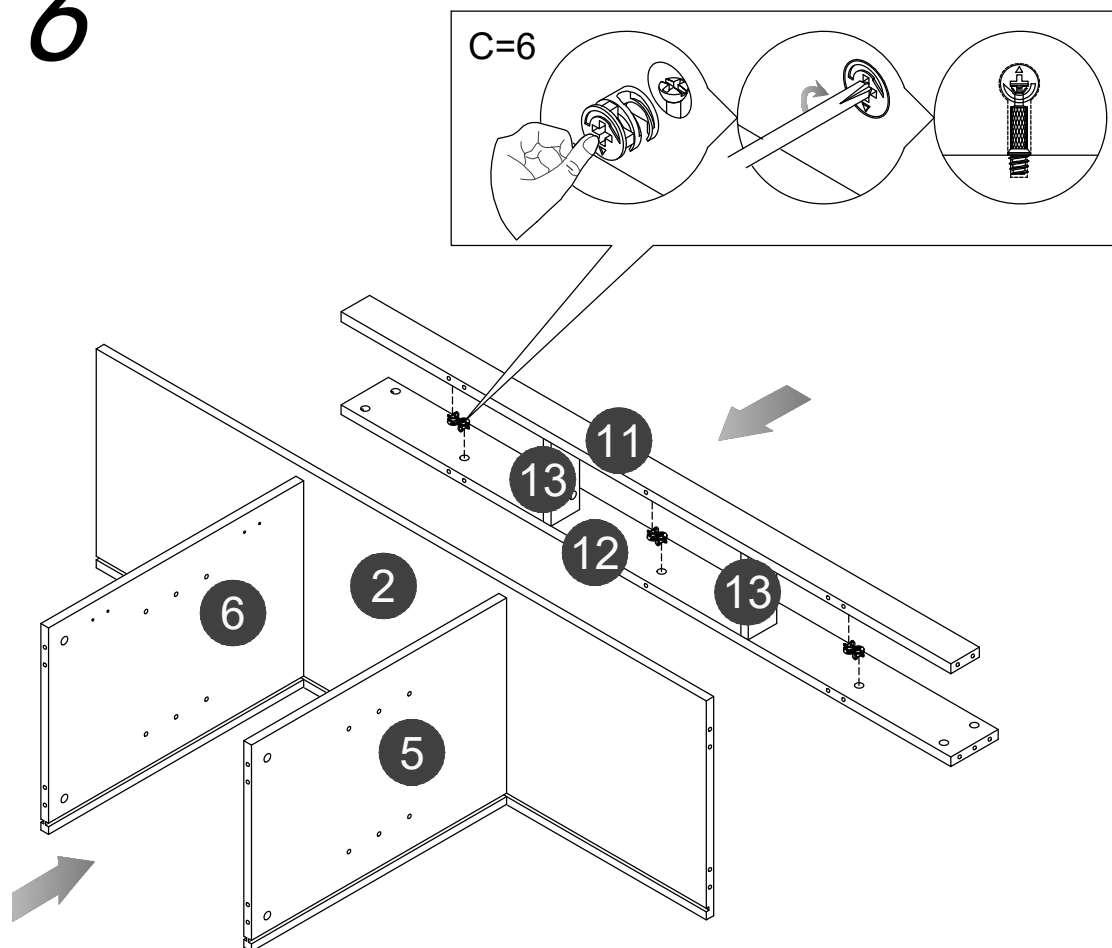


STEP 7

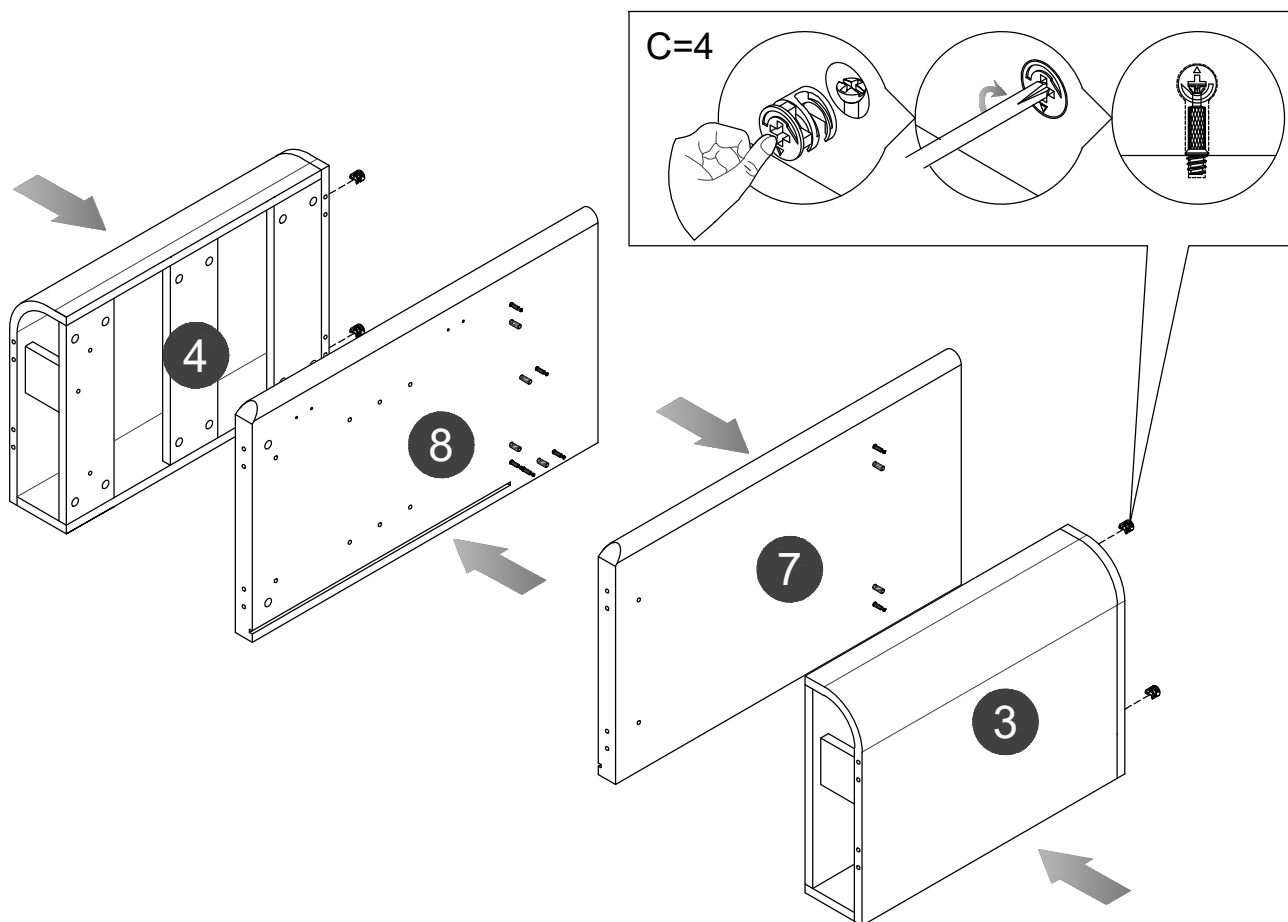


STEP 8

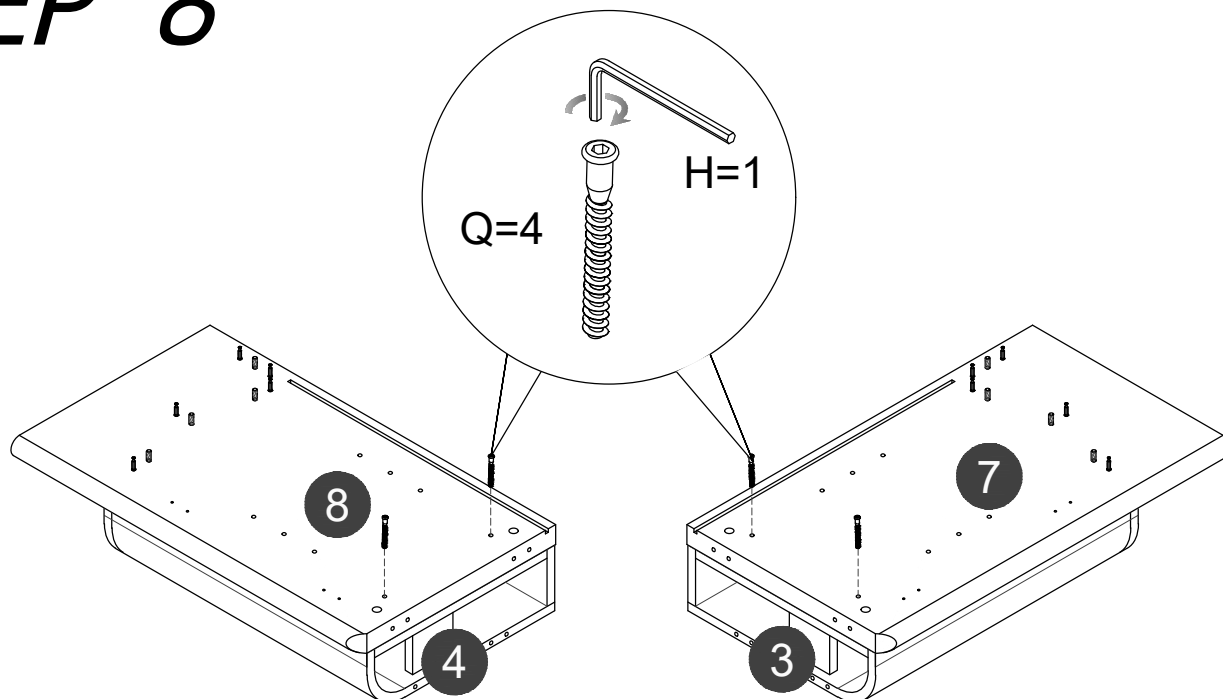


STEP 9

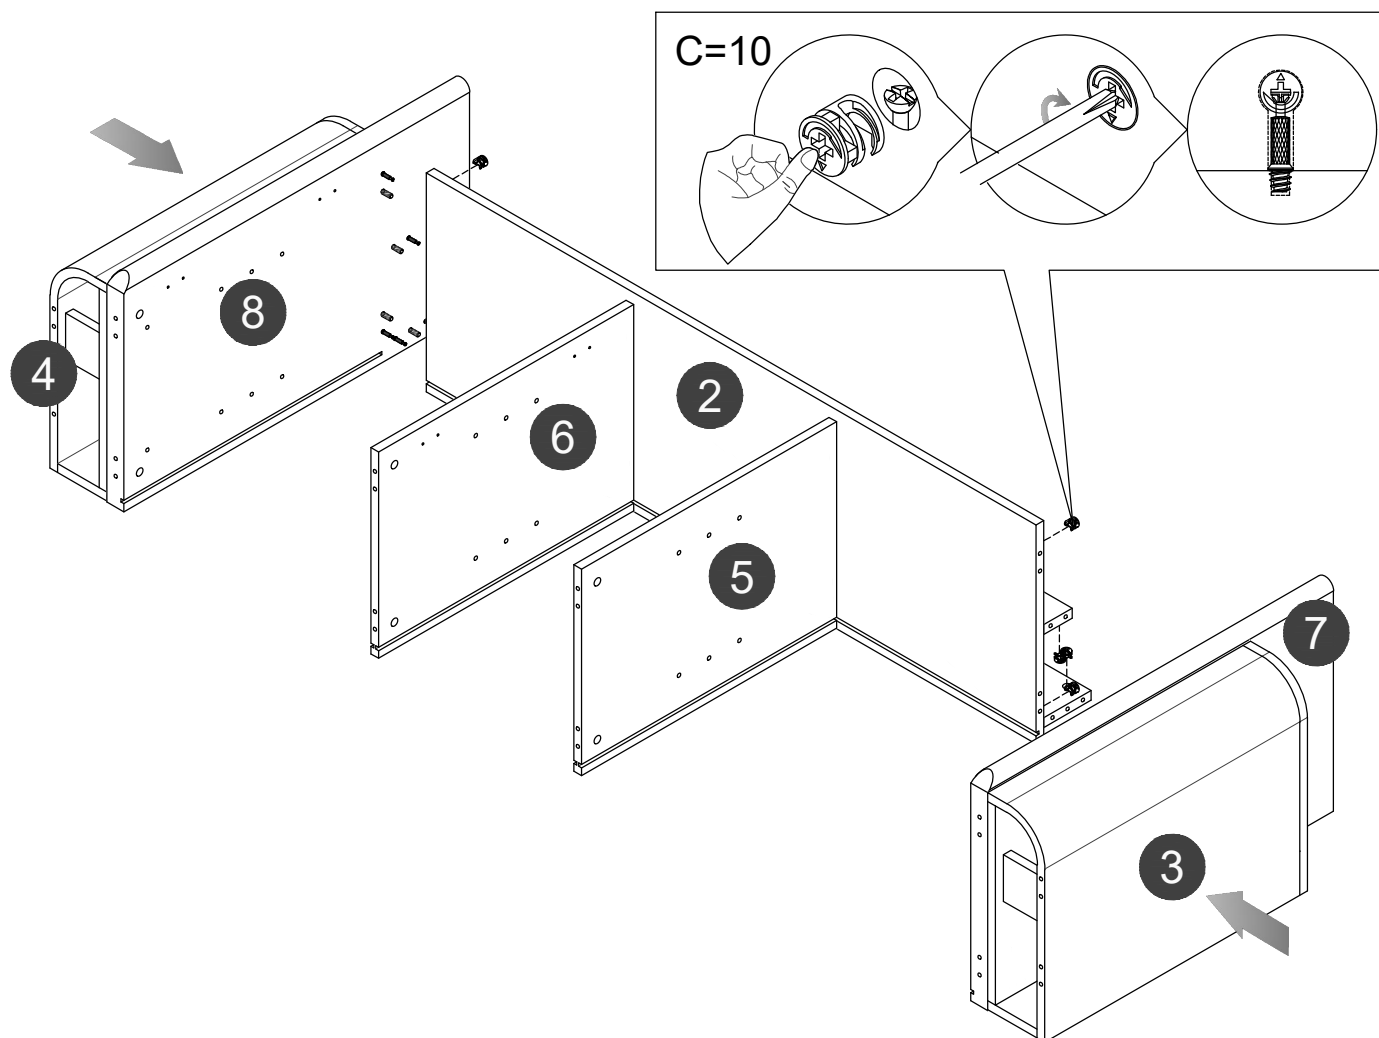


STEP 10

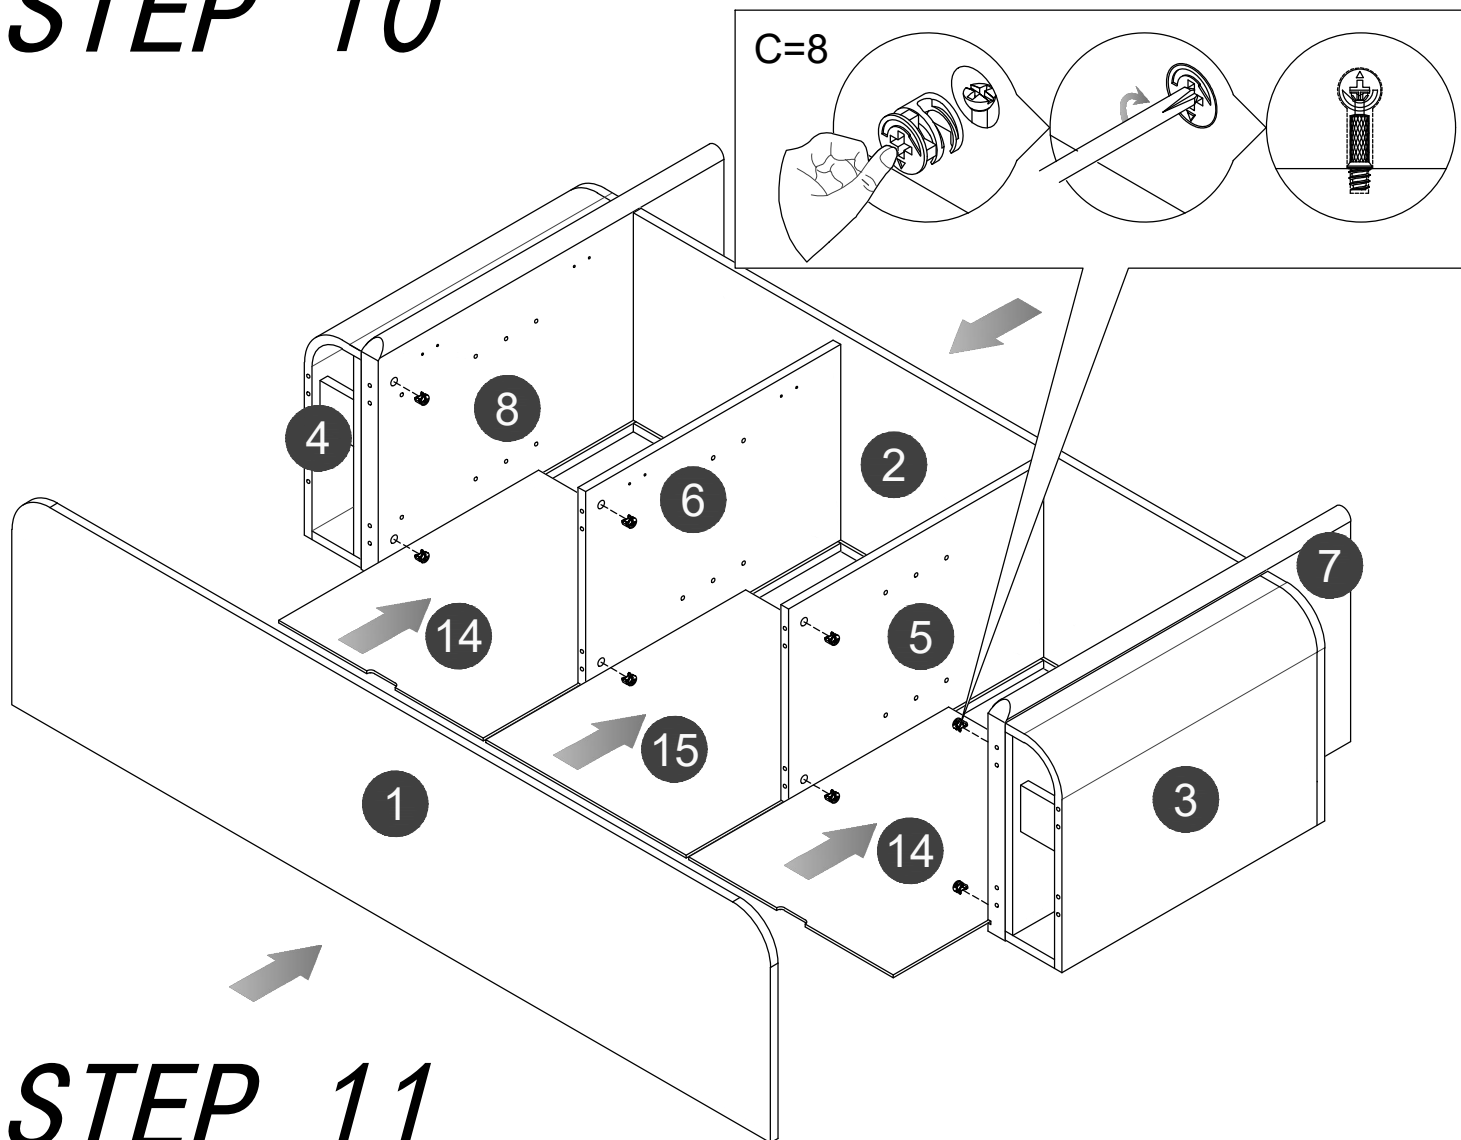


STEP 11

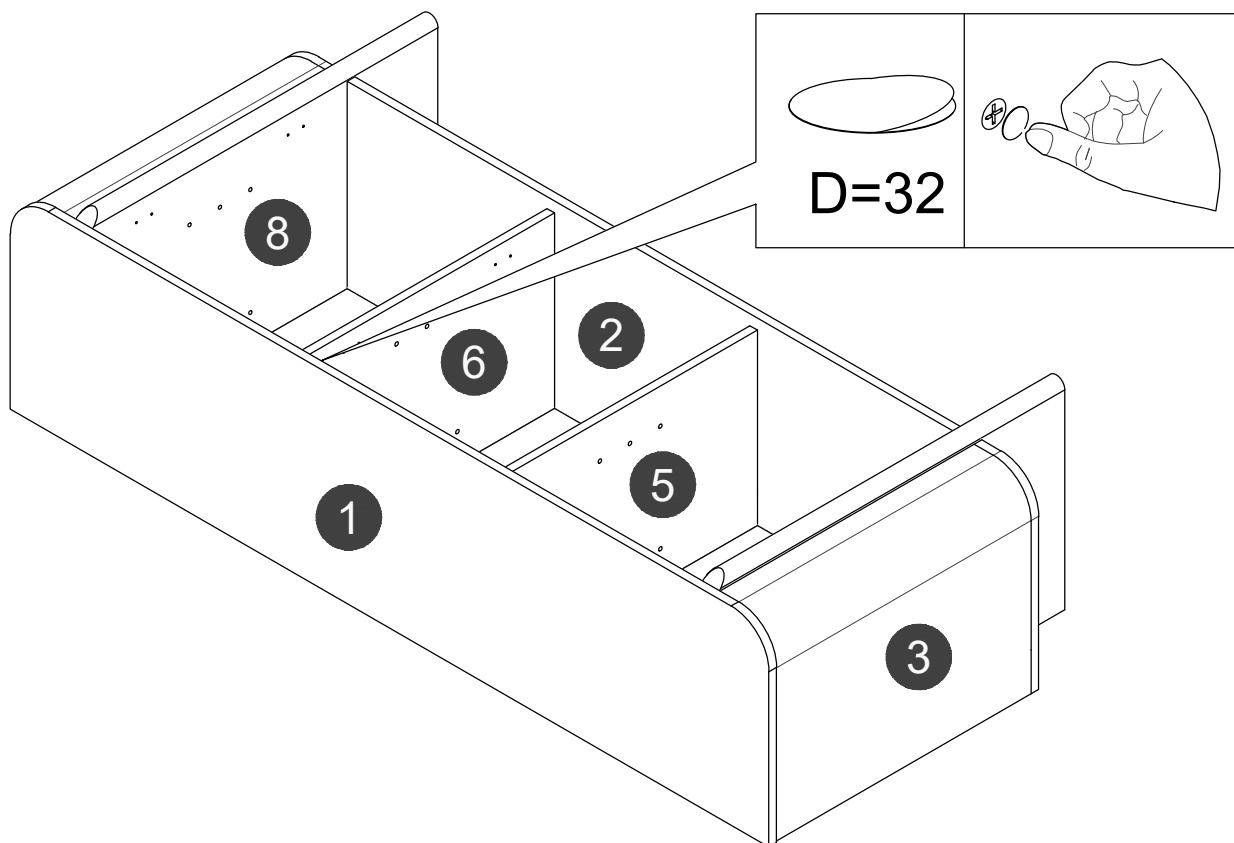


STEP 12

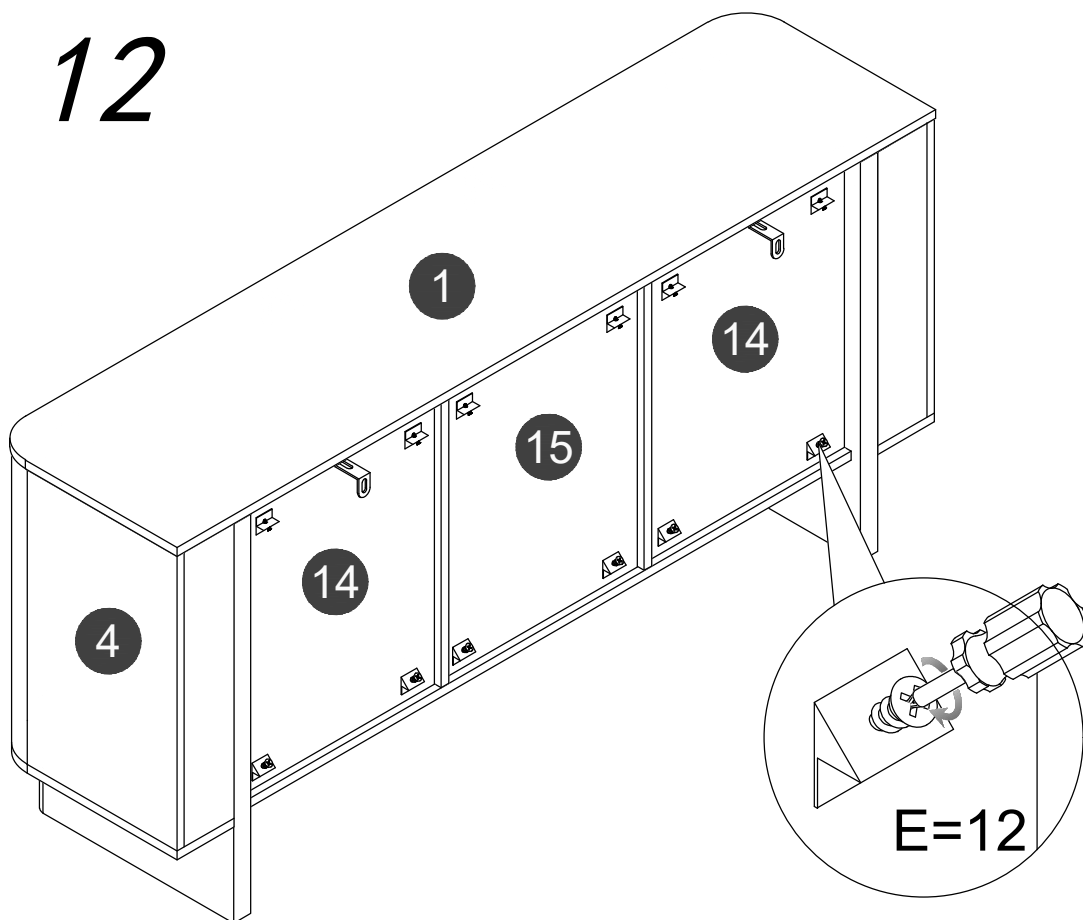


STEP 13

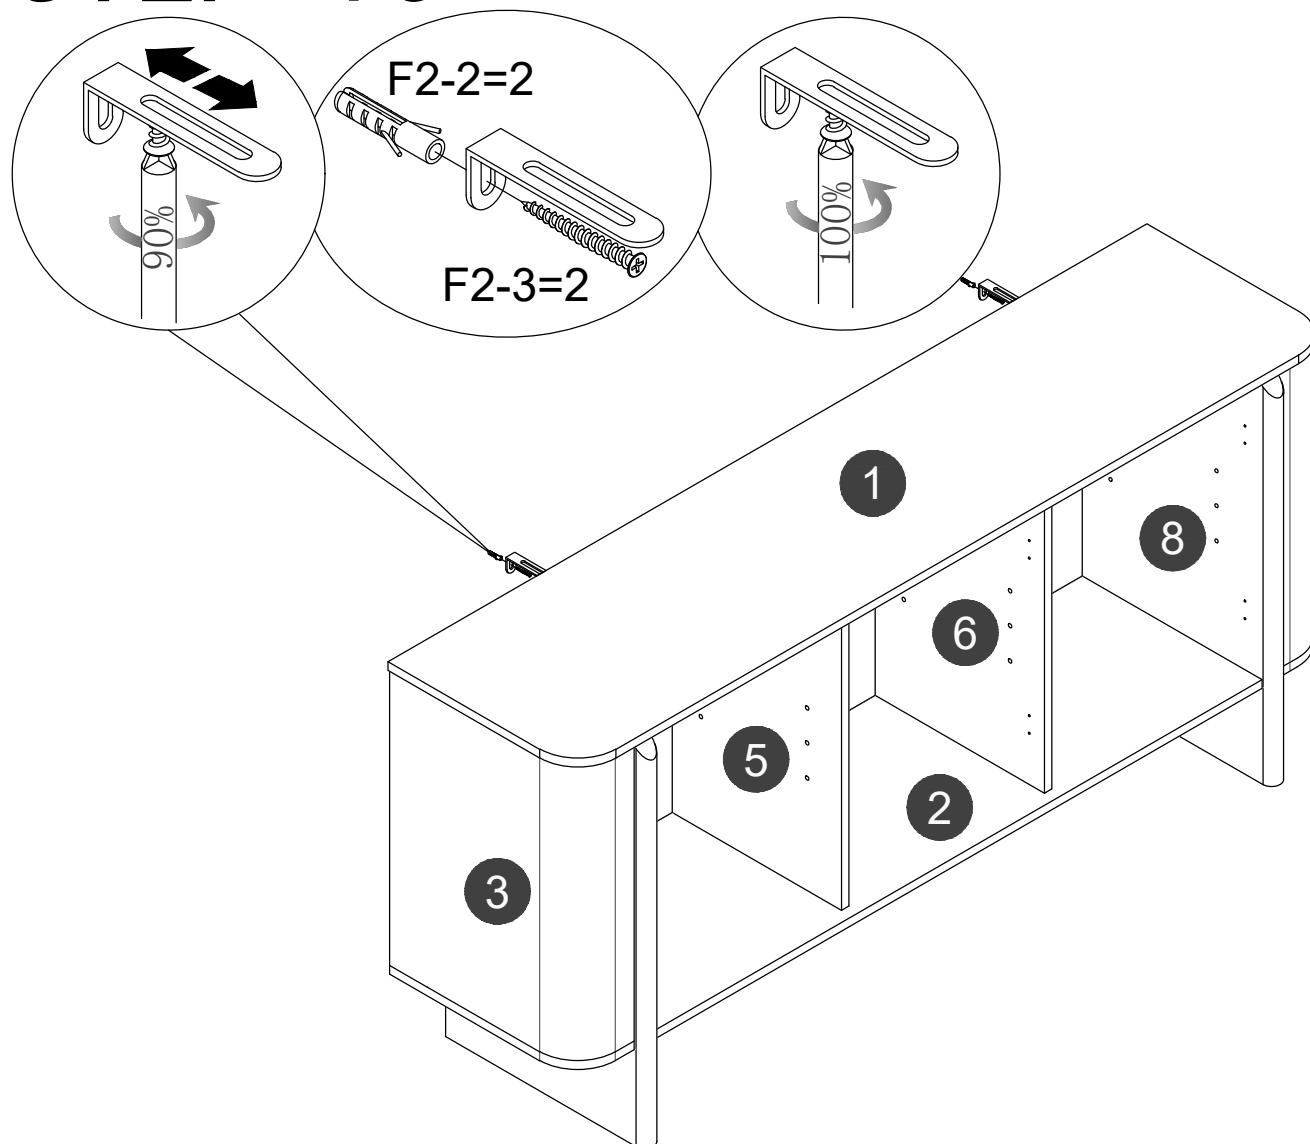


STEP 14

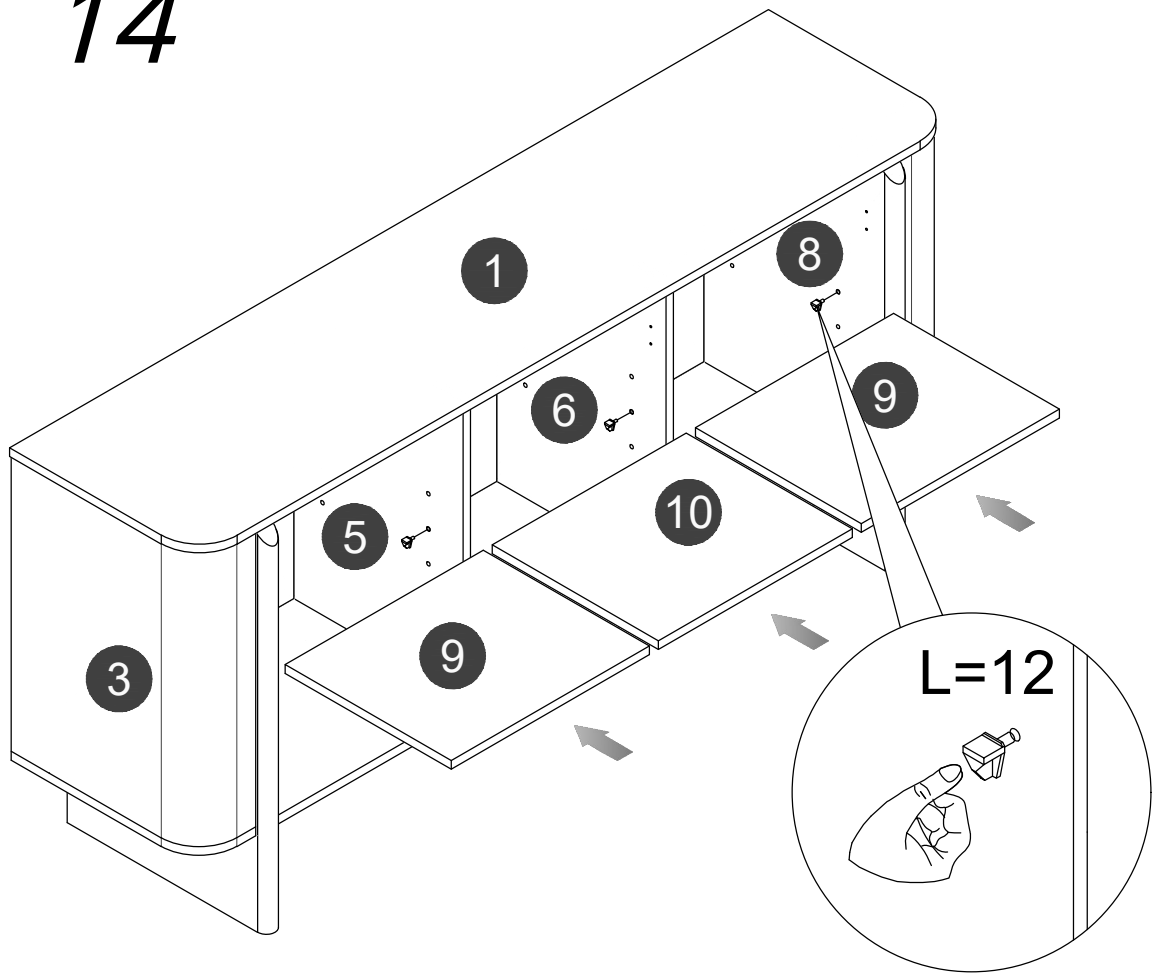





STEP 15

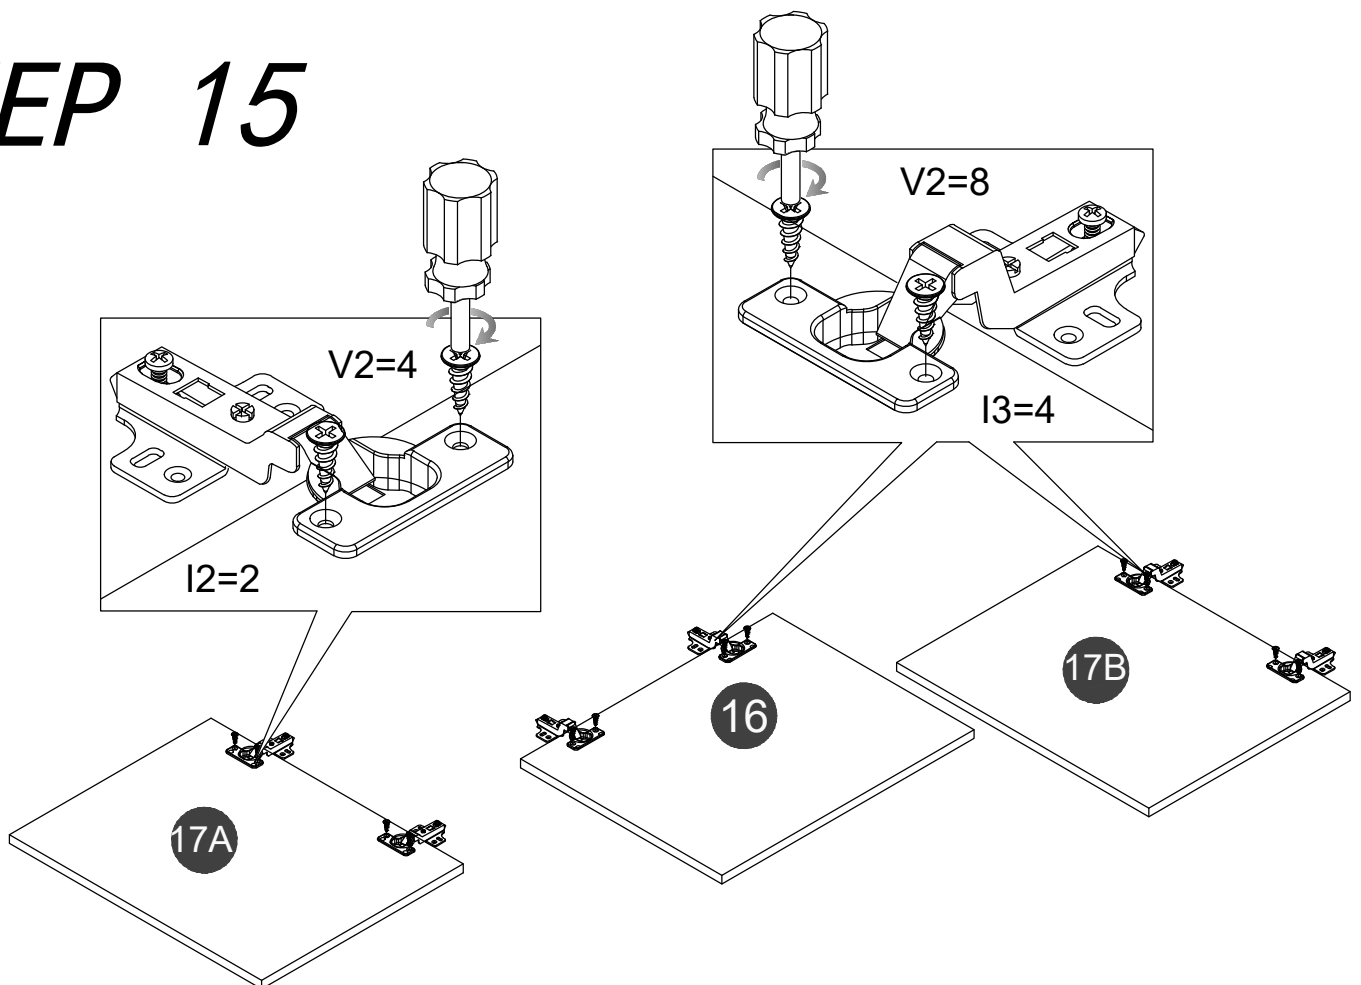


STEP 16

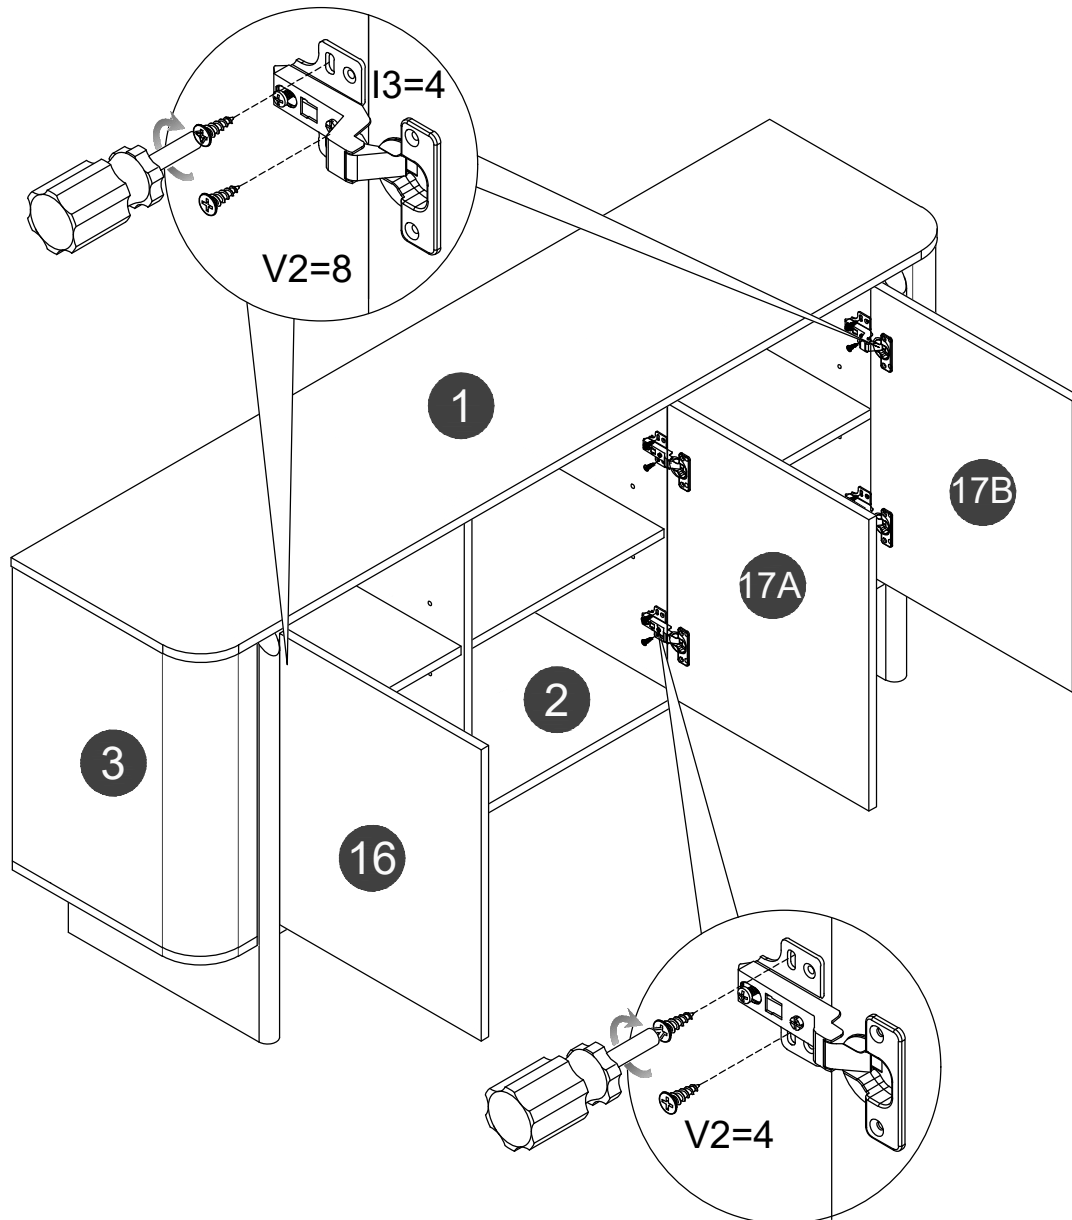

STEP 17

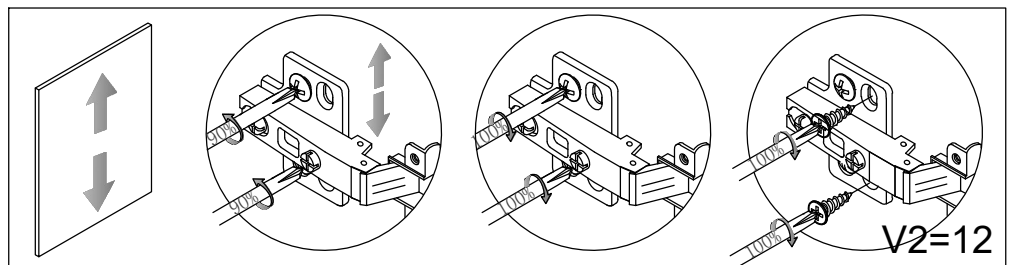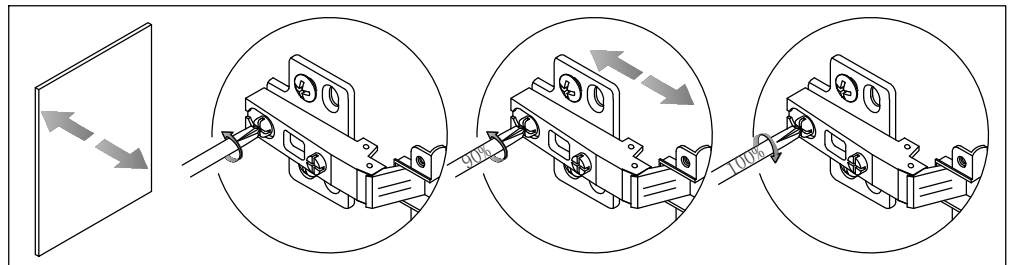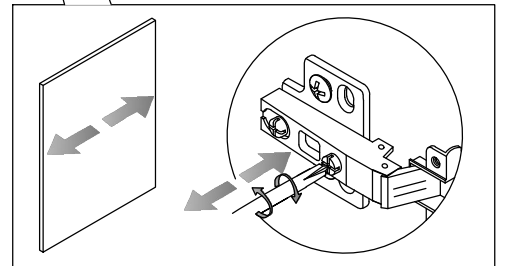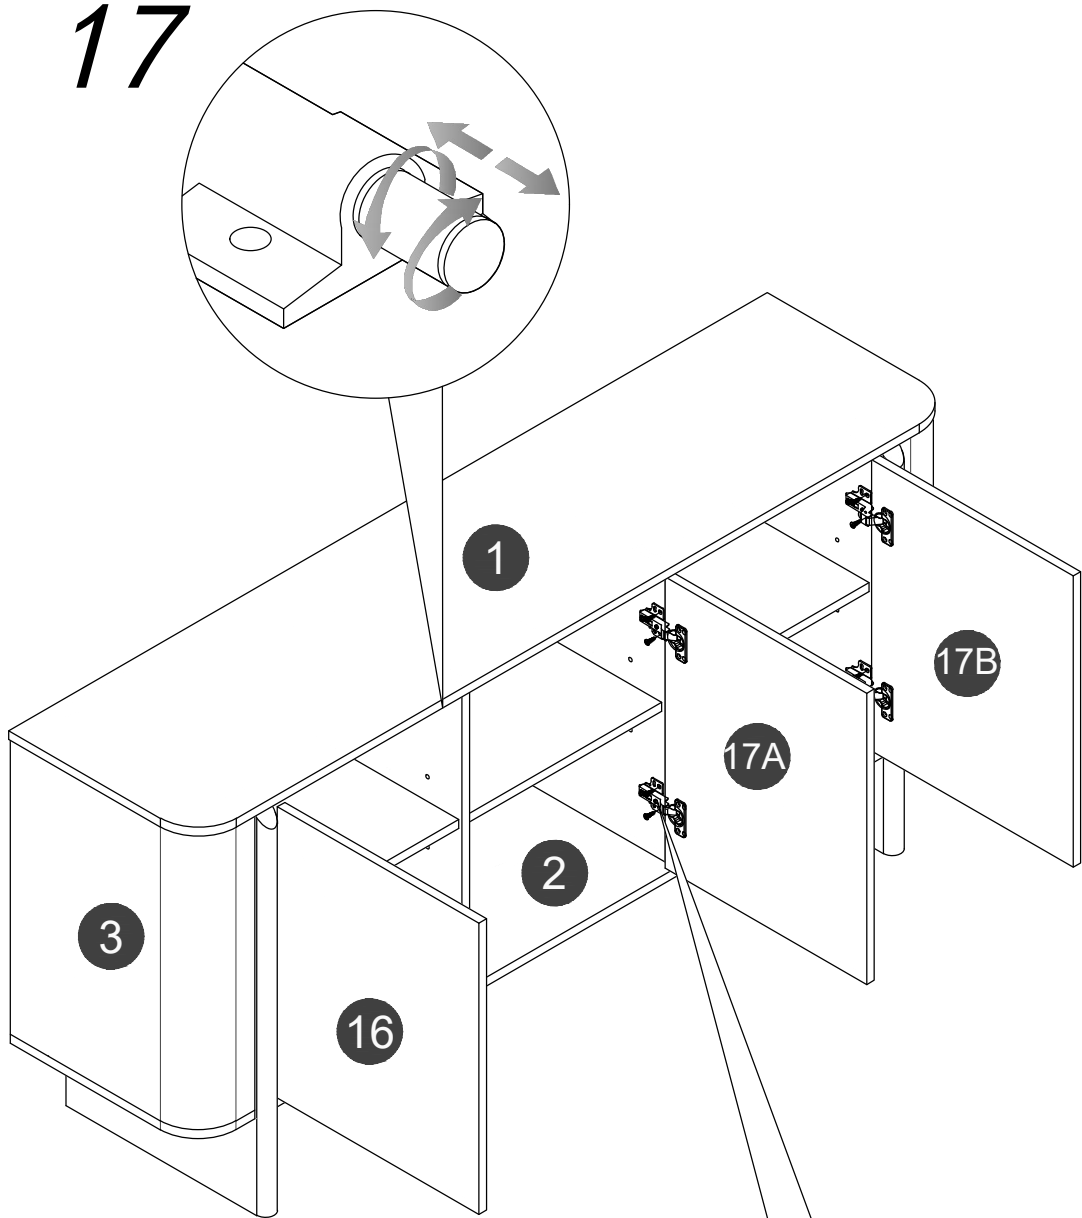

STEP 18

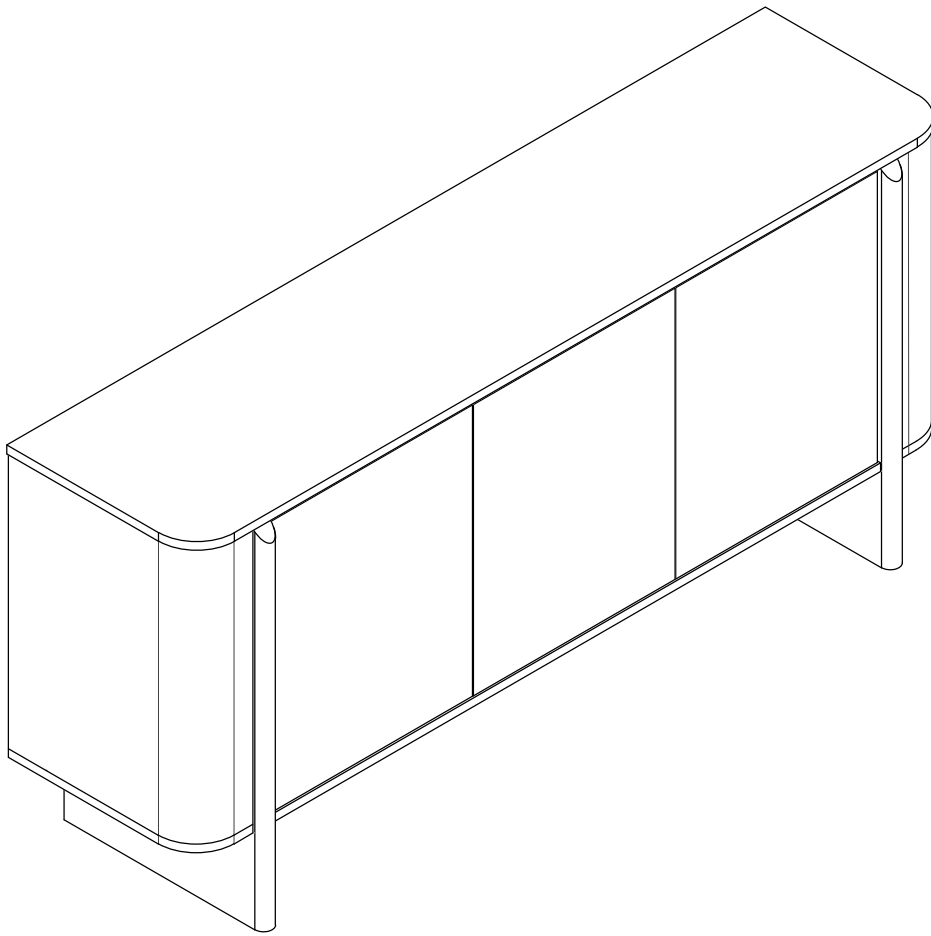

Finish