

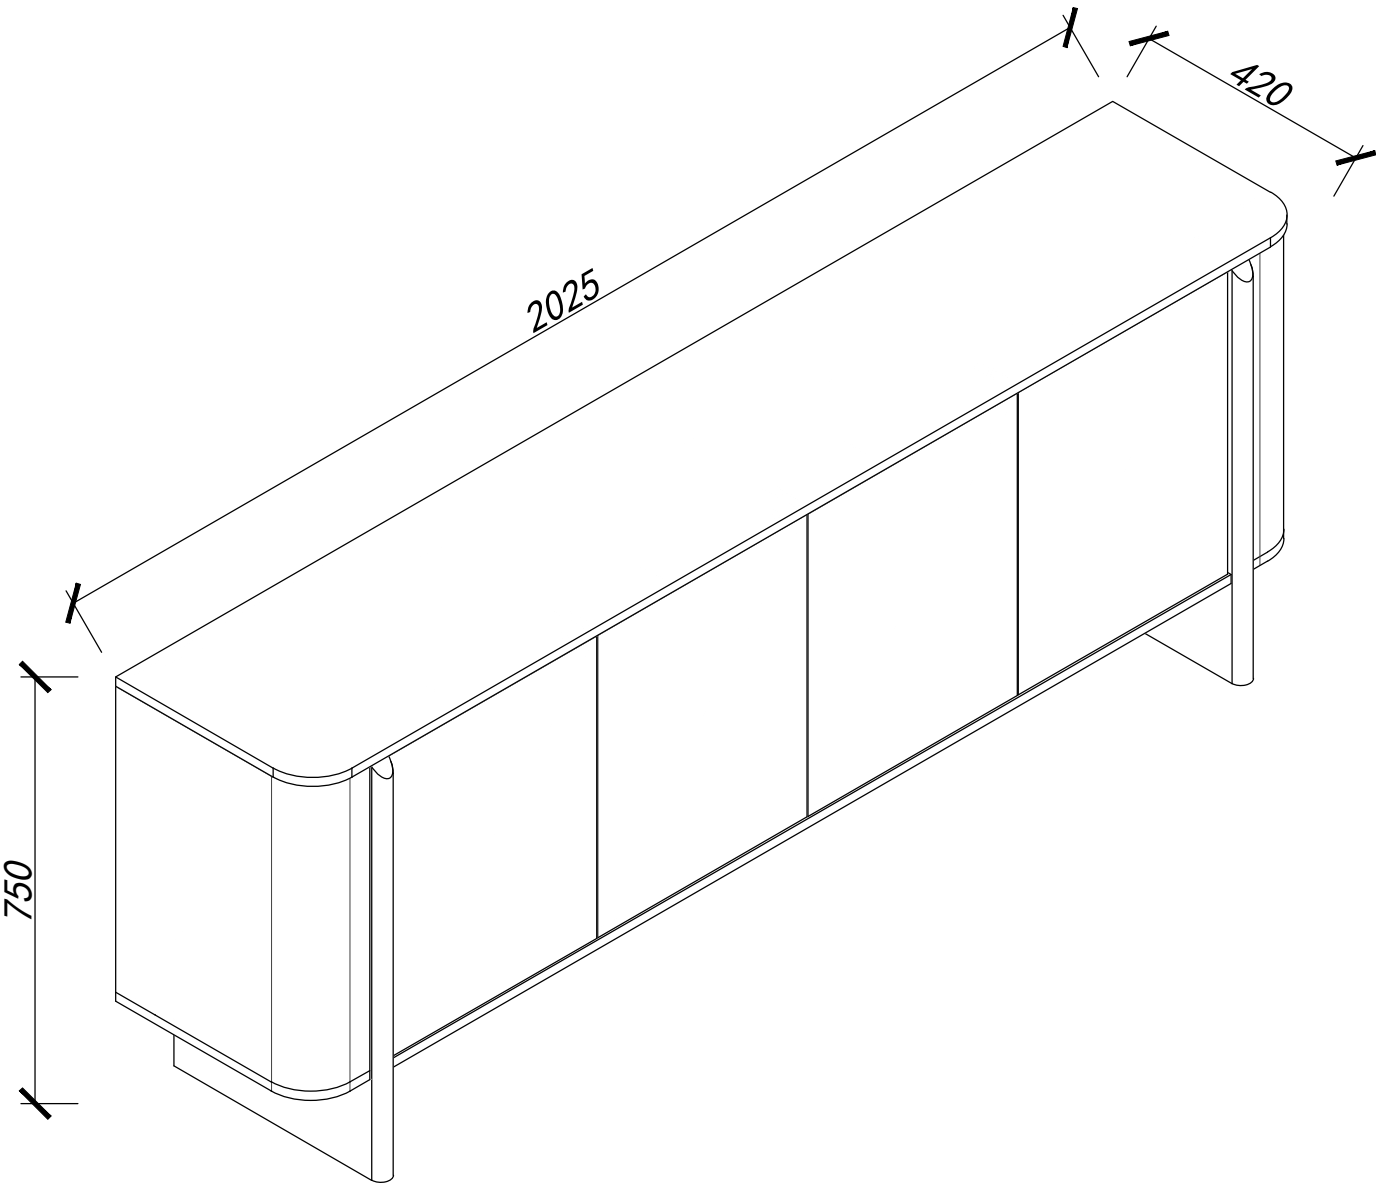
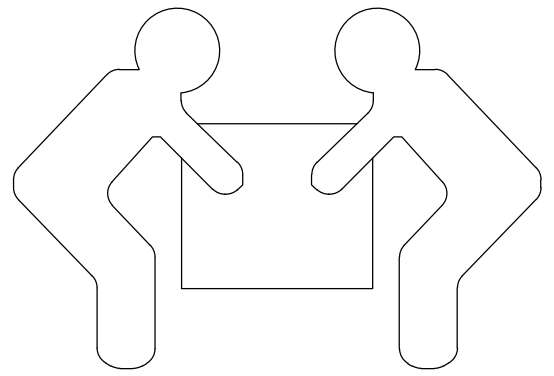








KOKETTO

Assembly Instruction

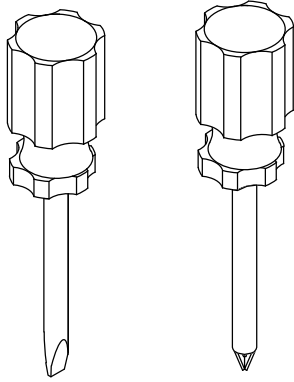

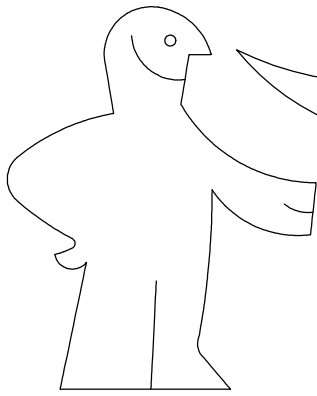


2 person recommended

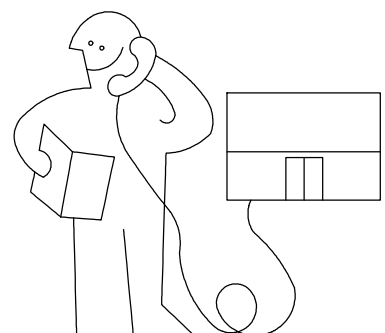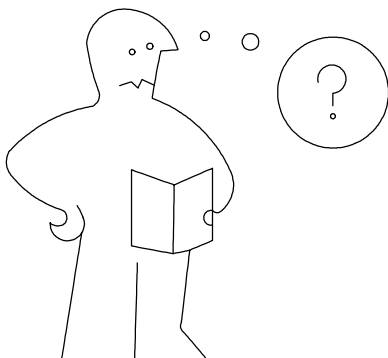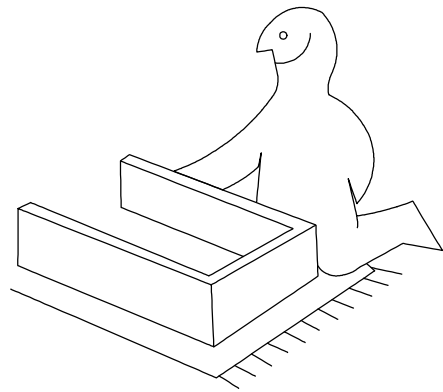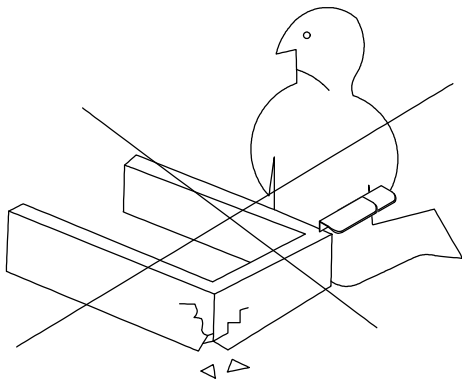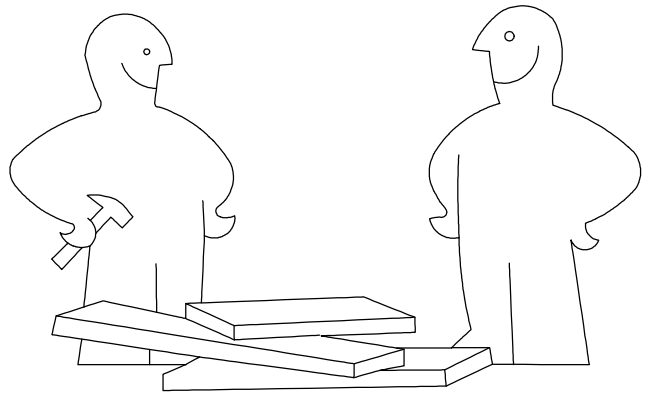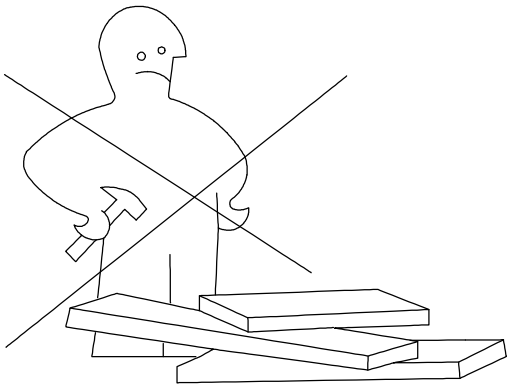

Panel No	Panel Sizes	Quantity
1	2025*400*16	1
2	1711*400*16	1
3	554*396*120	1
4	554*396*120	1
5	538*377*16	1
6	538*377*16	1
7	538*377*16	1
8	729*420*36	1
9	729*420*36	1

Panel No	Panel Sizes	Quantity
10	418*350*16	2
11	409*350*16	2
12	1711*60*18	1
13	1711*100*18	1
14	152*60*16	2
15	548*430*5	2
16	548*421*5	2
17	532*425*16	2
18	532*425*16	2

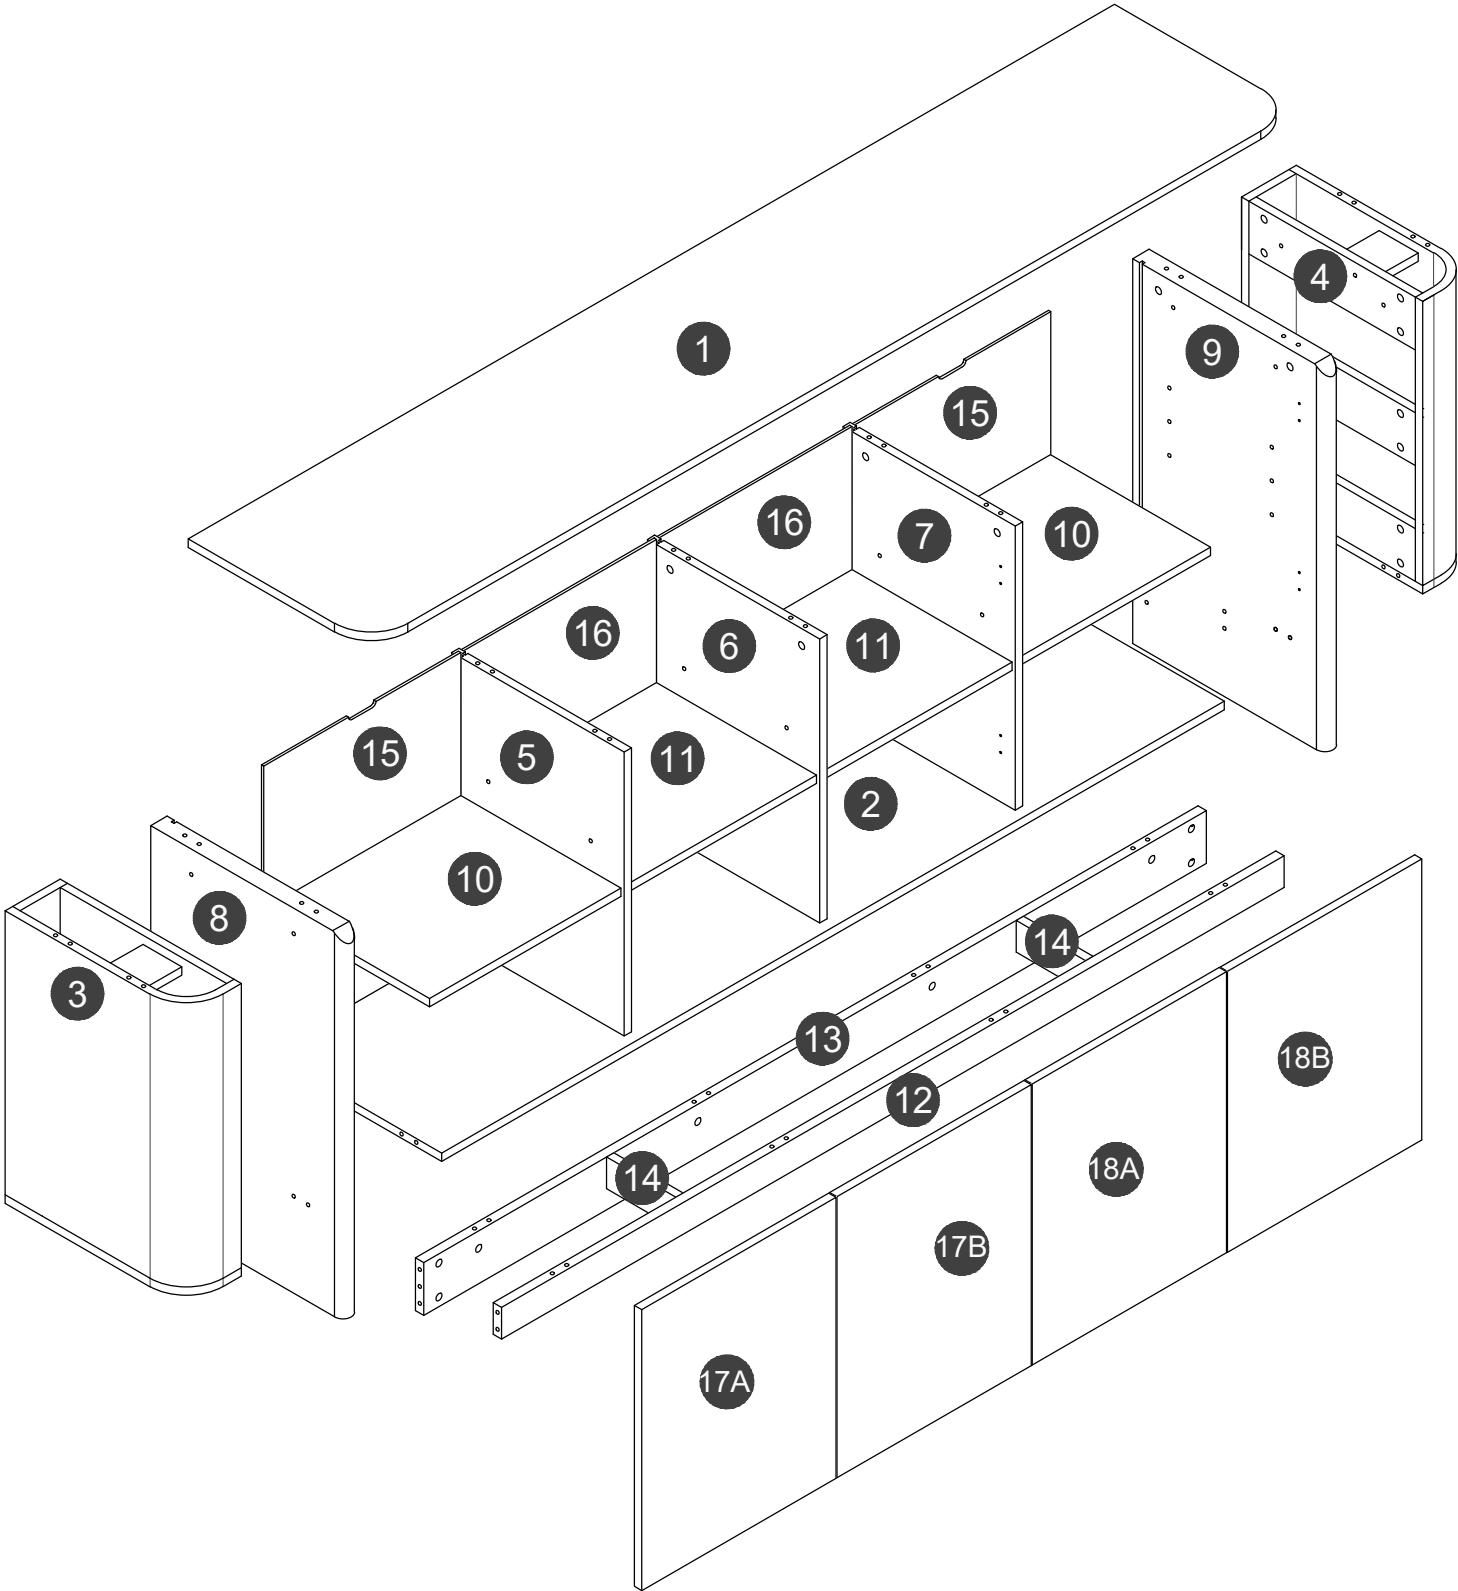


Fittings




M6*40

A1=36




Φ8*40

A2=4



Φ8*30

B=44

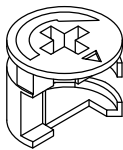

Φ15*12

C=36




Φ21

D=36




E=16

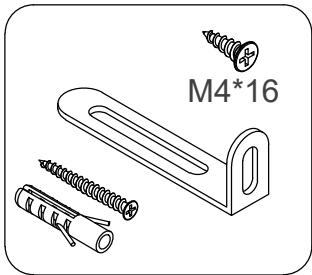


M4*16


F2=2




H =1

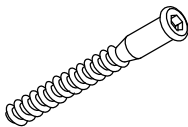

Q=10

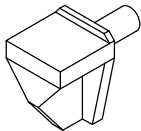


L=16

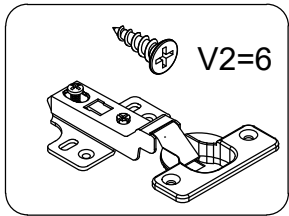


V2=6

I2=4

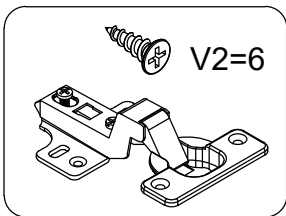


V2=6

I3=4

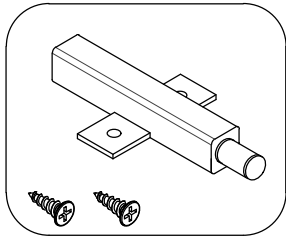


K=4


STEP 1

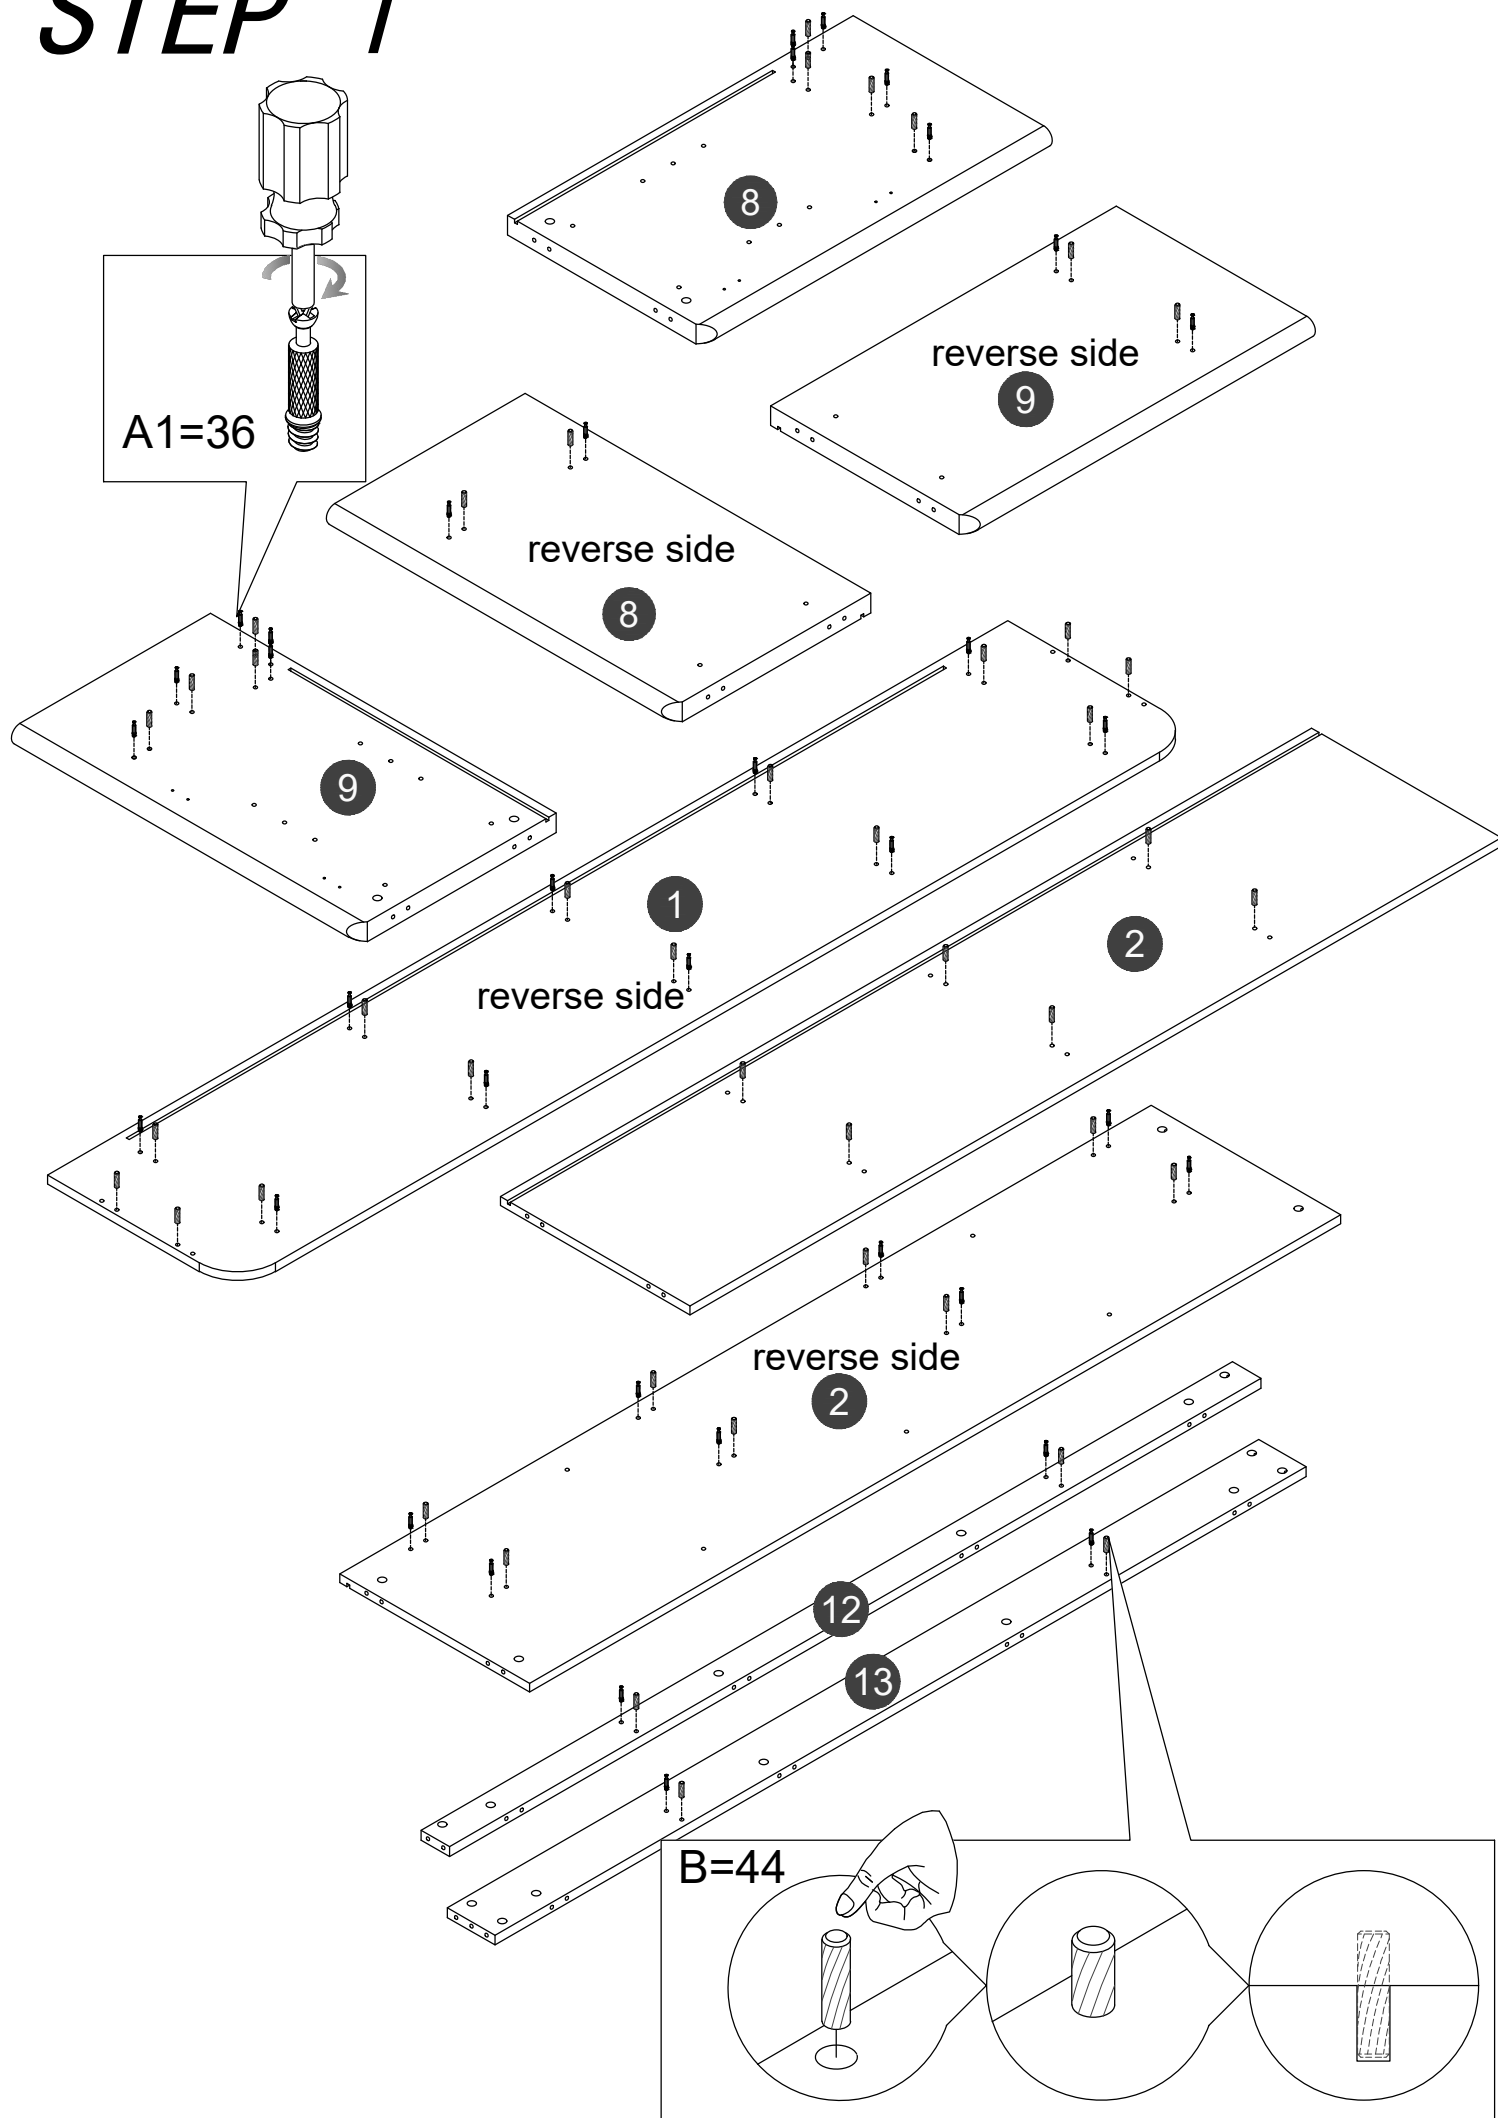


STEP 2

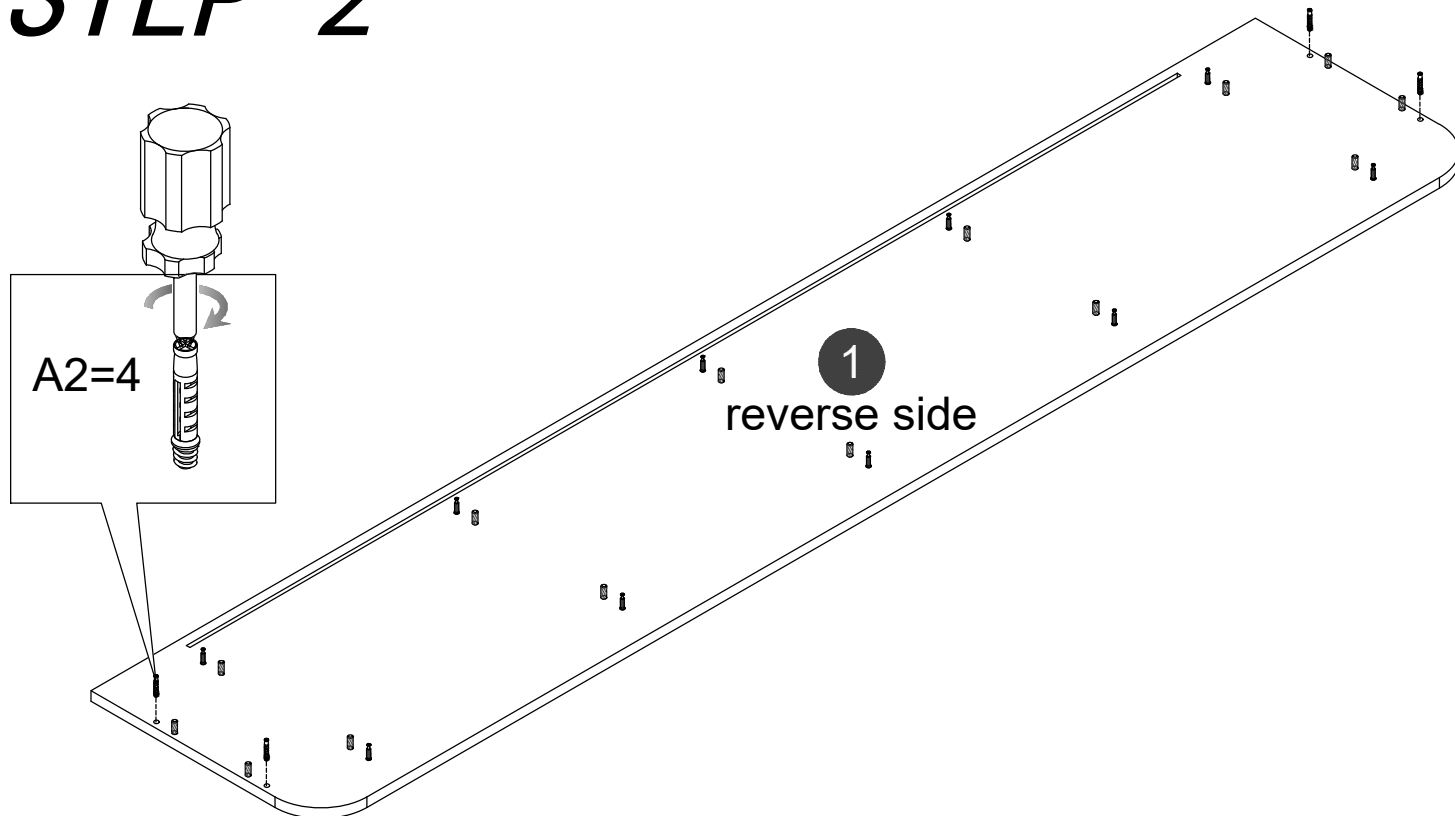


STEP 3

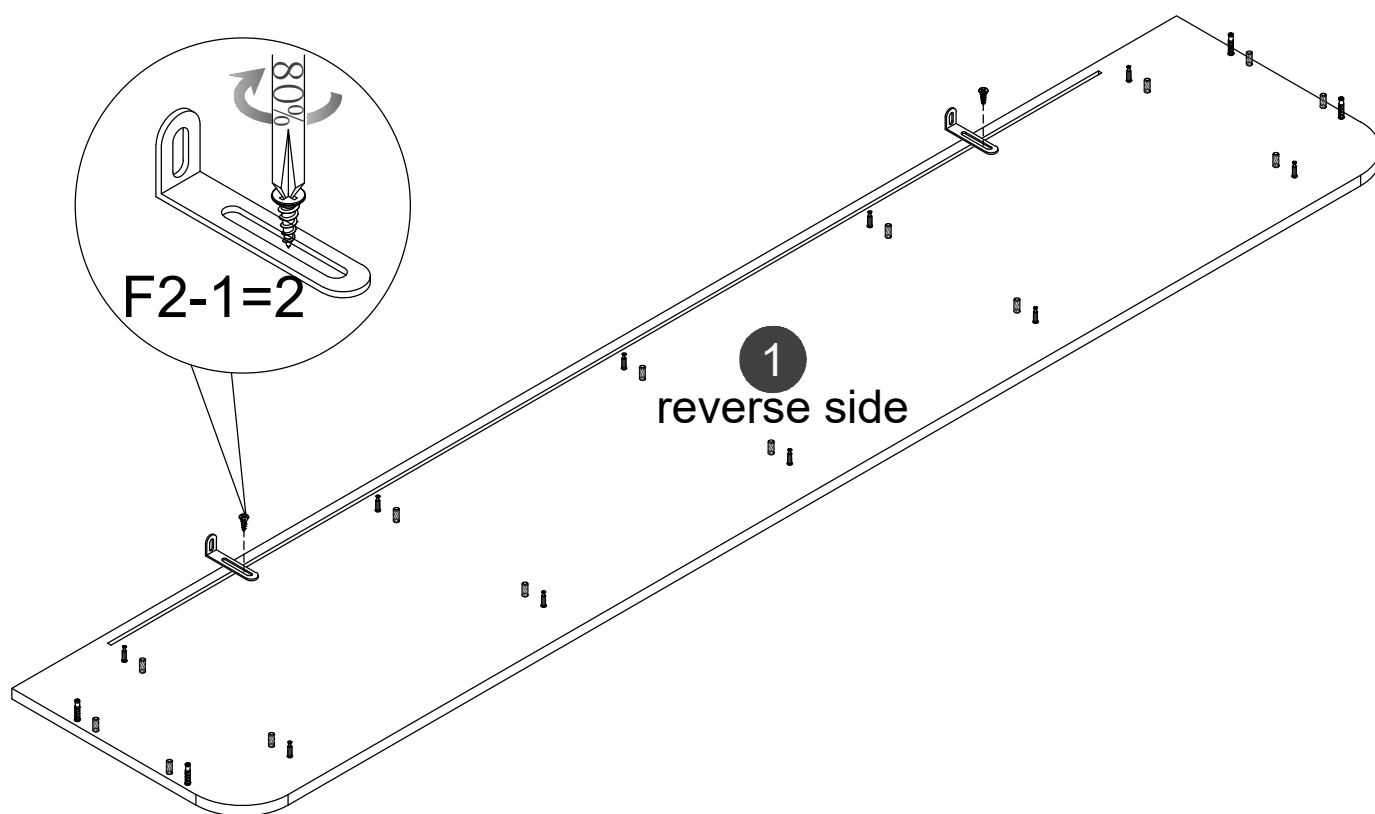


STEP 4

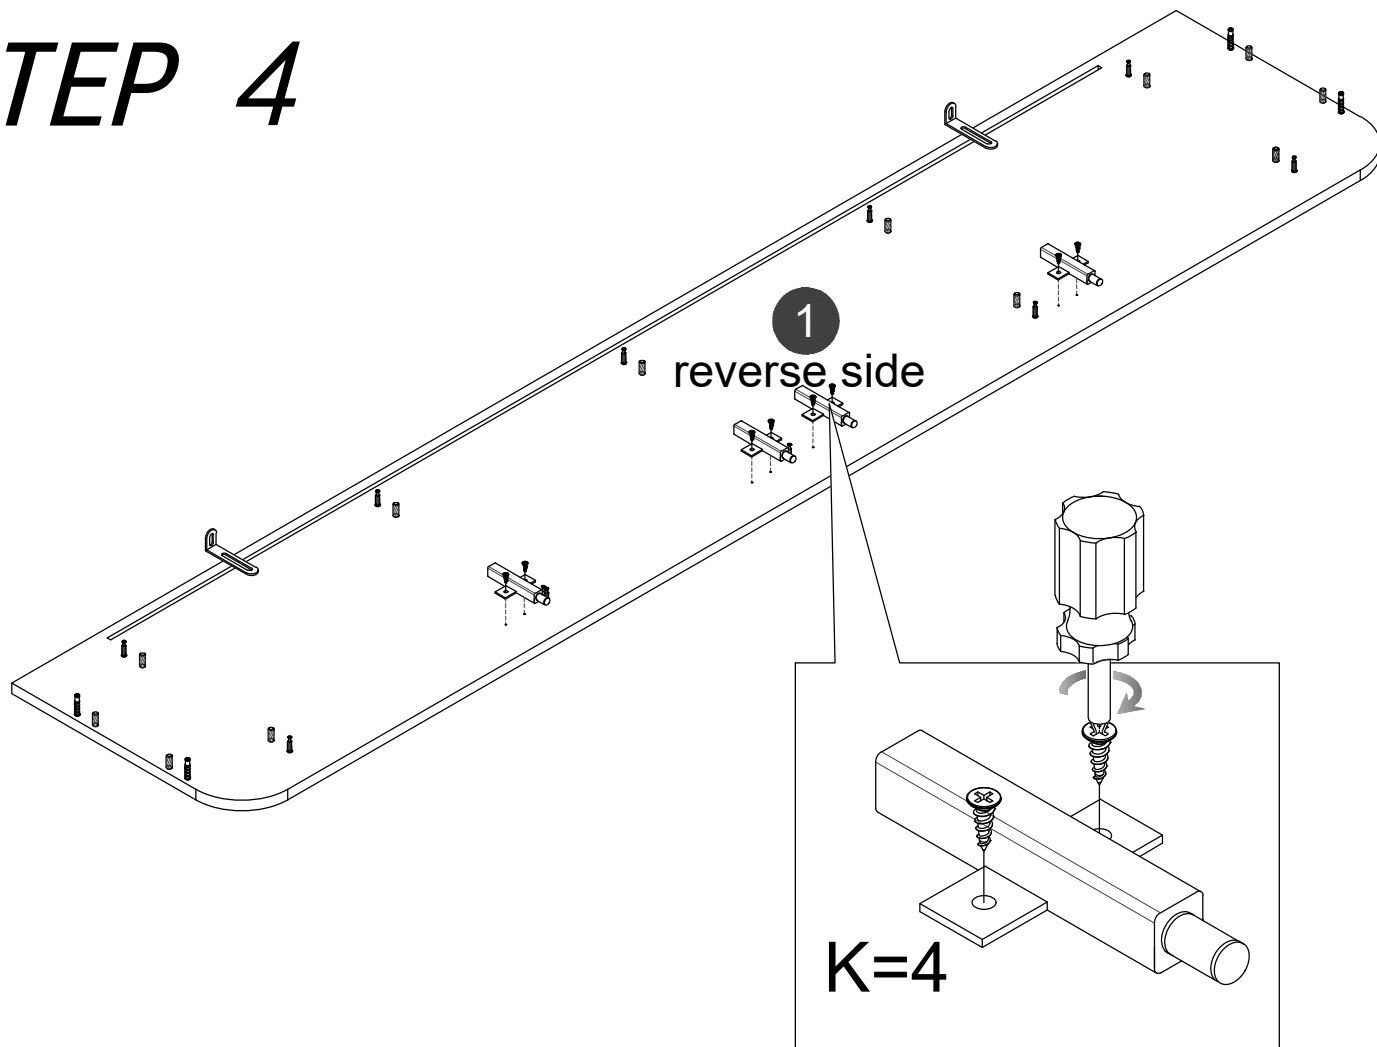


STEP 5

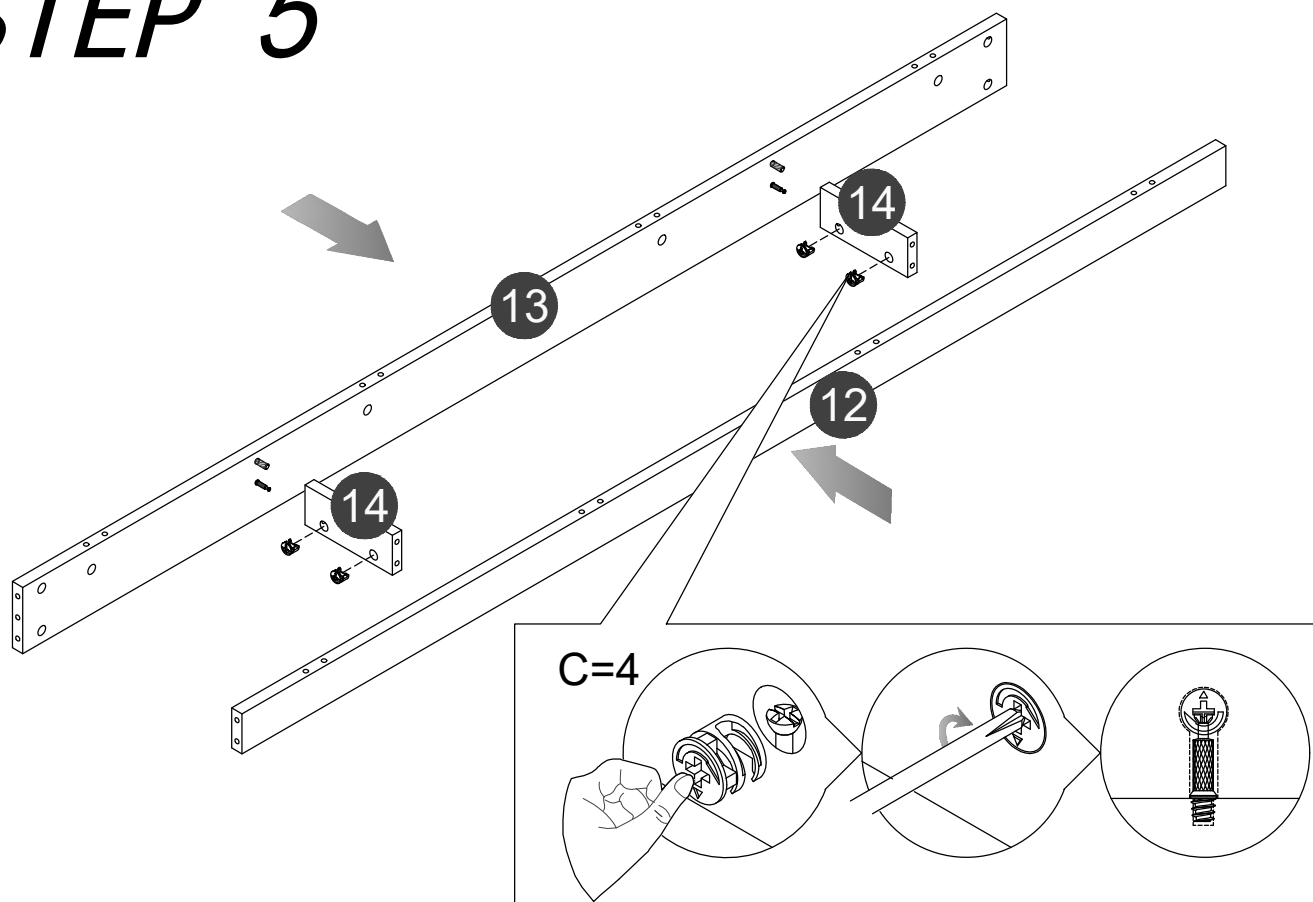


STEP 6

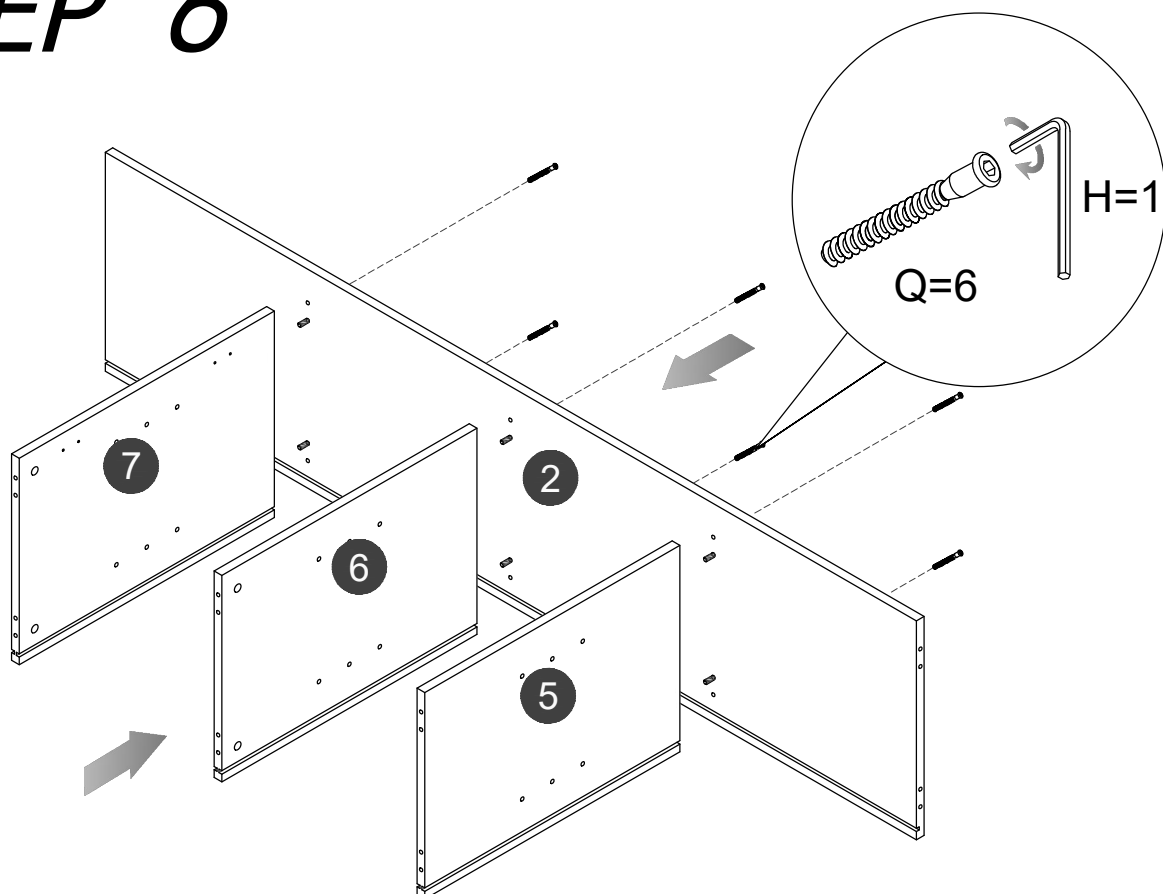


STEP 7

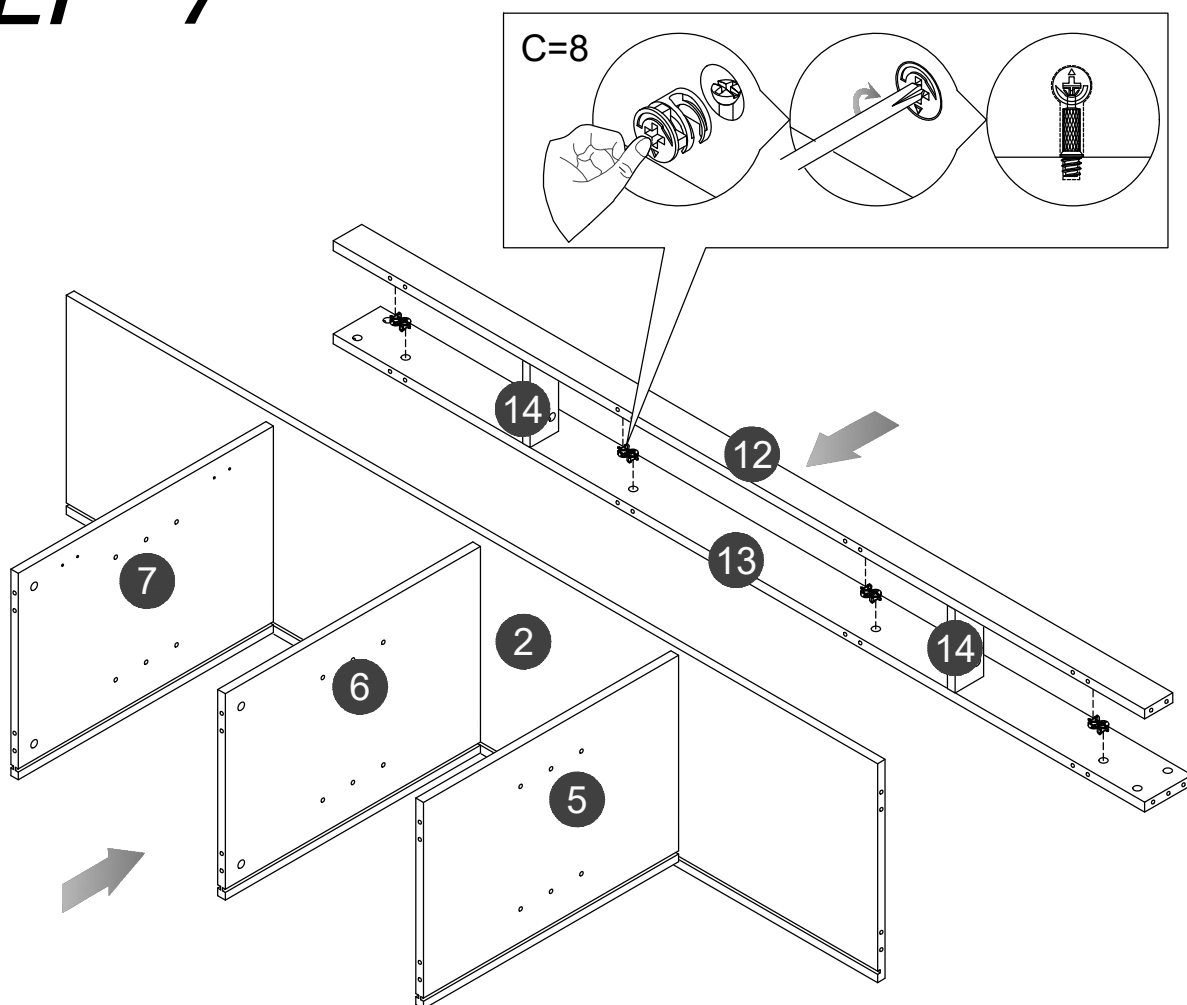


STEP 8

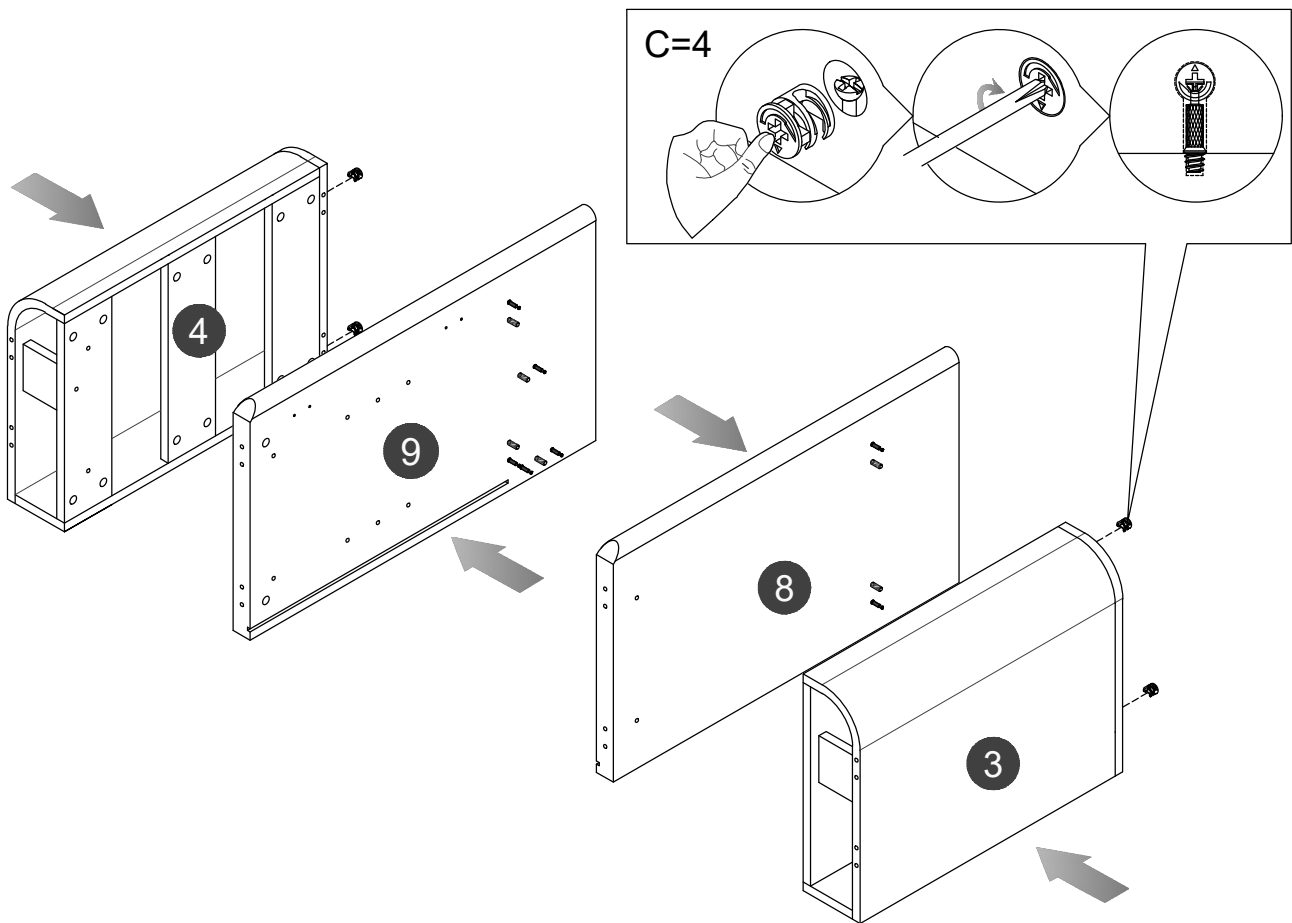


STEP 9

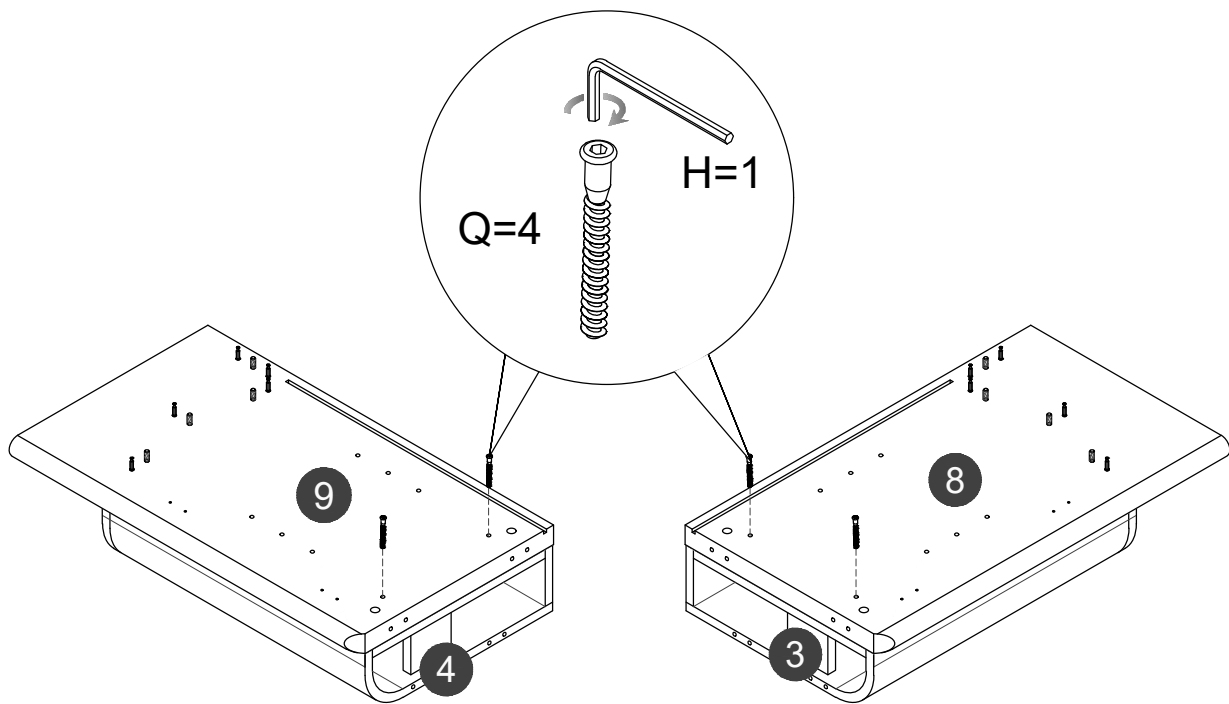


STEP 10

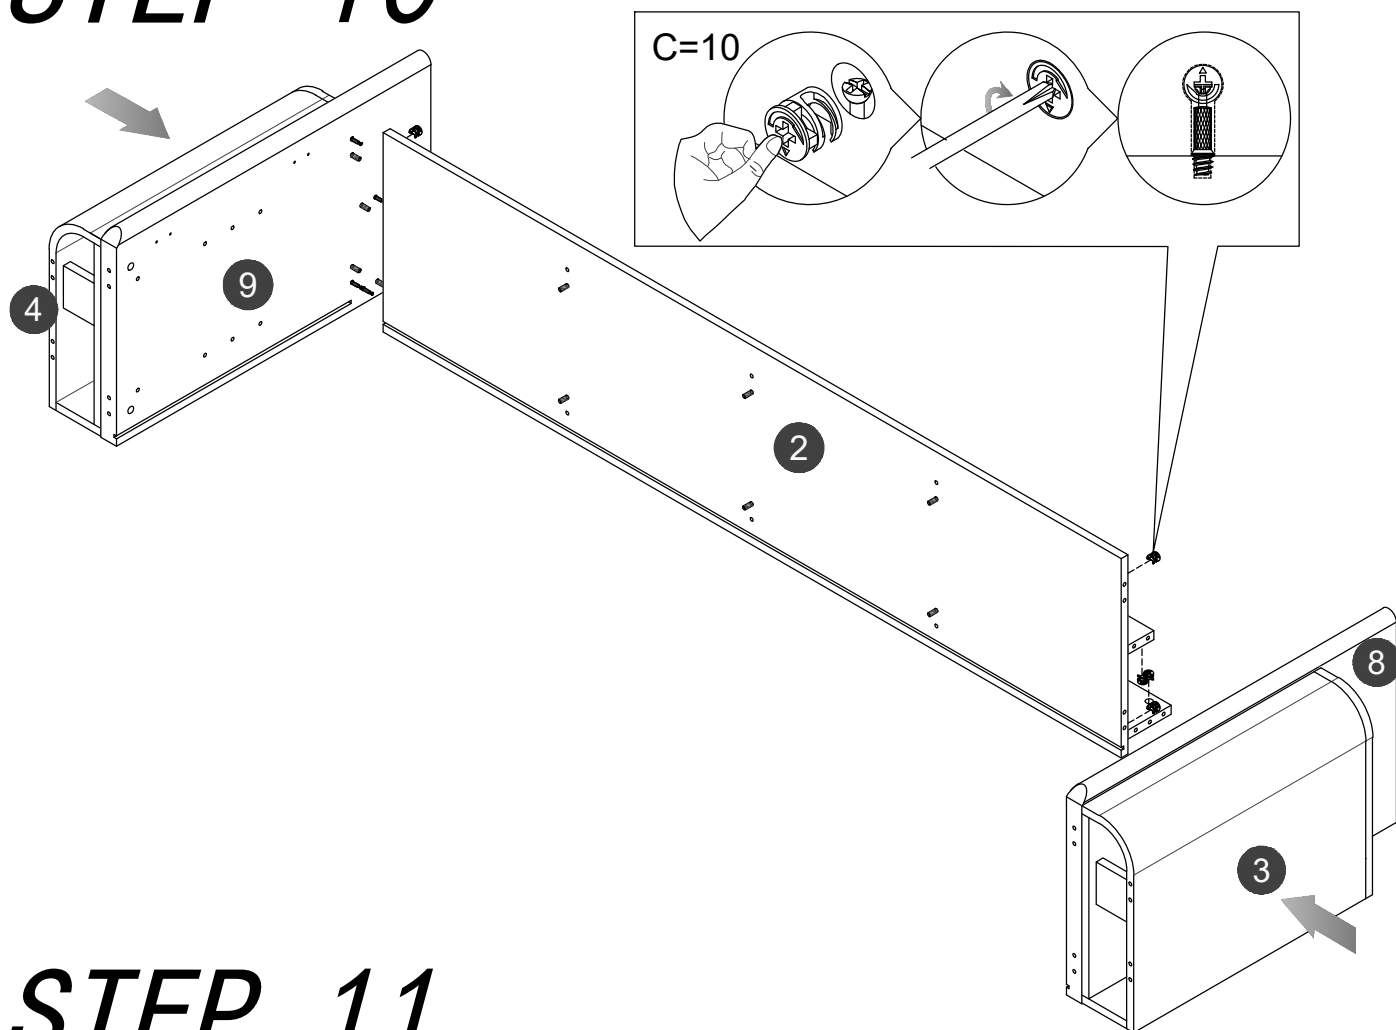


STEP 11

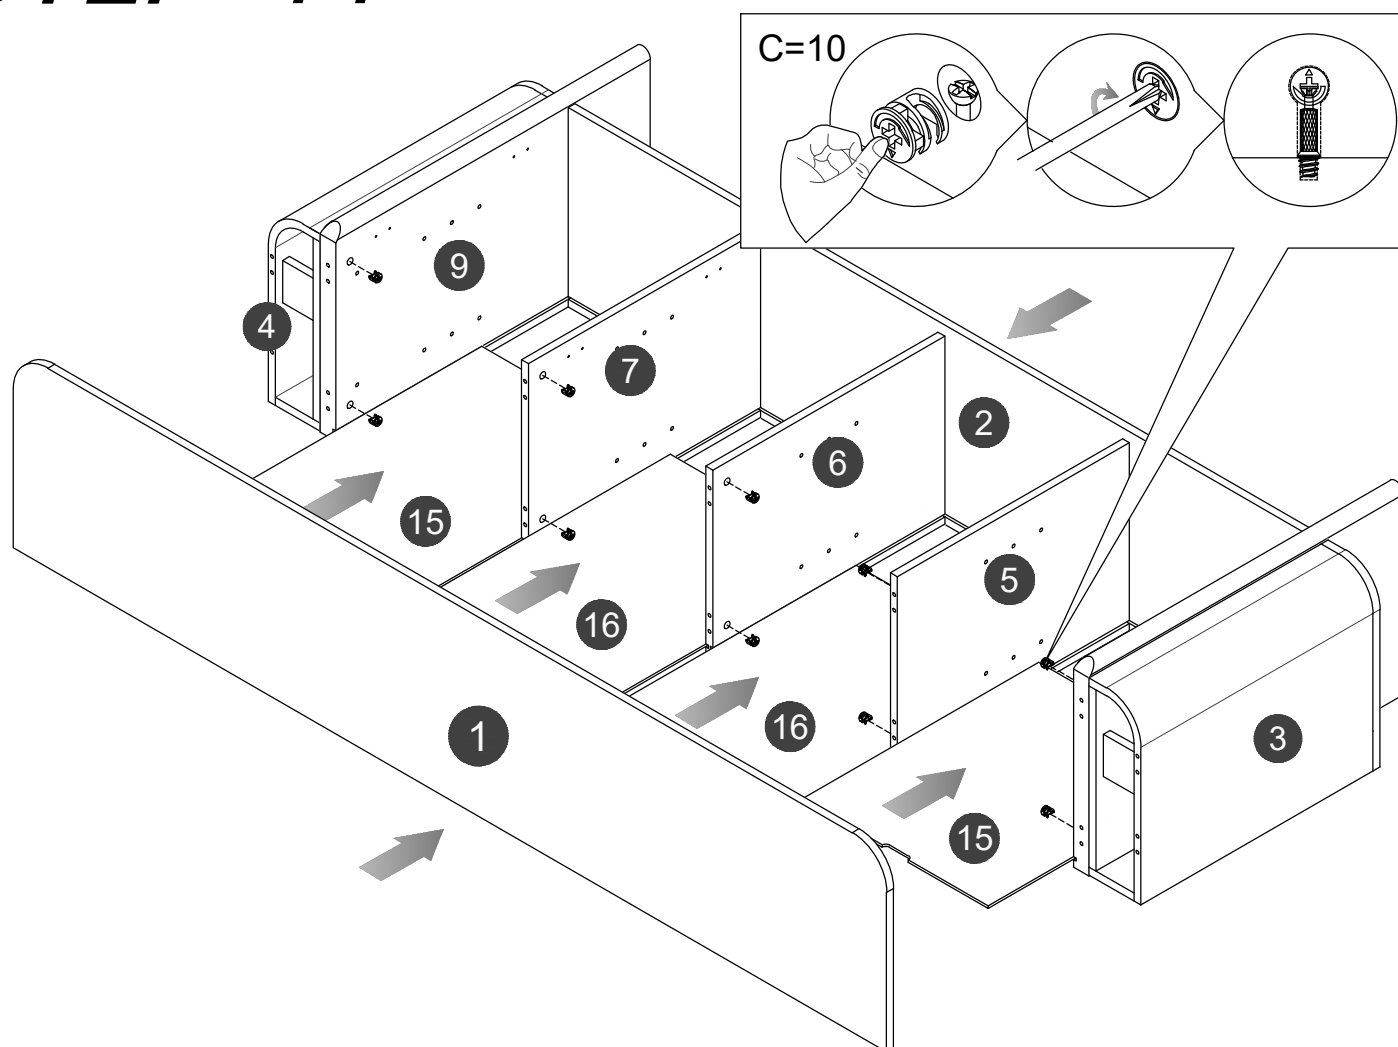


STEP 12

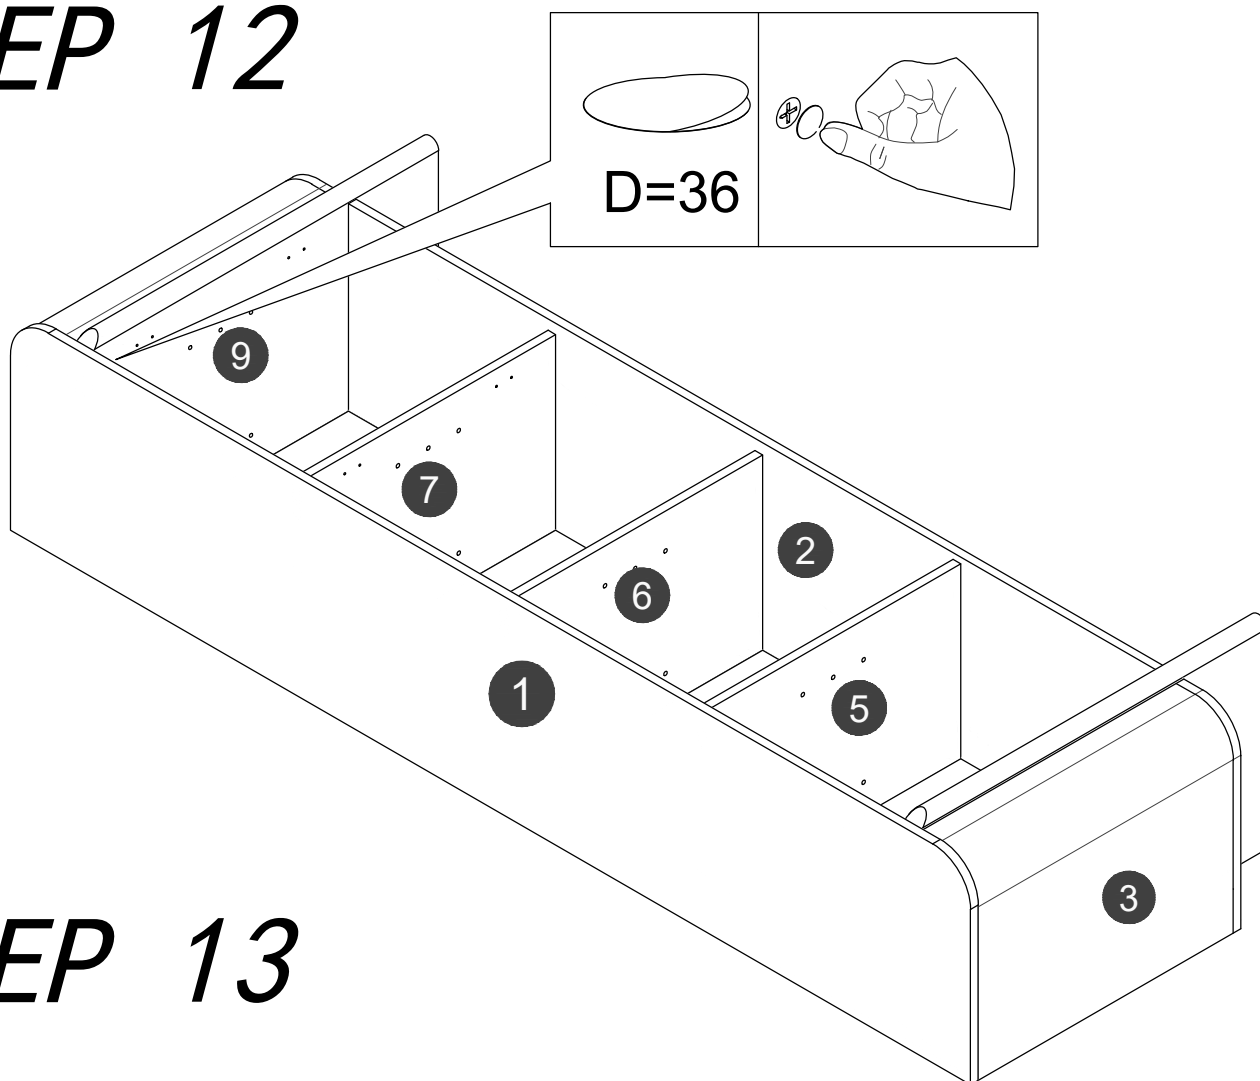


STEP 13

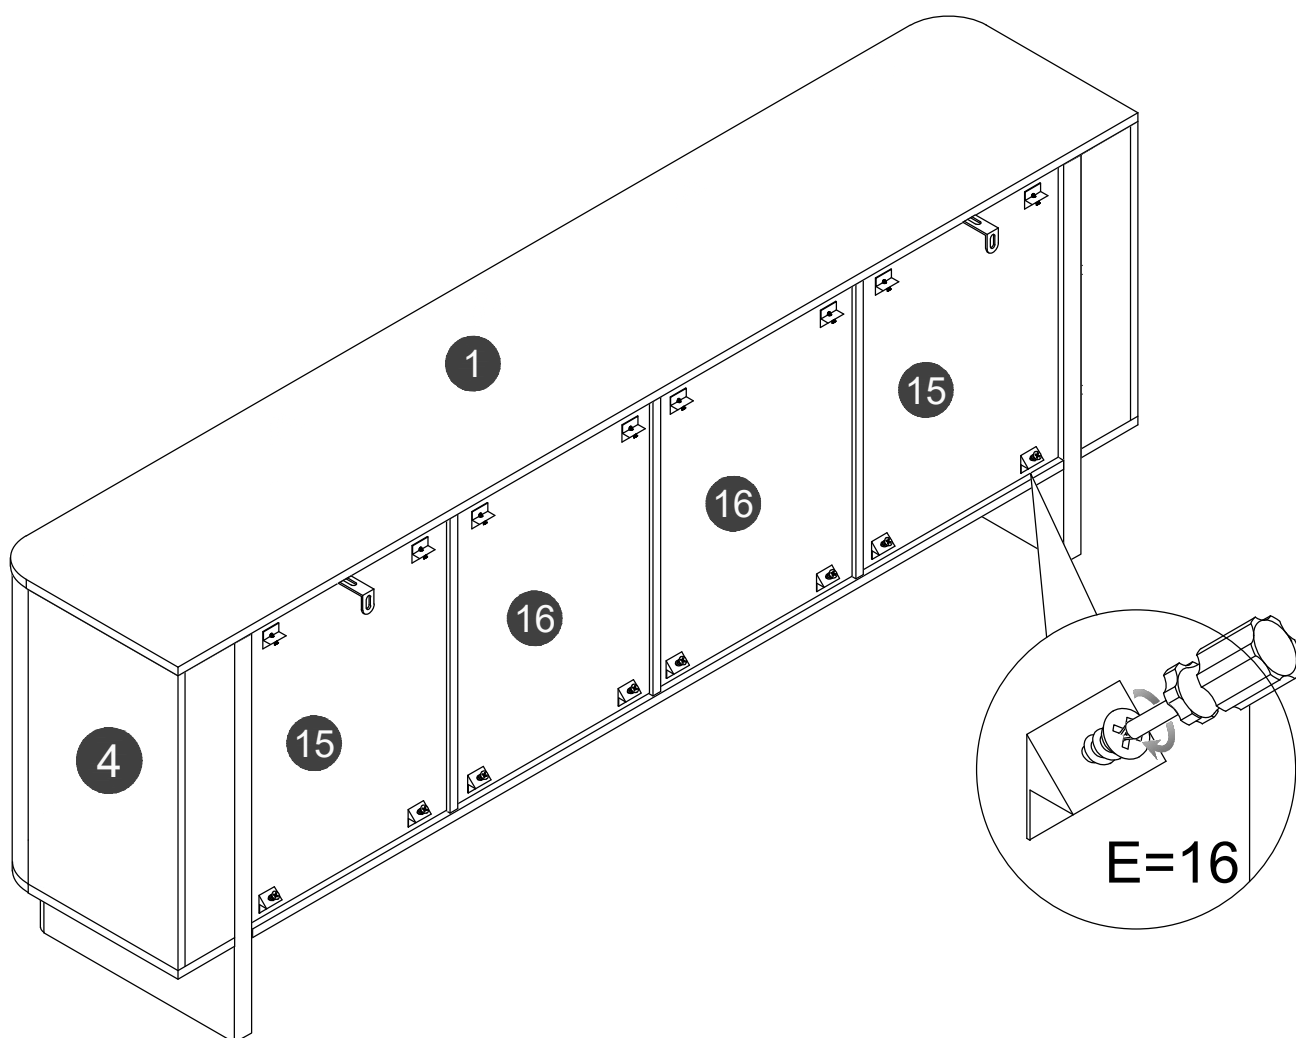




STEP 14

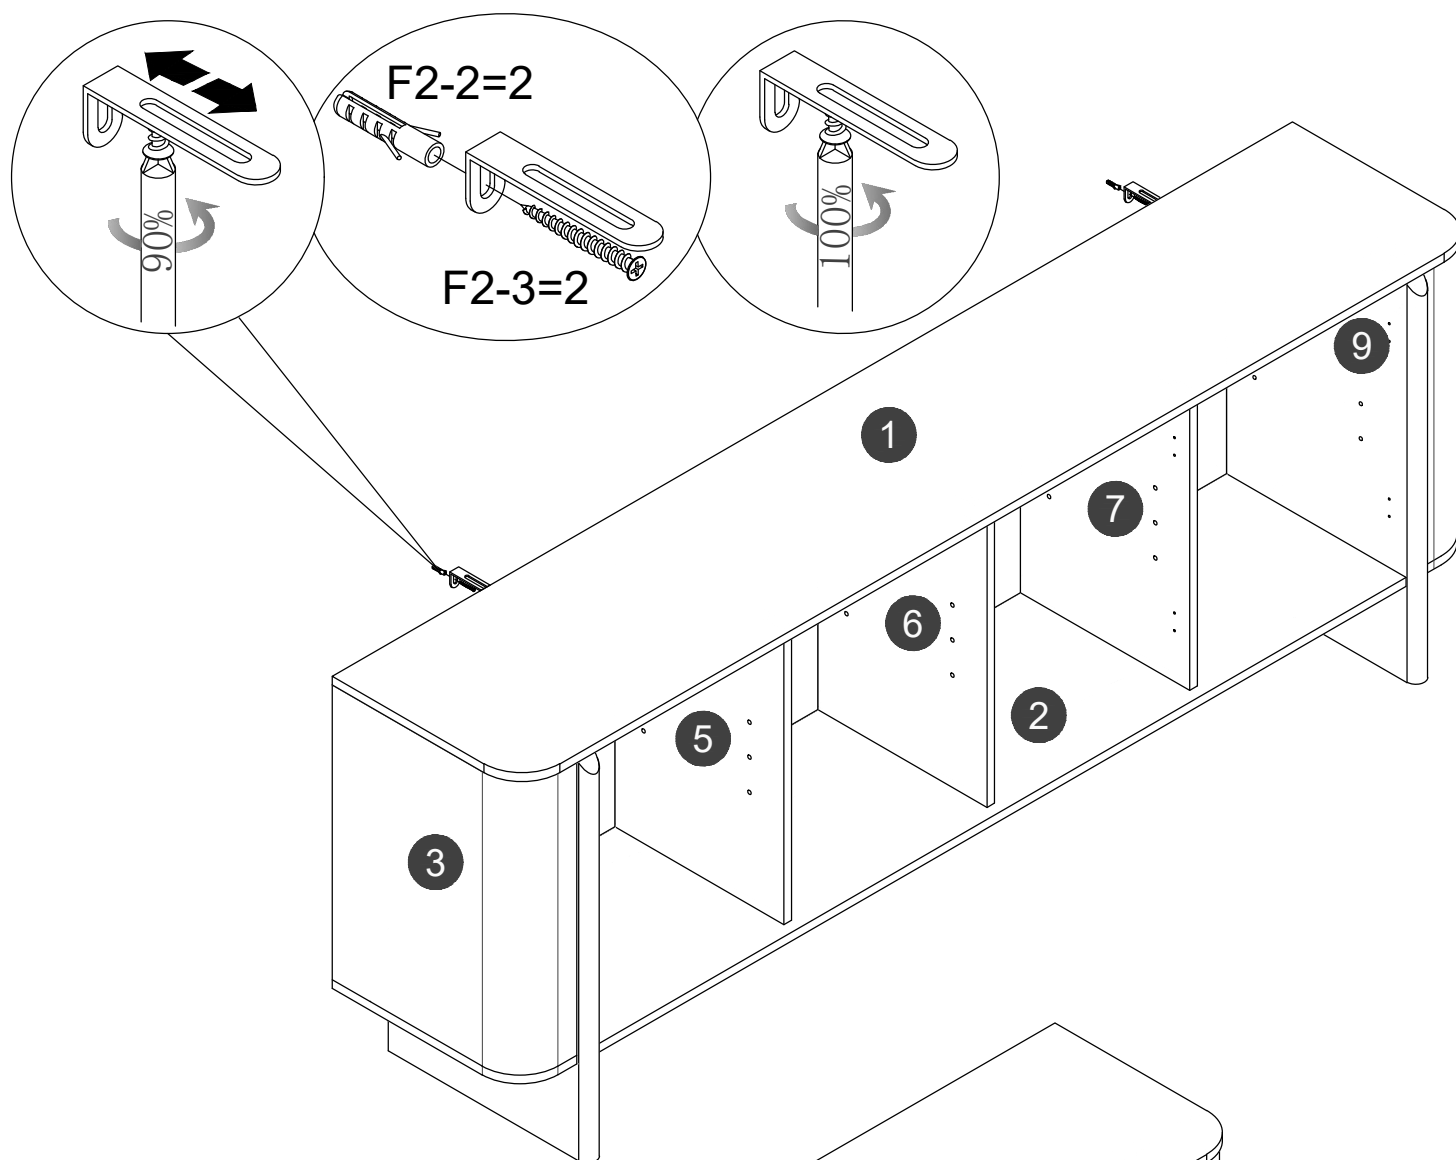


STEP 15

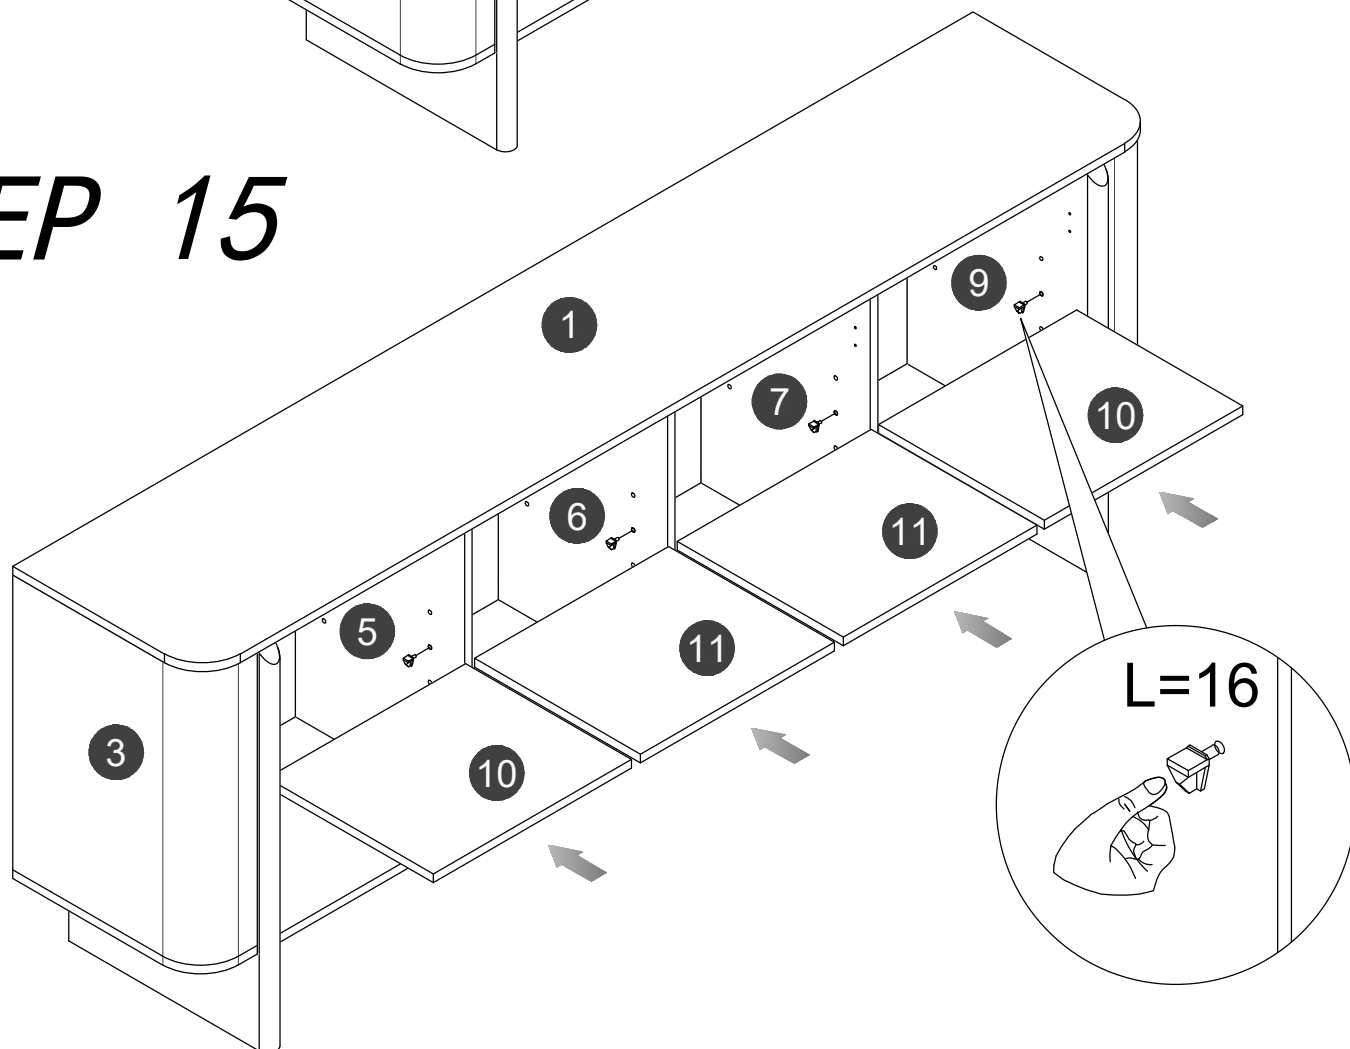





STEP 16

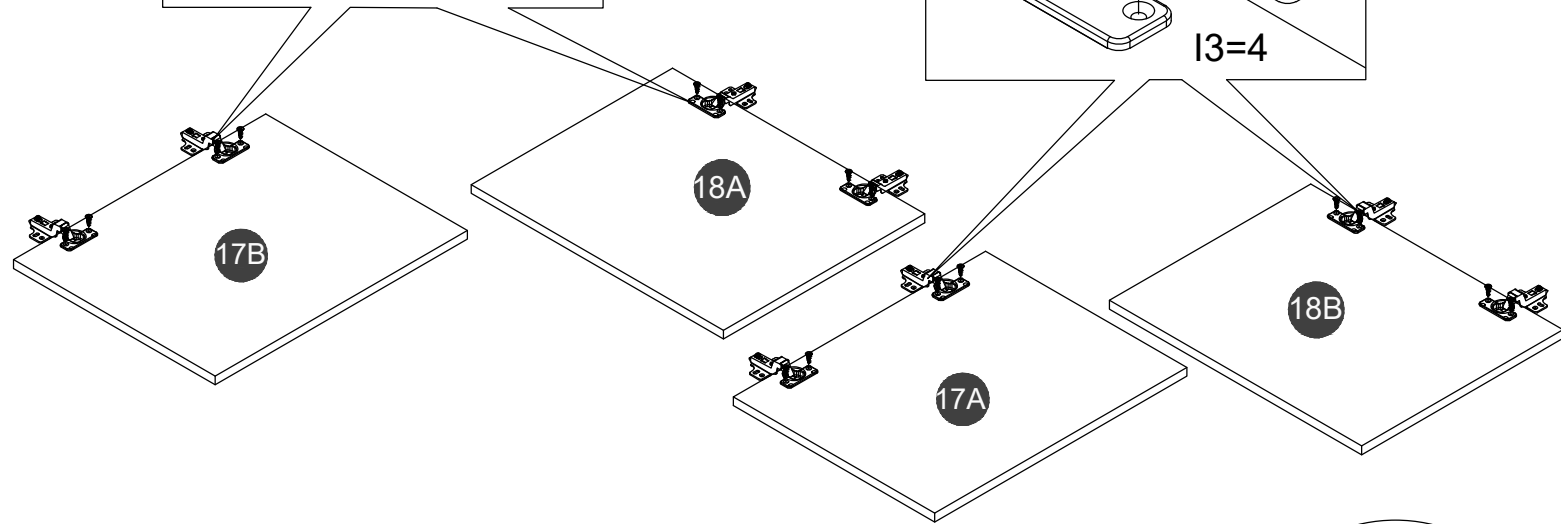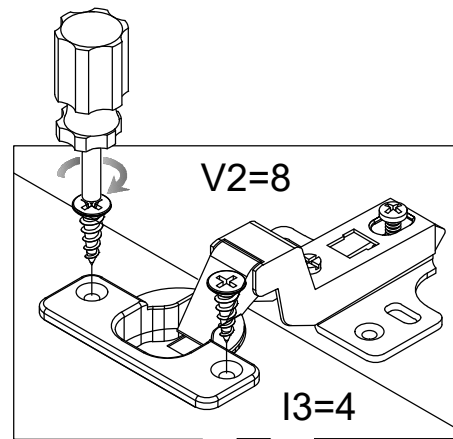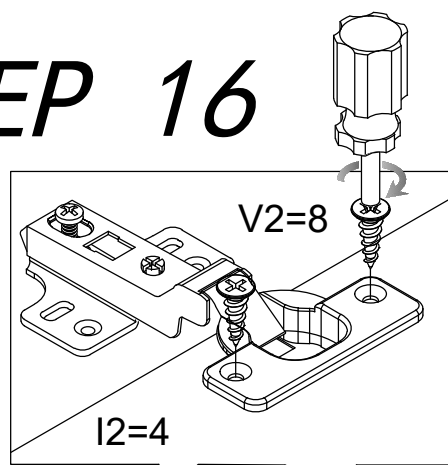

STEP 17

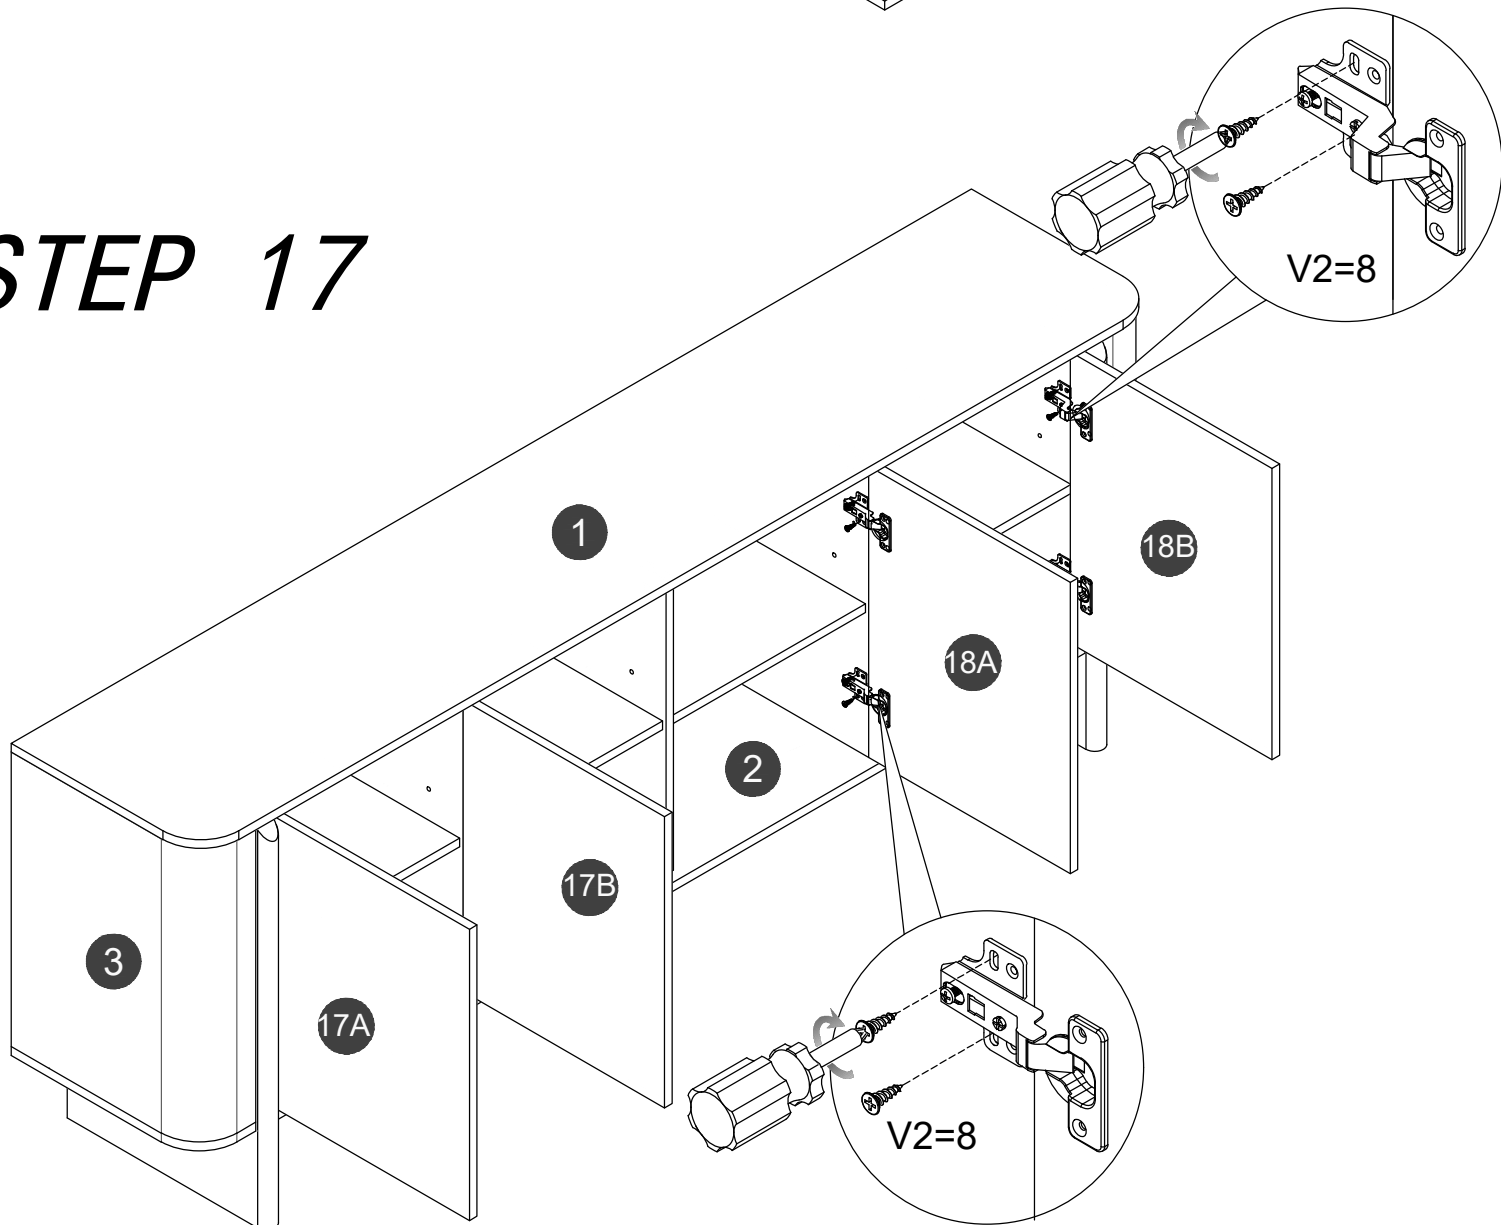


STEP 18

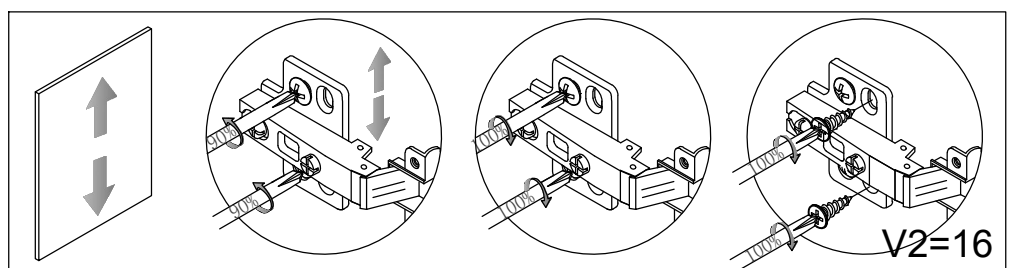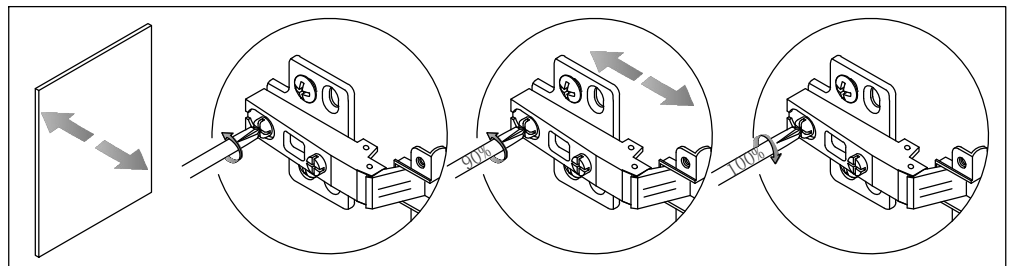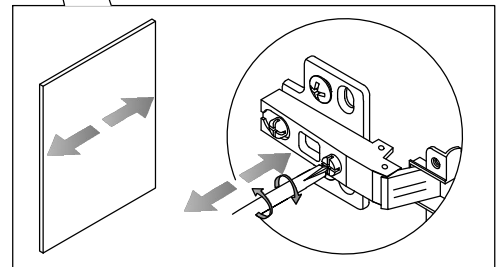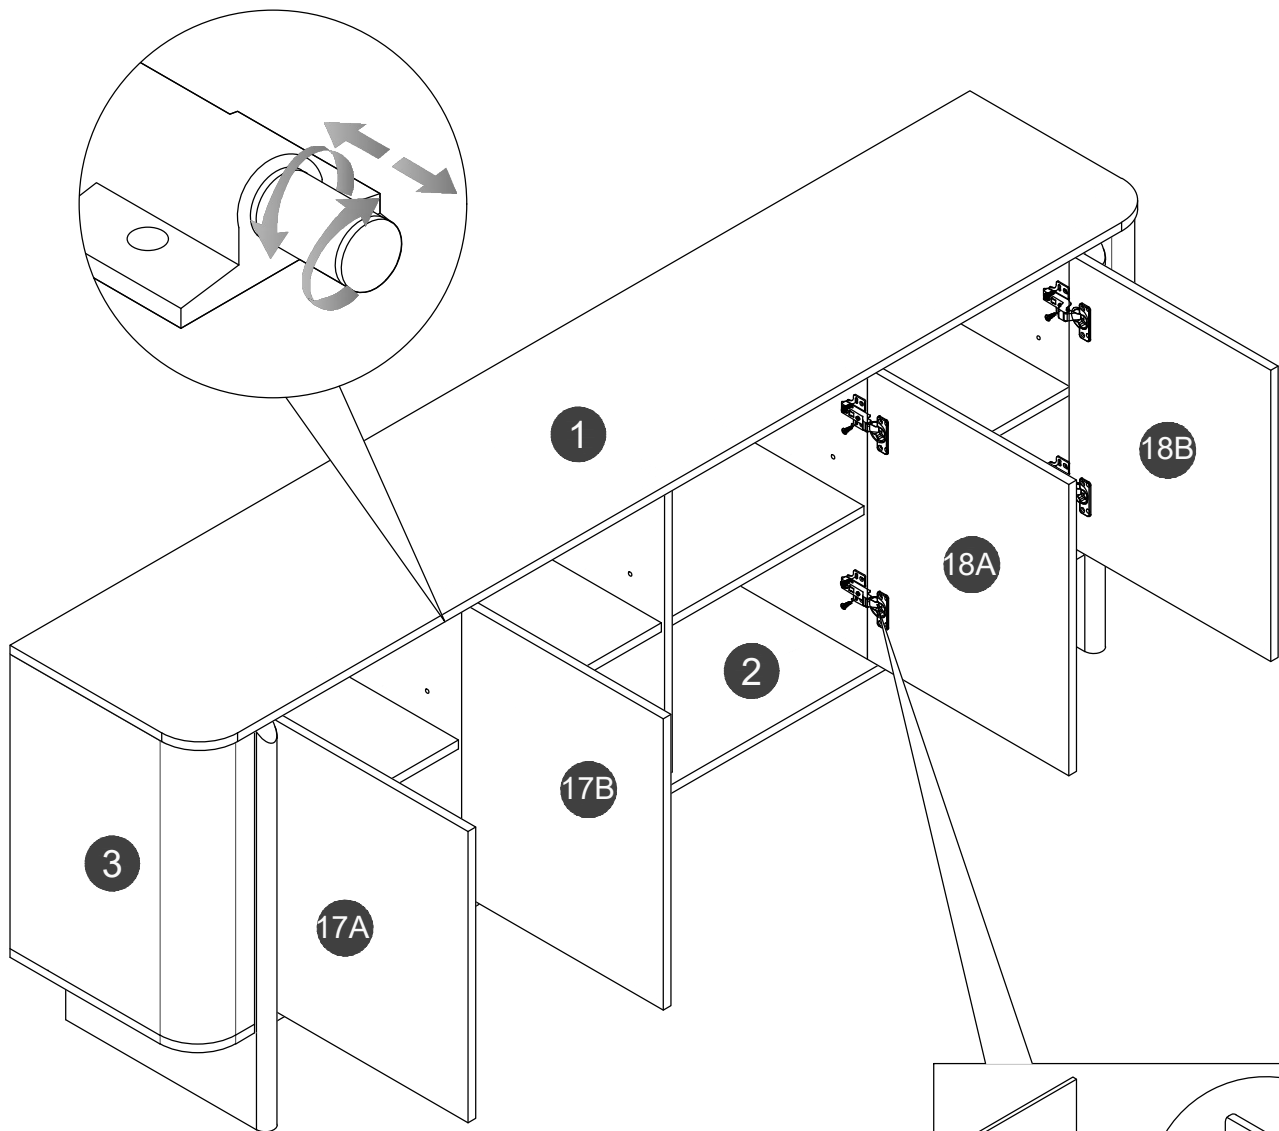

V2=16

STEP 19

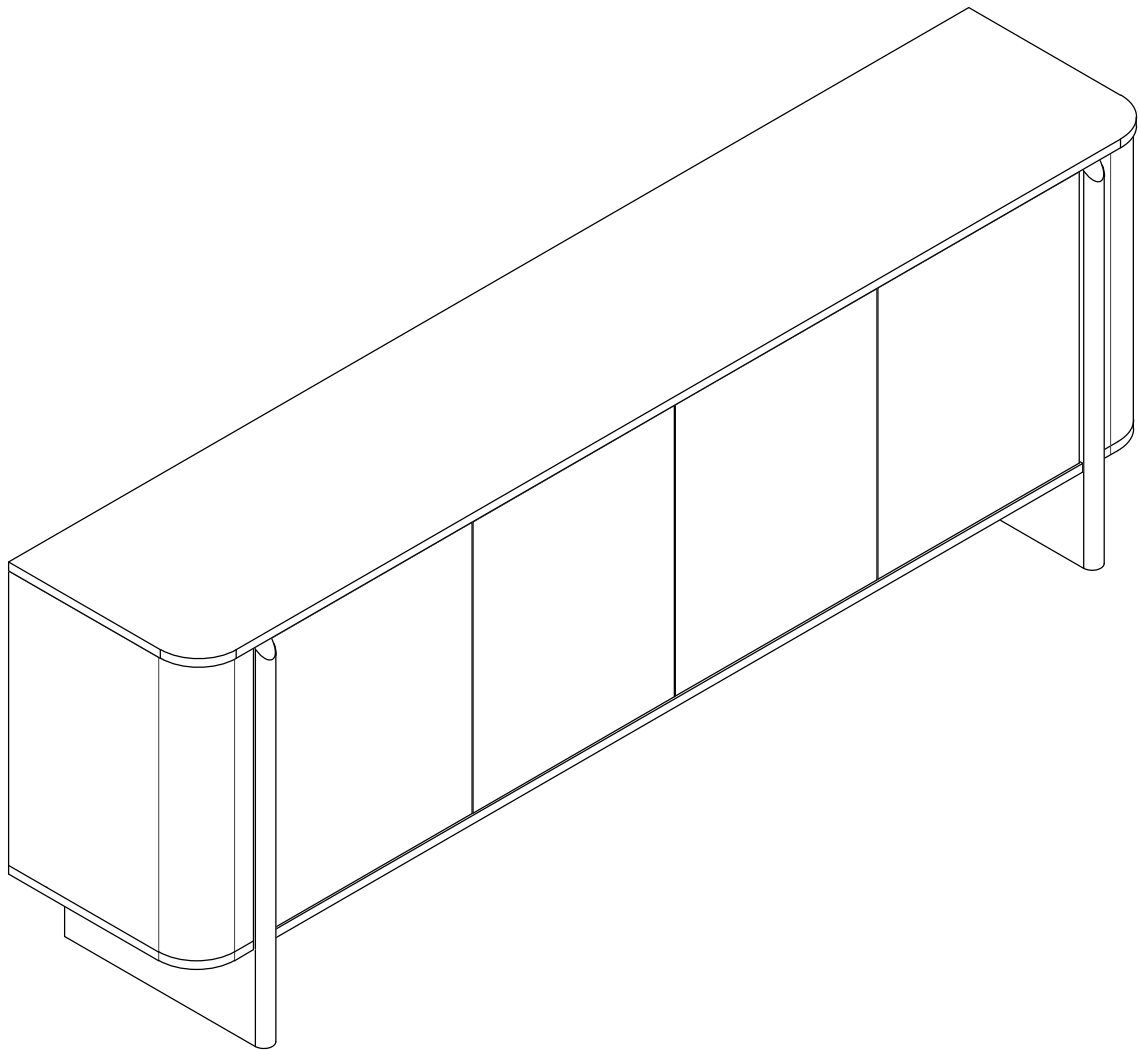

Finish