

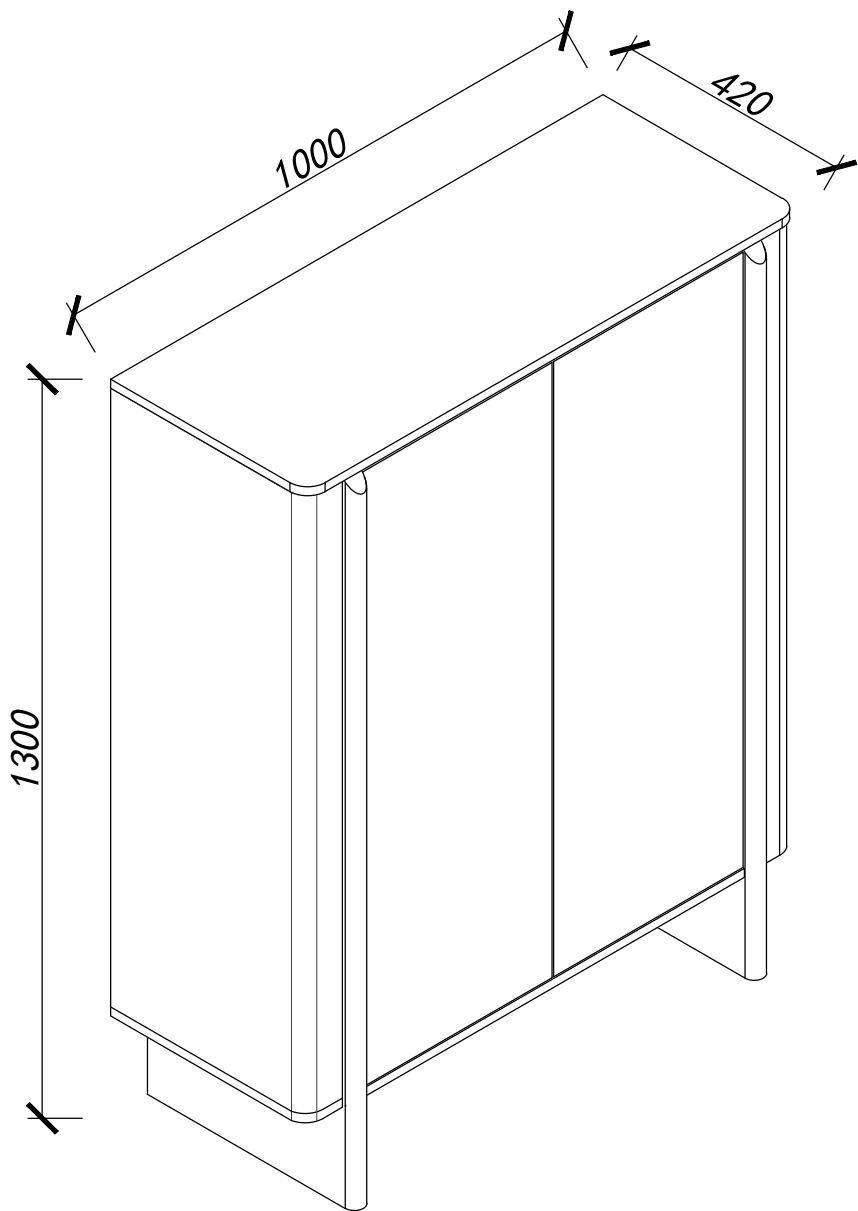
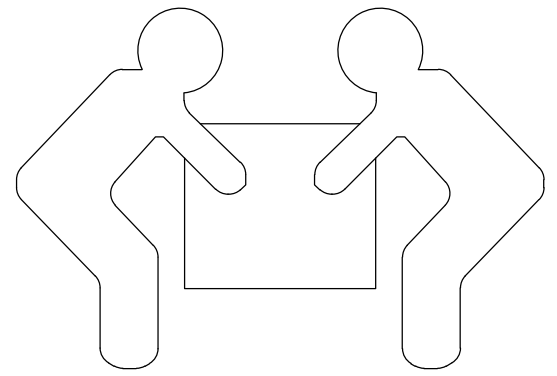








KOKETTO

Assembly Instruction

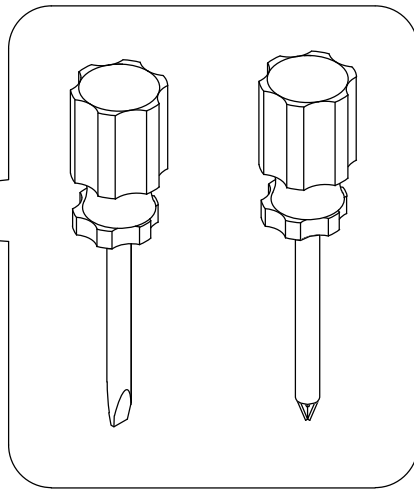

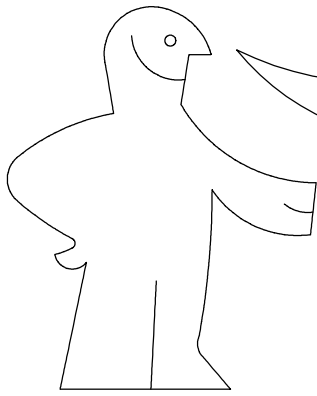


2 person recommended

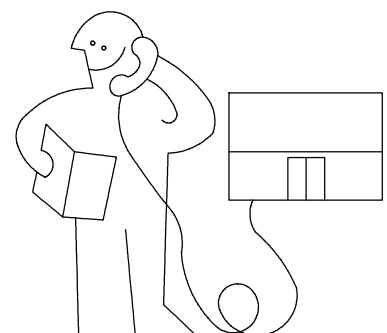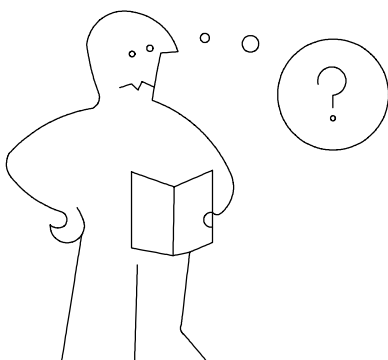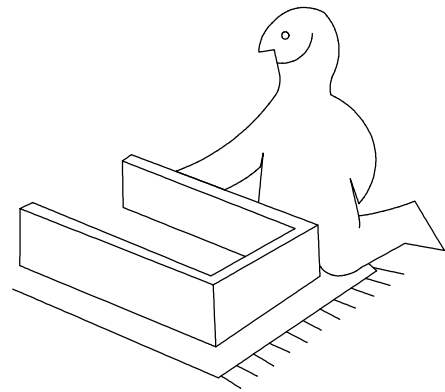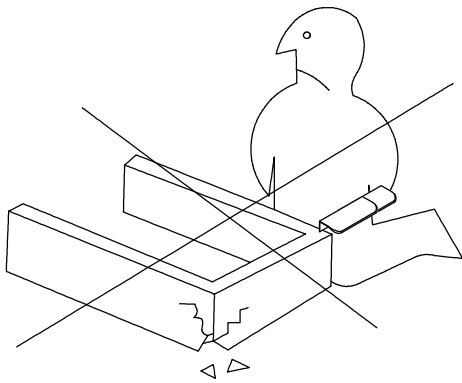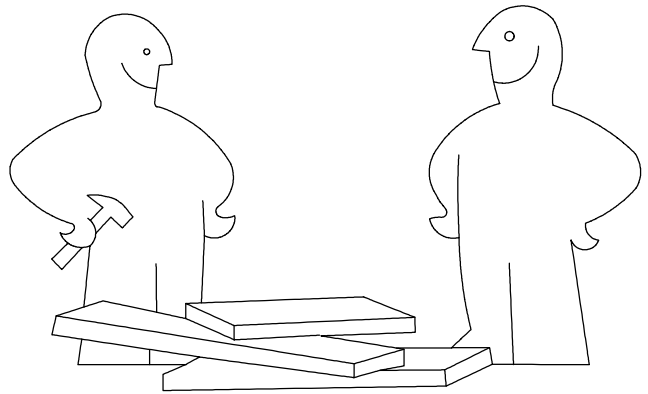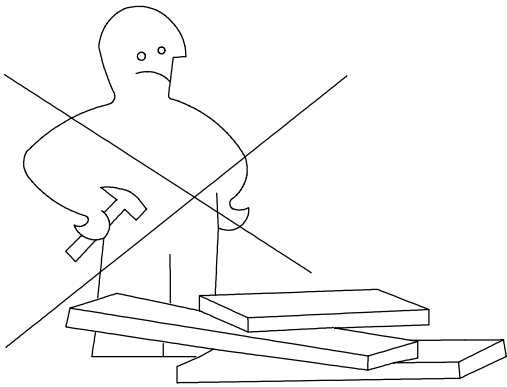

Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	777*400*16	1
3	1104*396*75	1
4	1104*396*75	1
5	1279*420*36	1
6	1279*420*36	1
7	774*350*16	2

Panel No	Panel Sizes	Quantity
8	1088*100*16	1
9	1098*348*5	2
10	1082*385*16	2
11	777*60*18	1
12	777*100*18	1
13	152*60*16	1

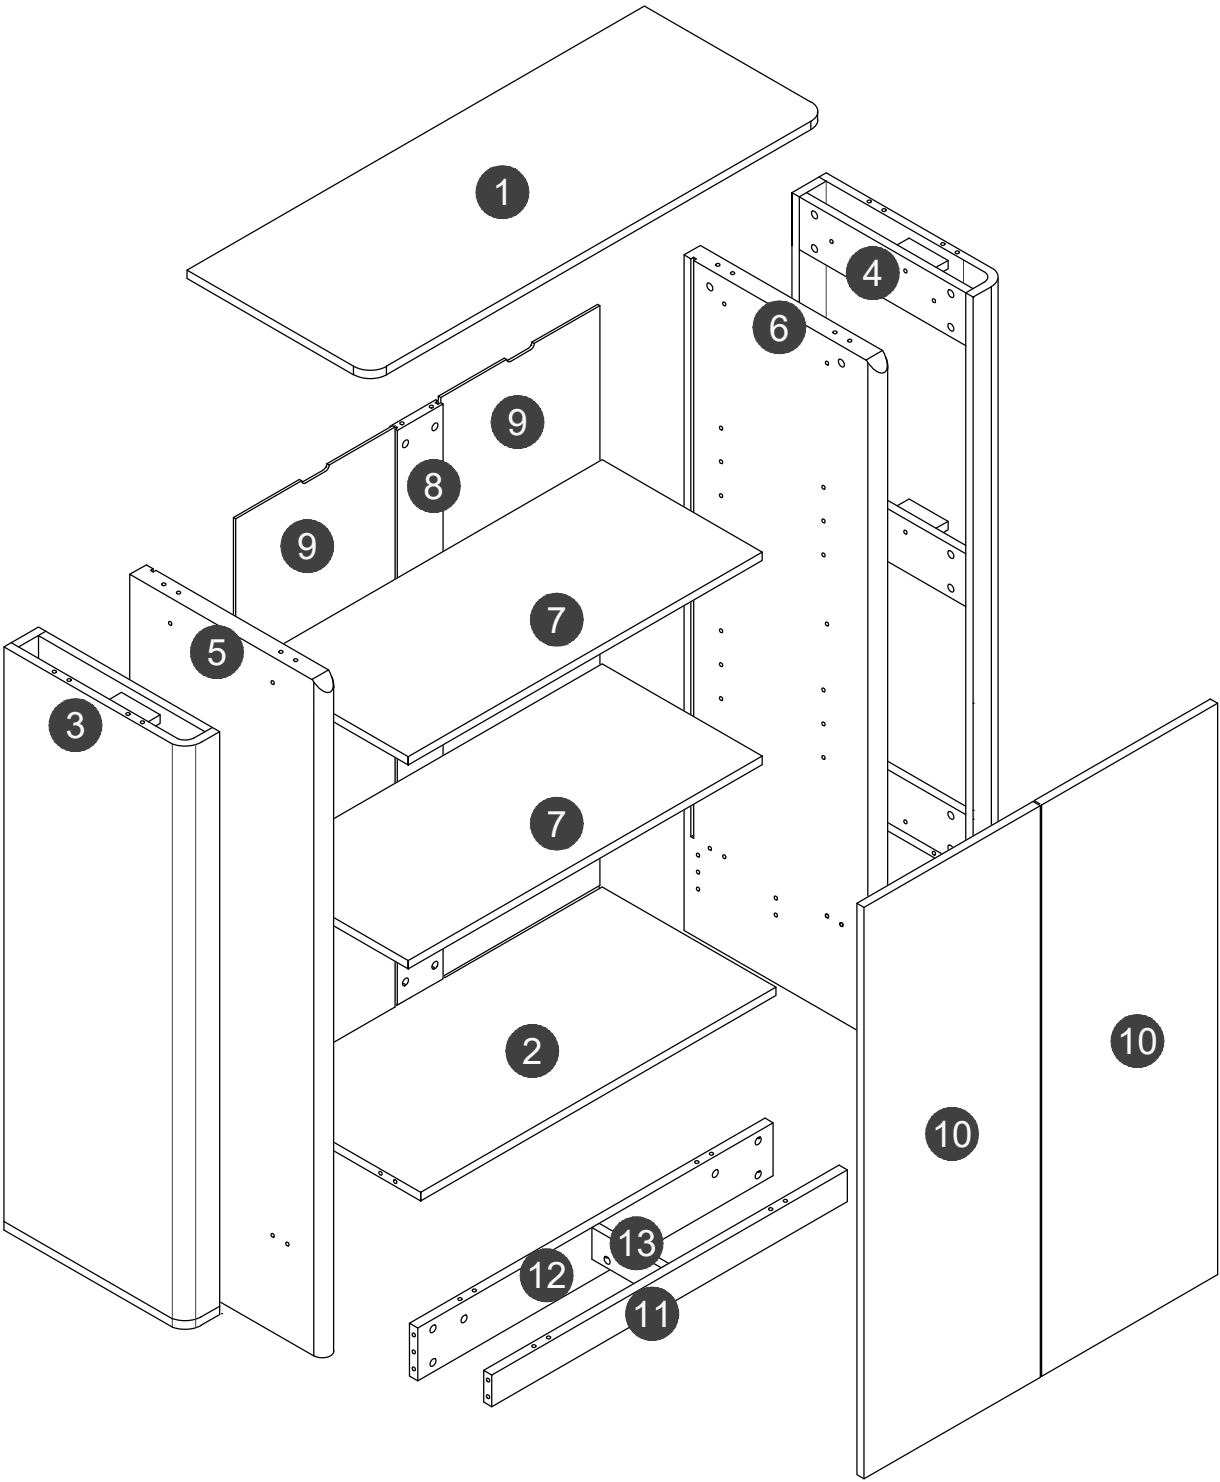


Fittings



M6*40

A1=28




Φ8*40

A2=4




Φ8*30

B=26

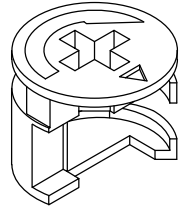

Φ15*12

C=28

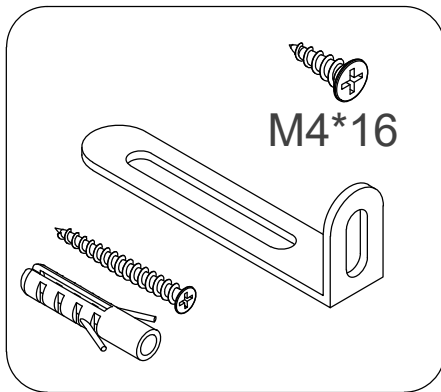


M4*16

F2=2




Φ21


D=28

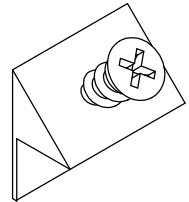


E=12

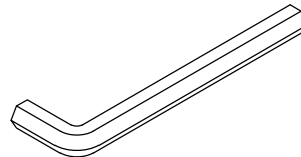

H =1

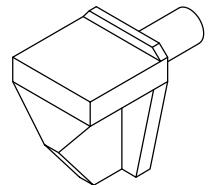


L=8

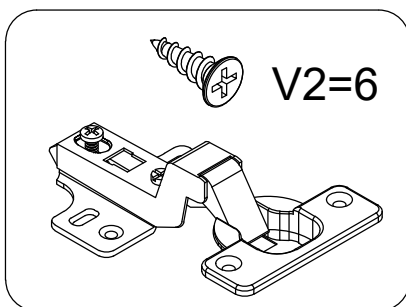


V2=6

I3=6

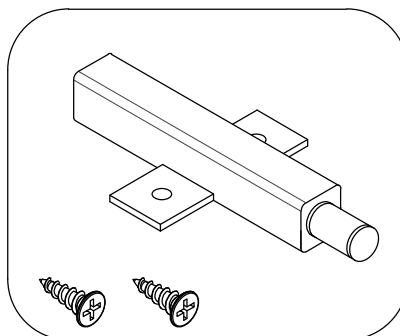


K=2

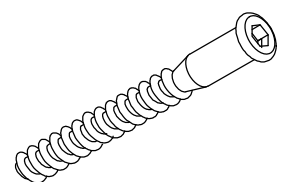


Q=8


STEP 1

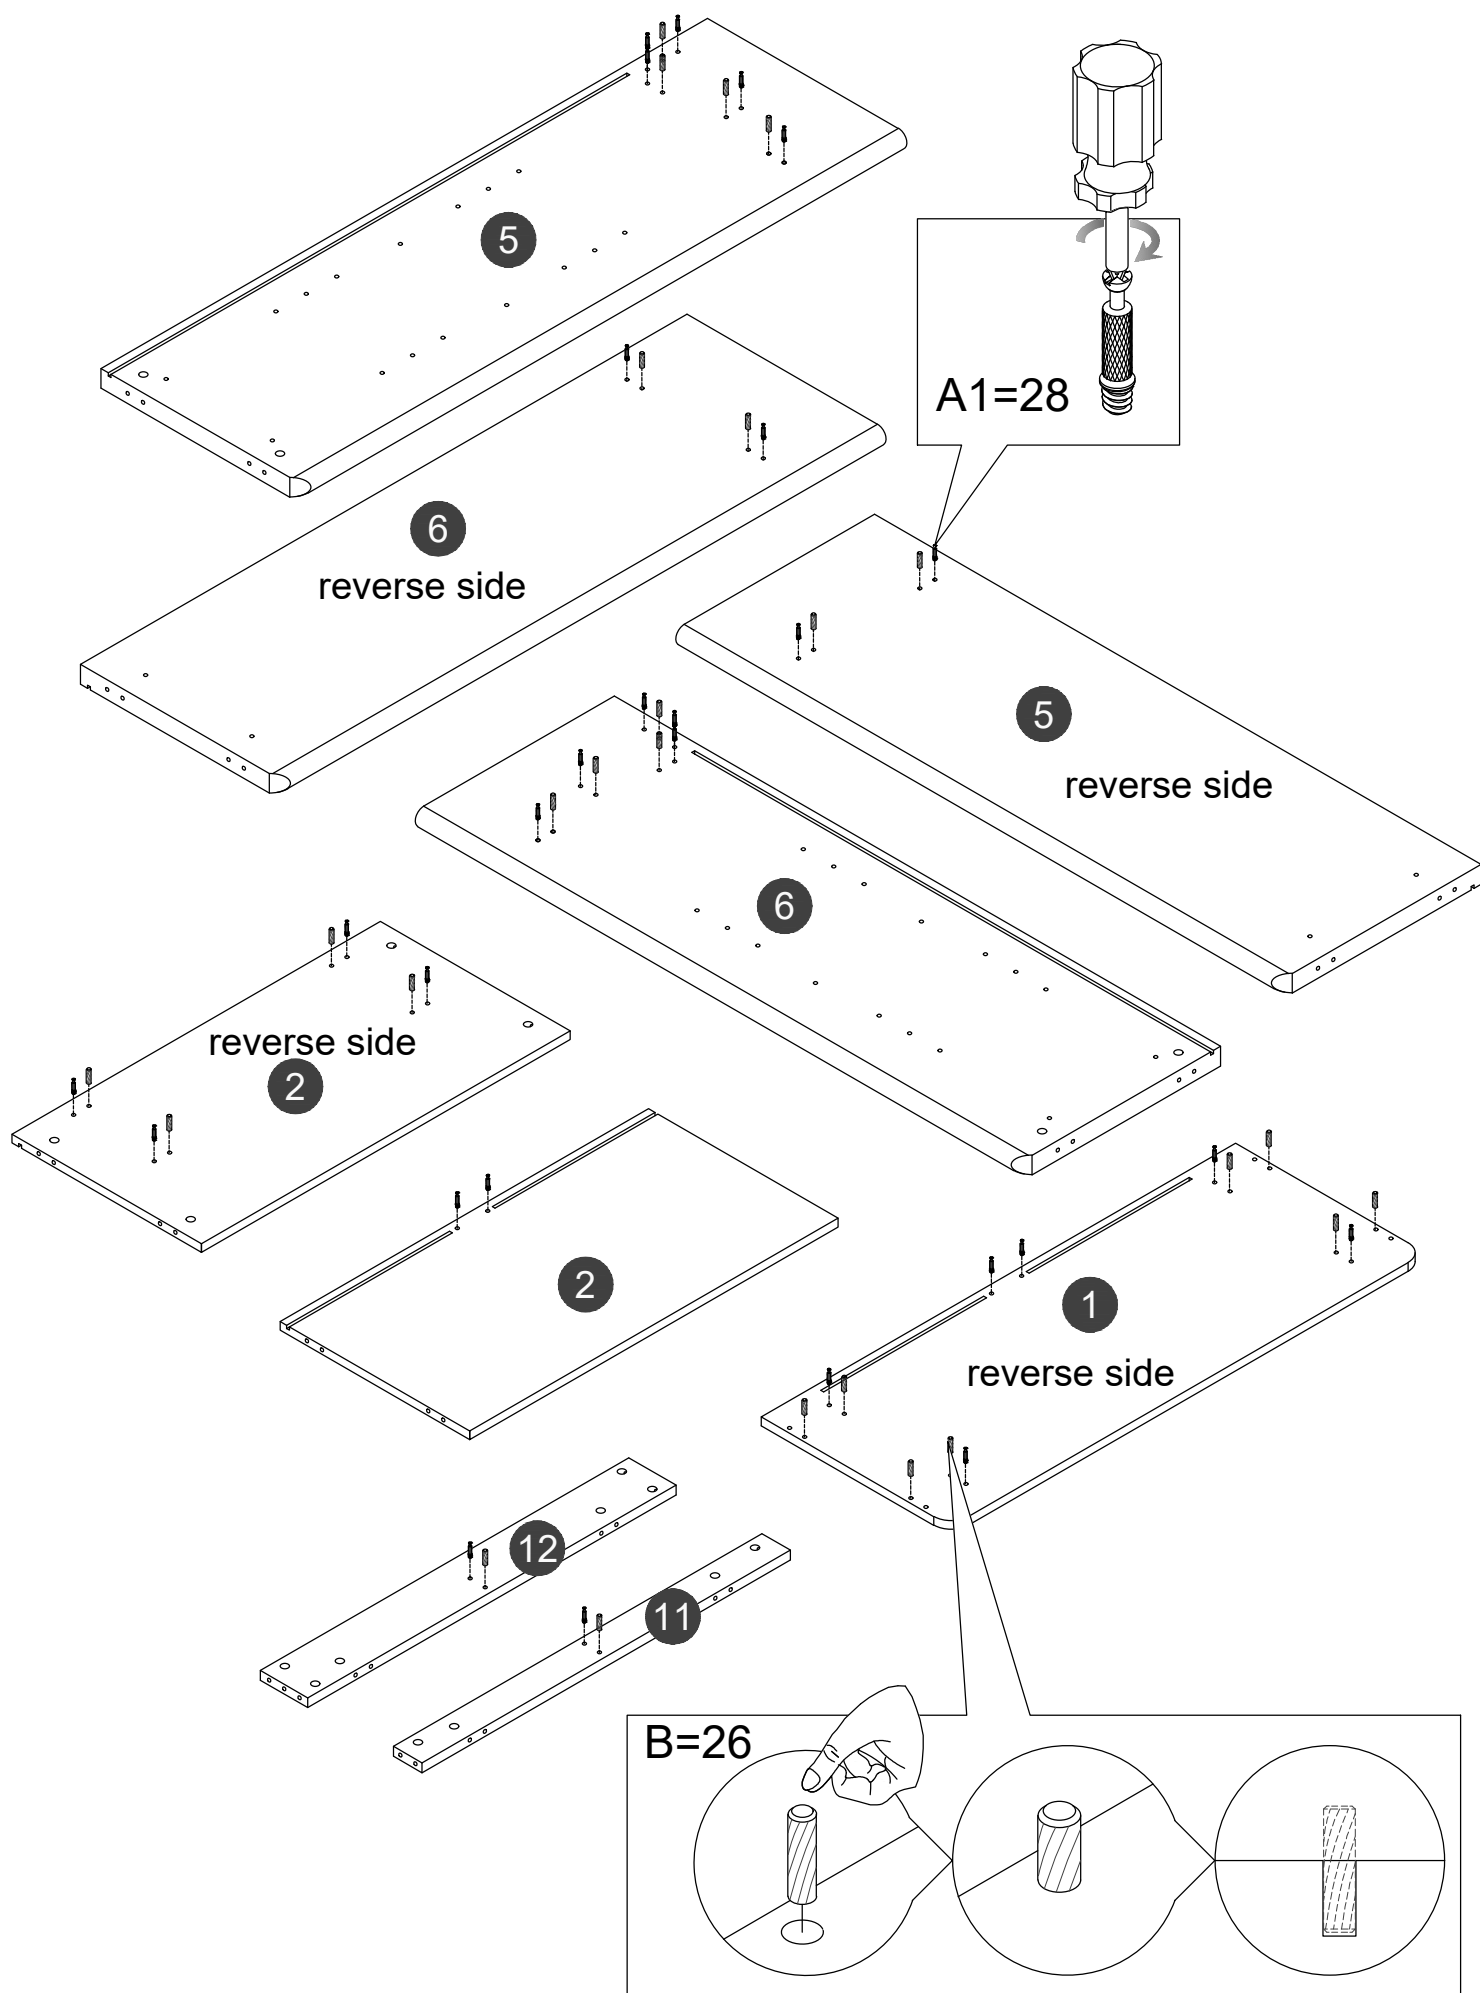


STEP 2

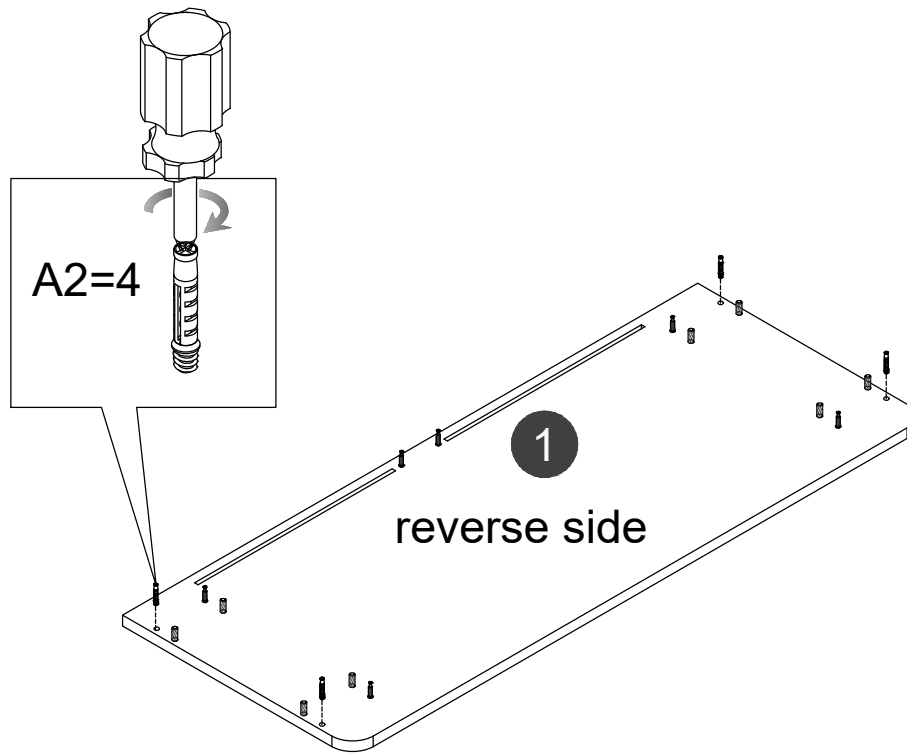


STEP 3

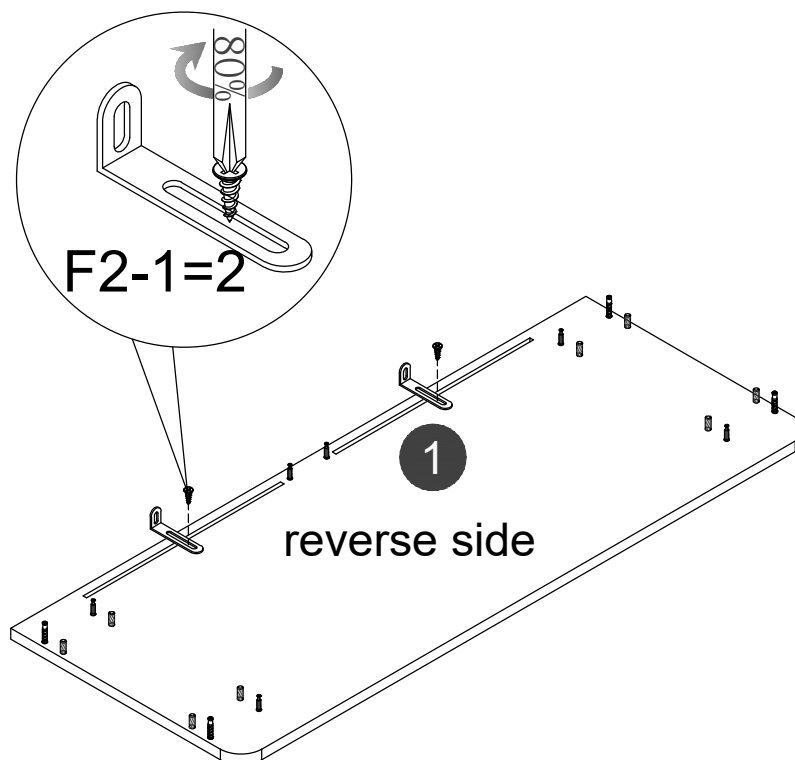


STEP 4

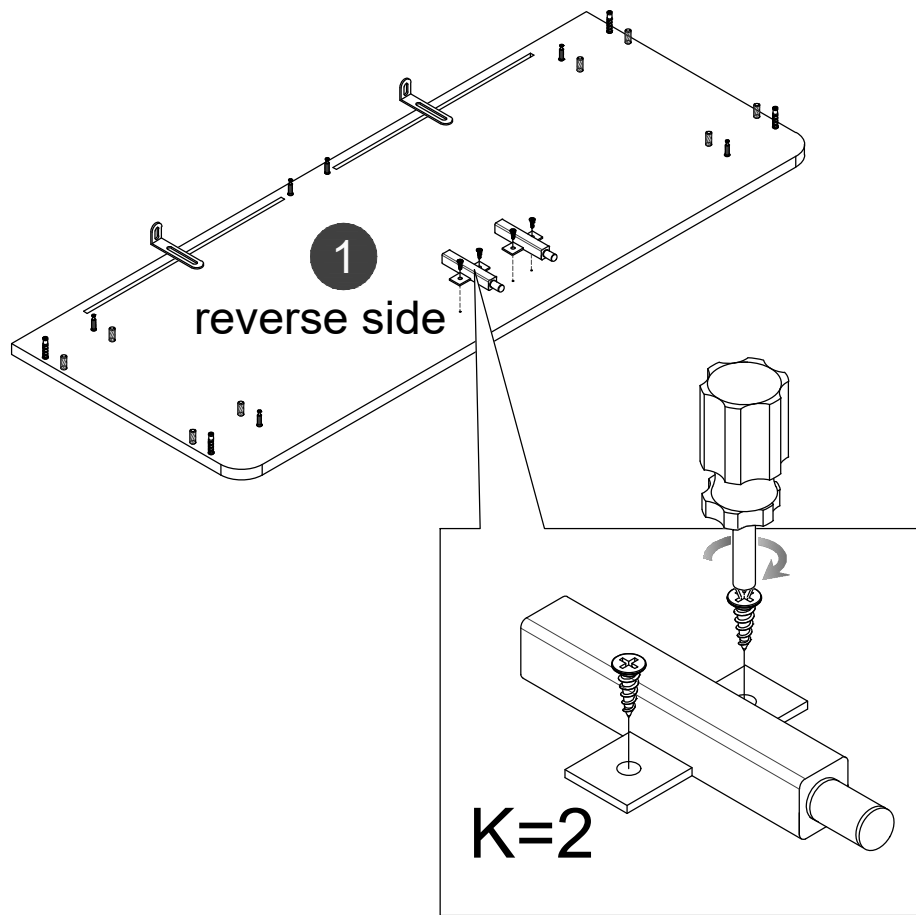


STEP 5

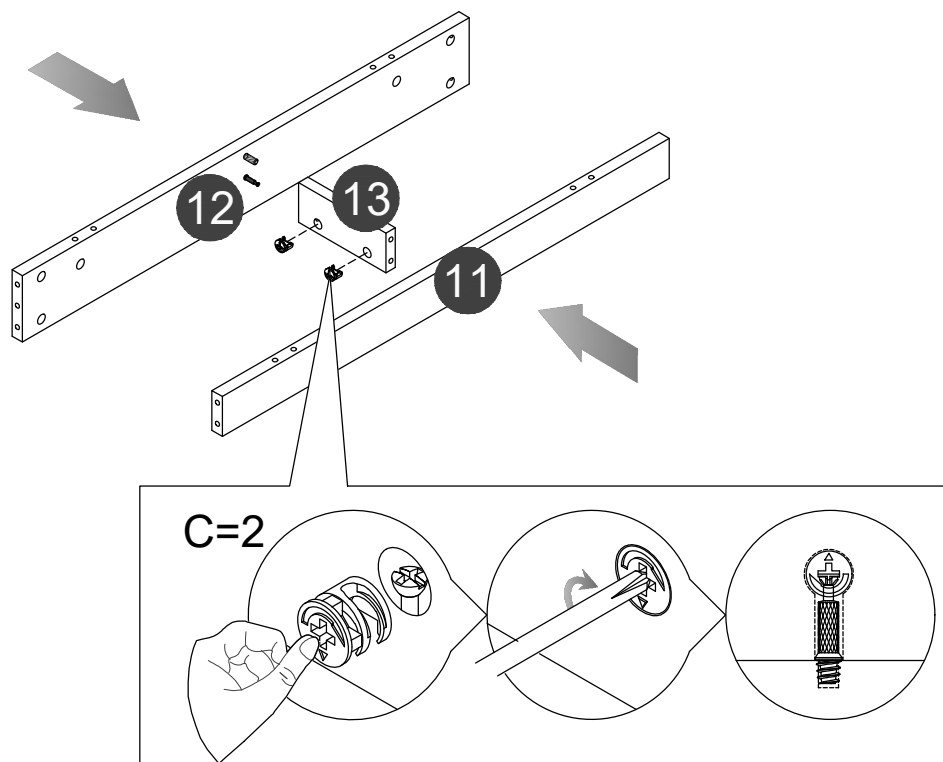


STEP 6

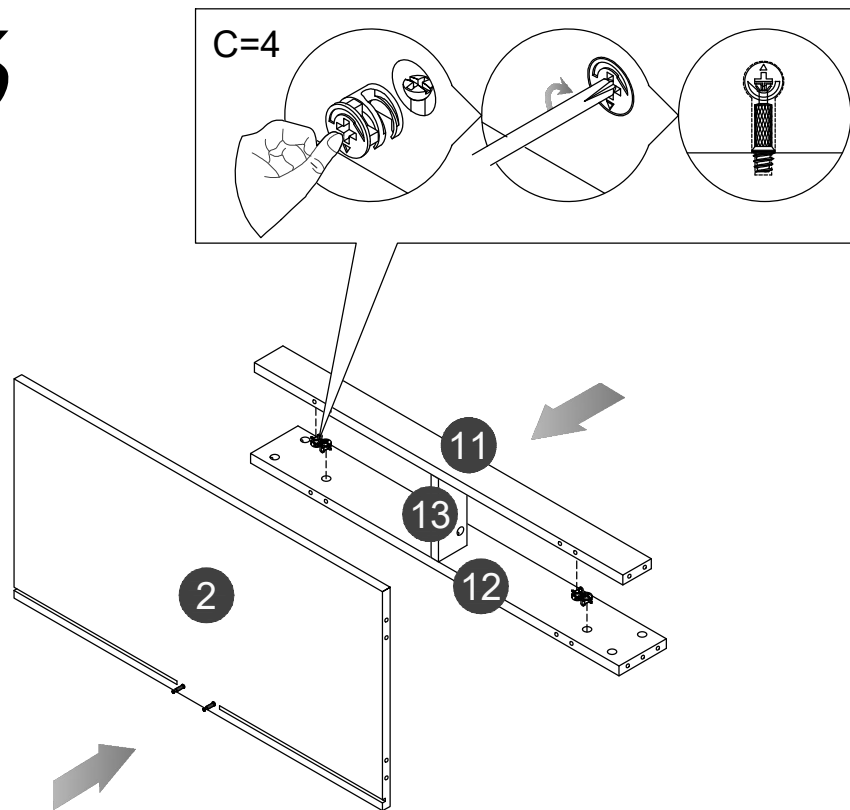


STEP 7

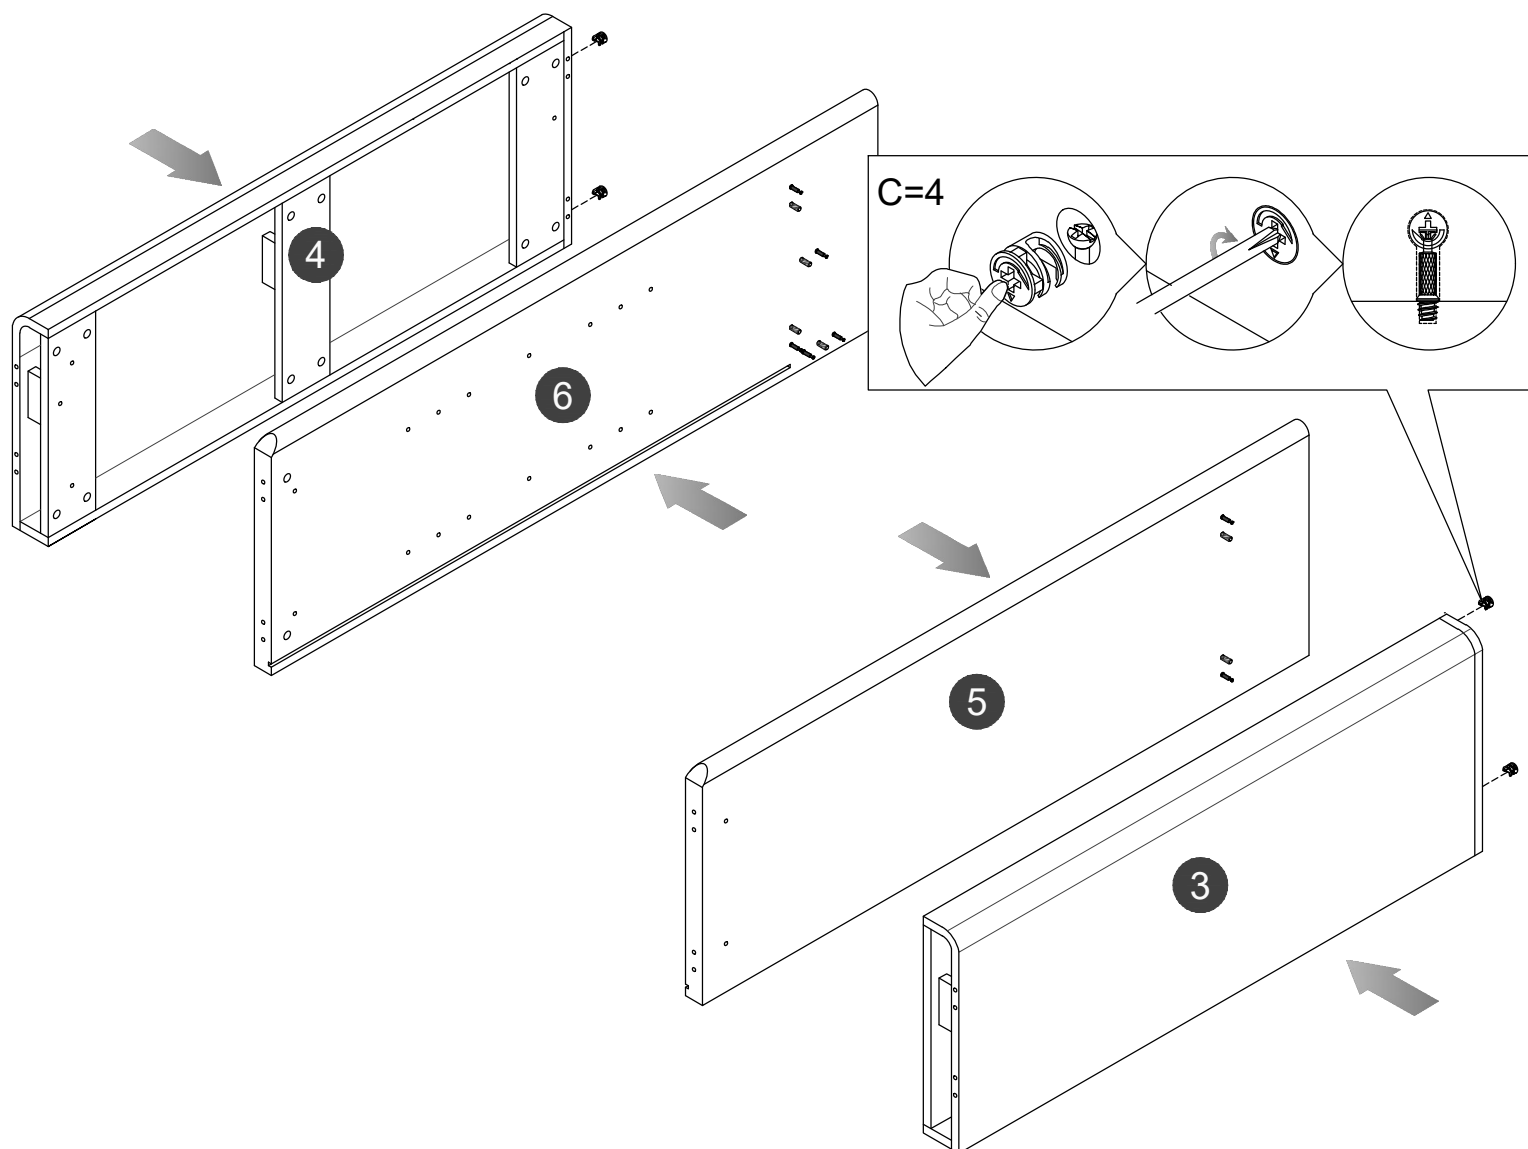



STEP 8

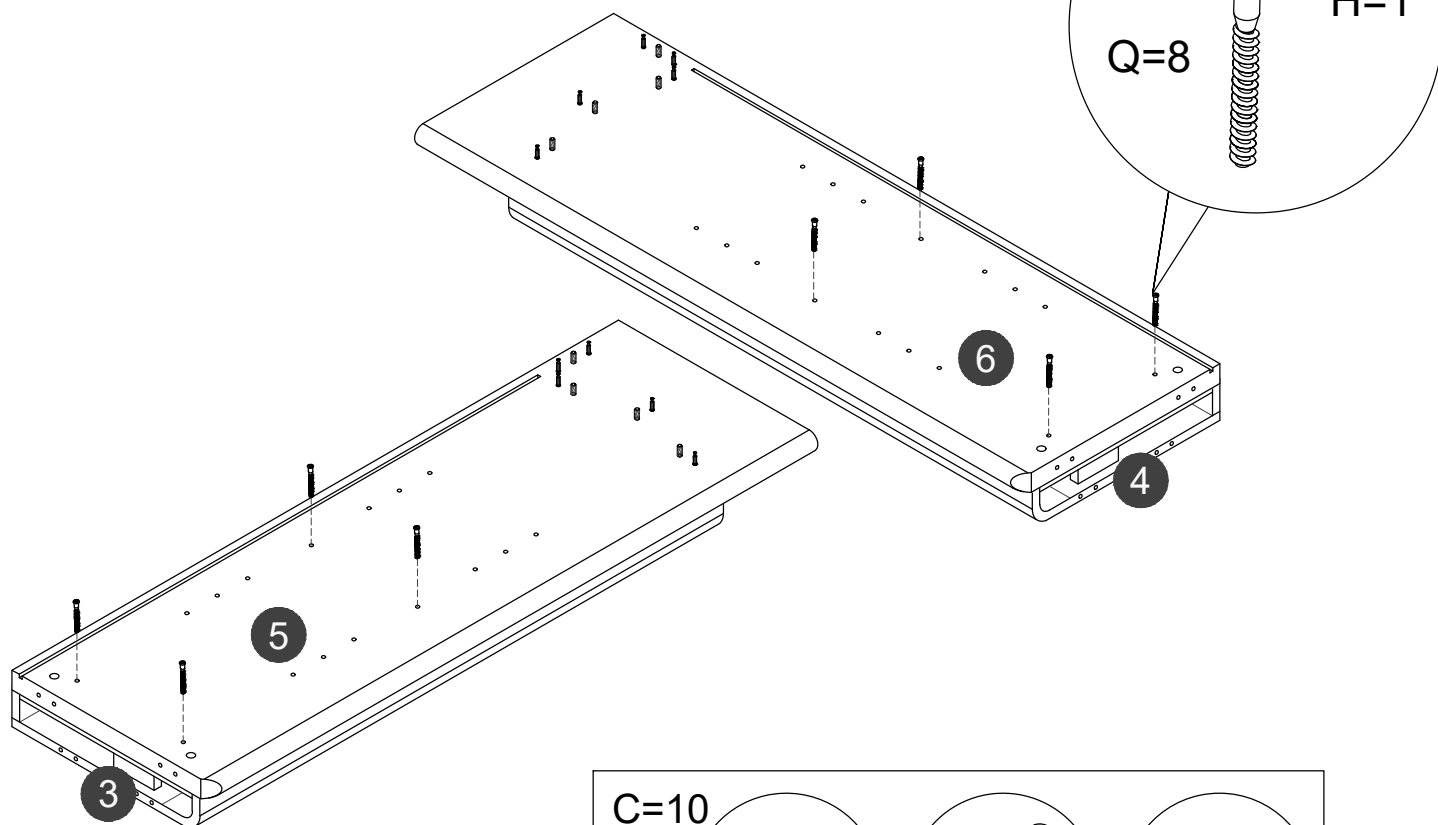



STEP 9

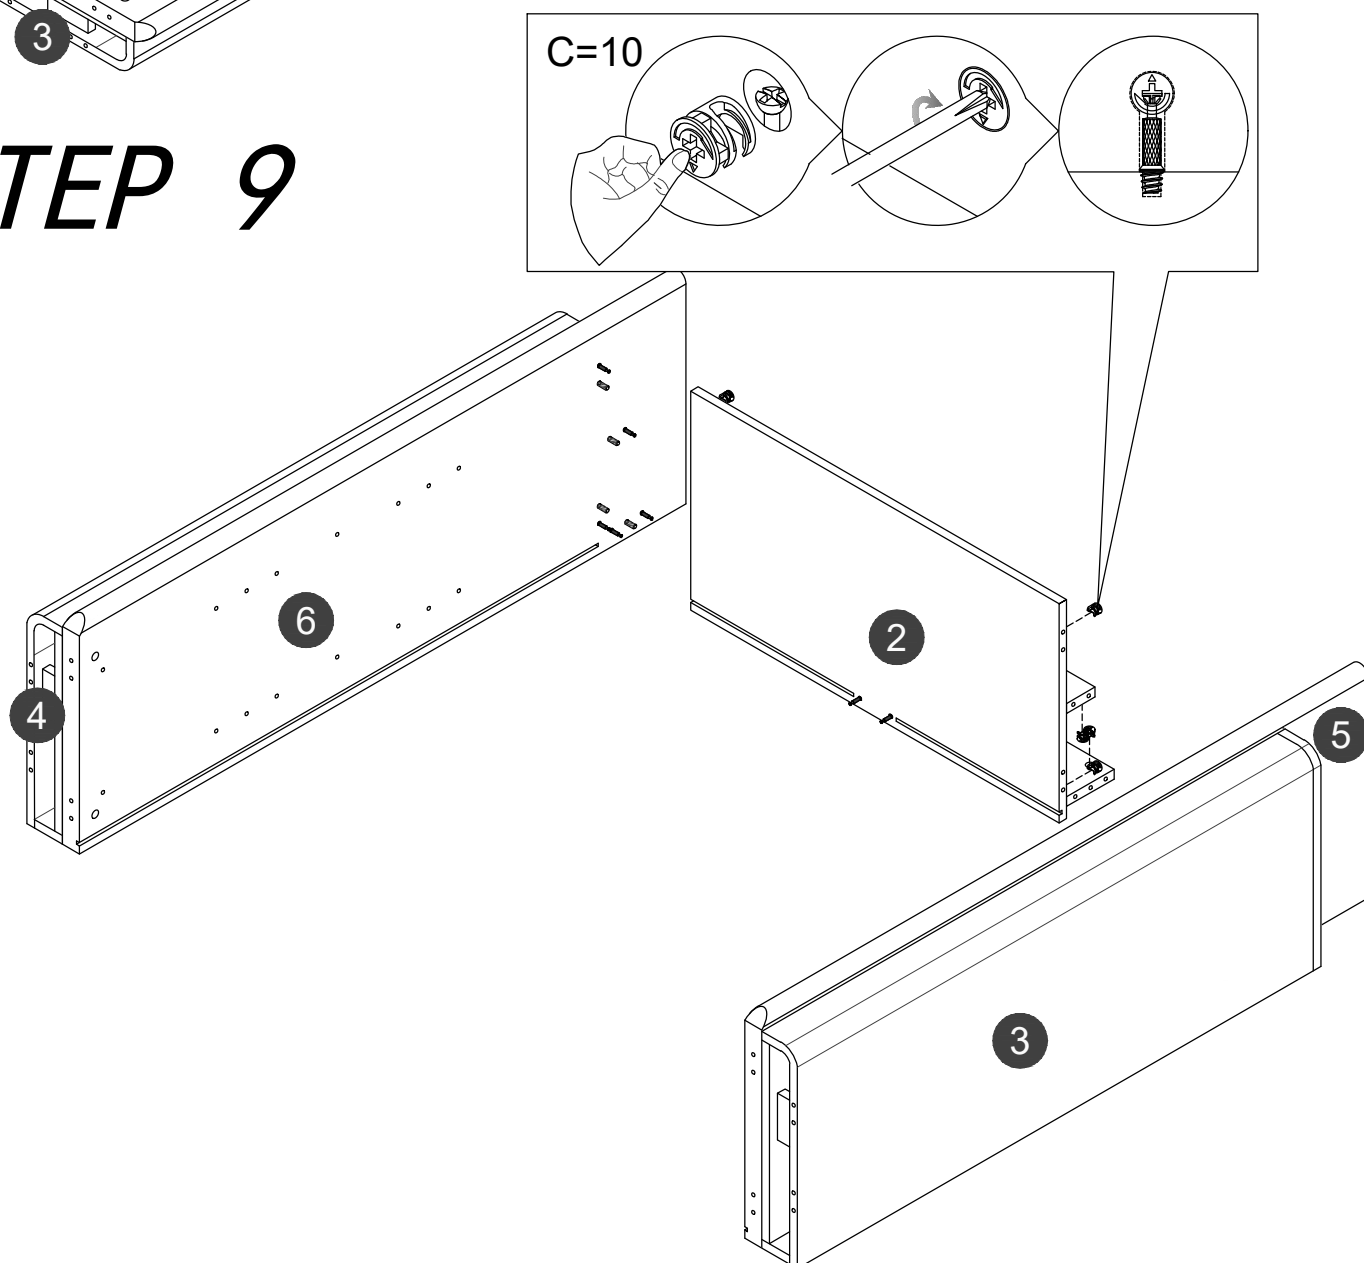


STEP 10

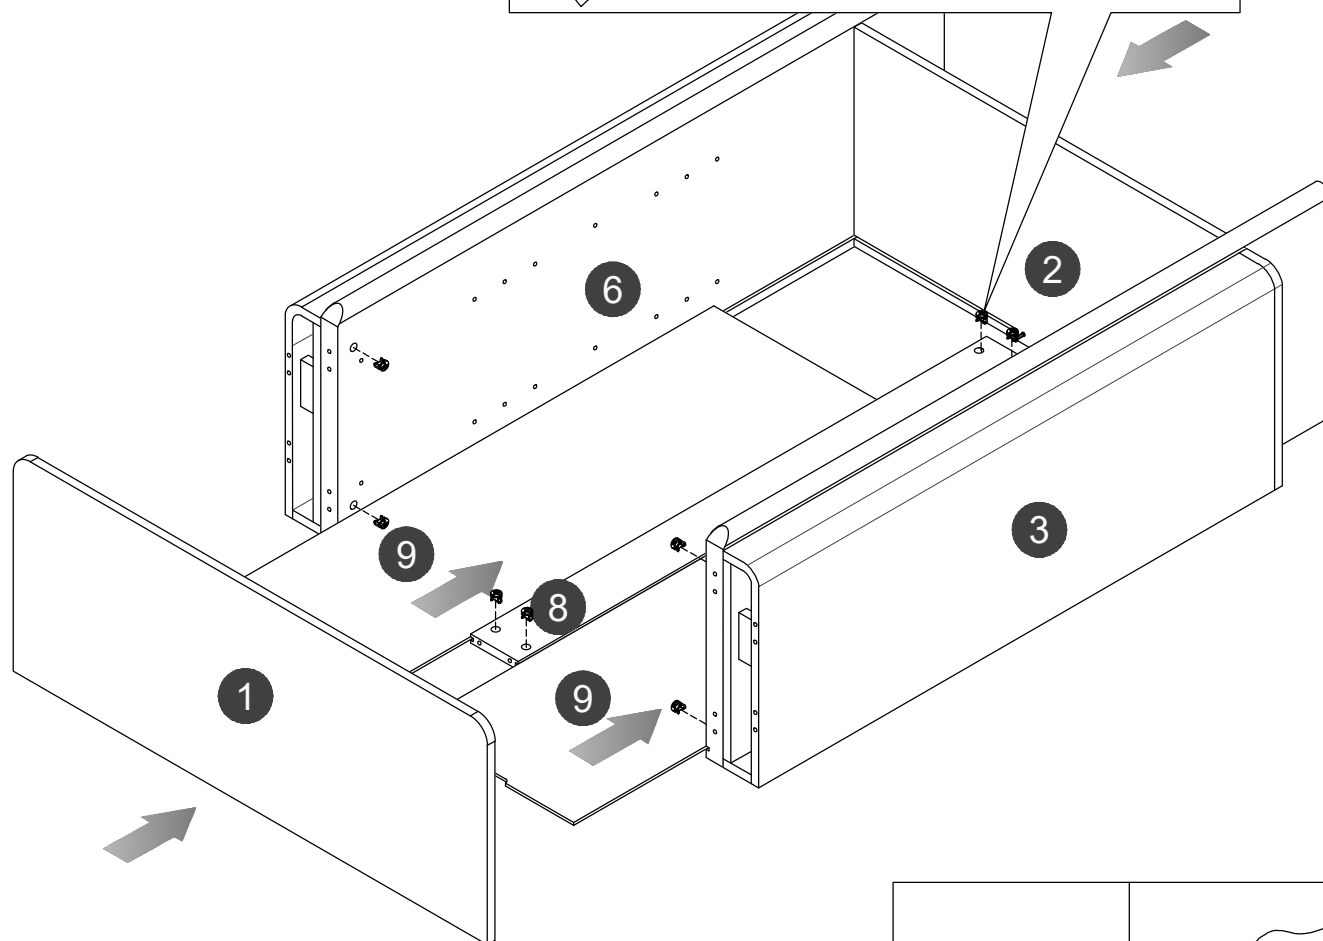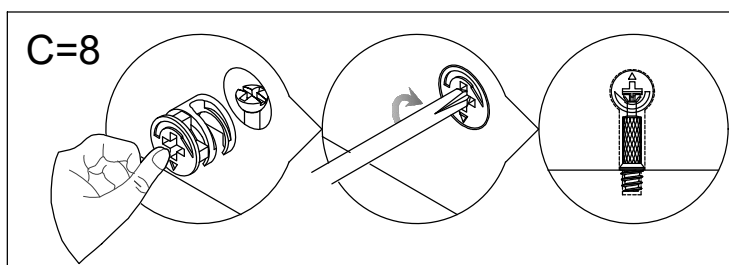


STEP 11

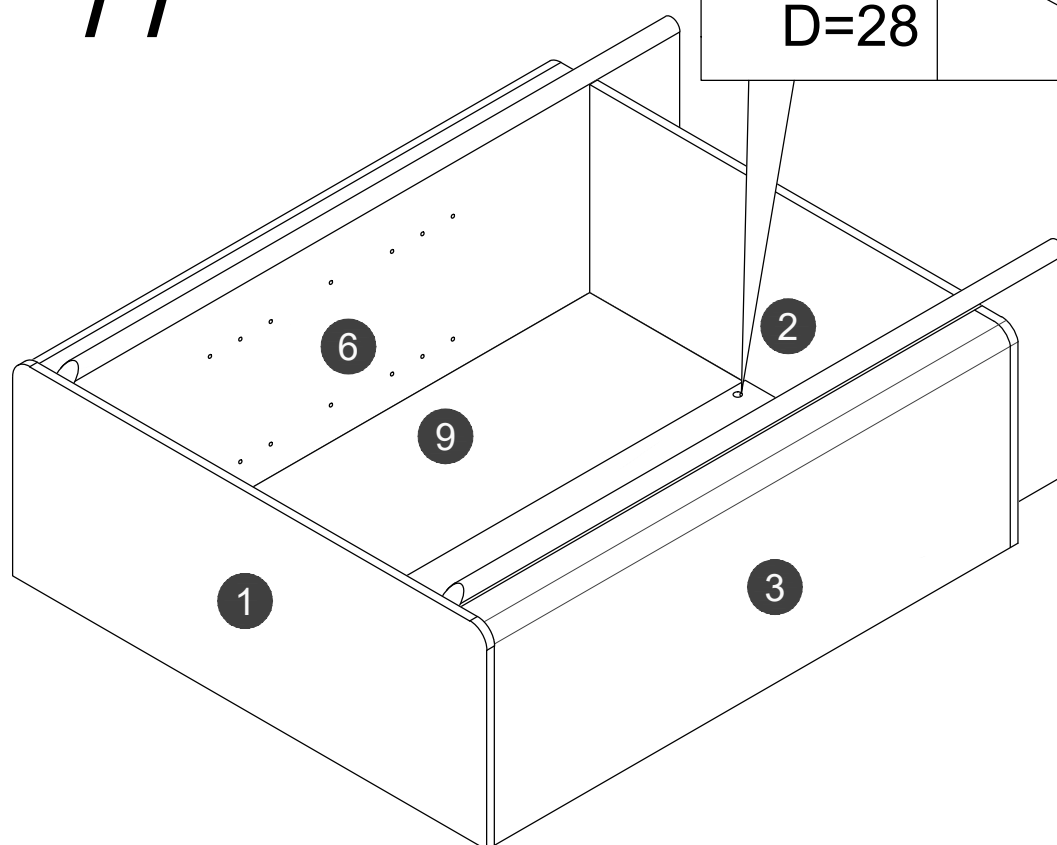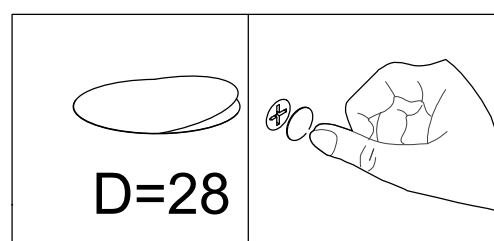


STEP 12

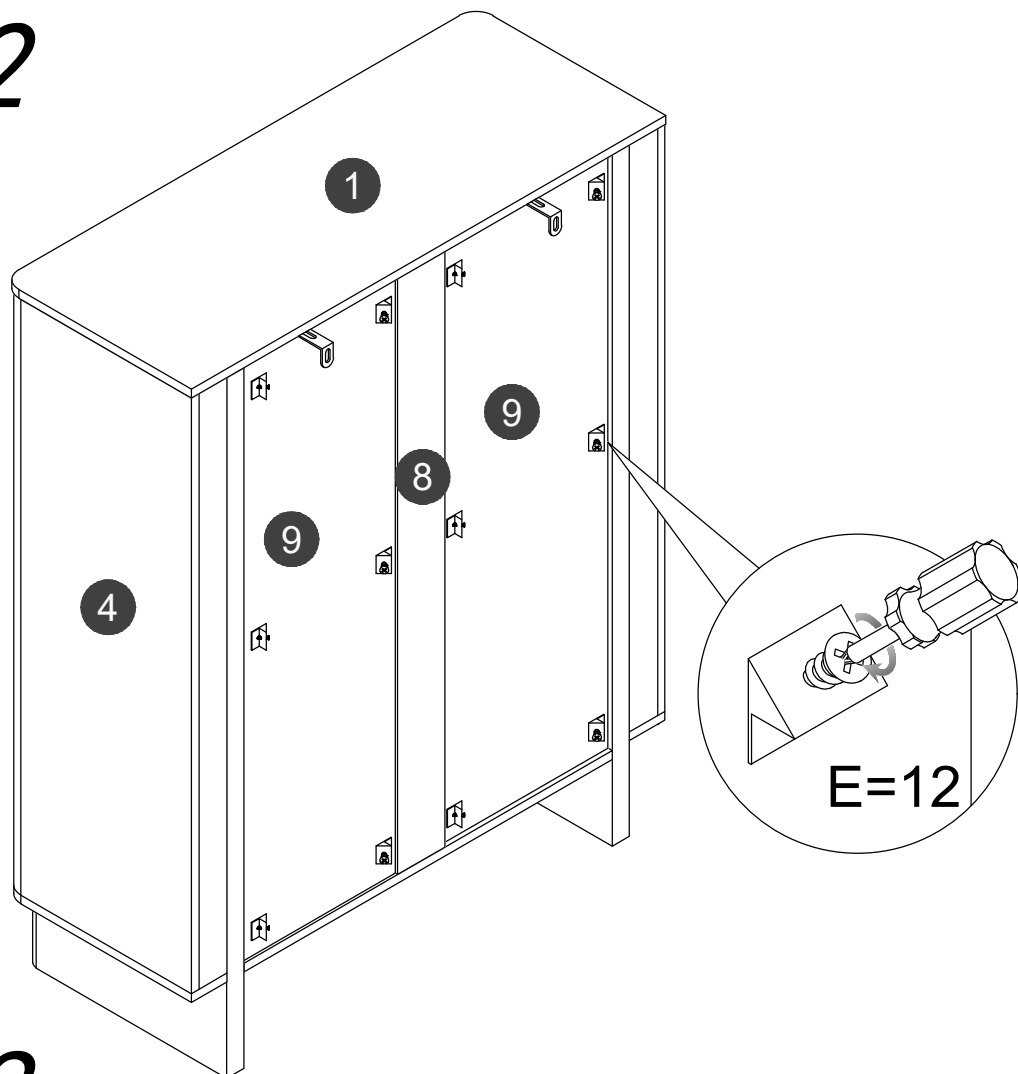


STEP 13

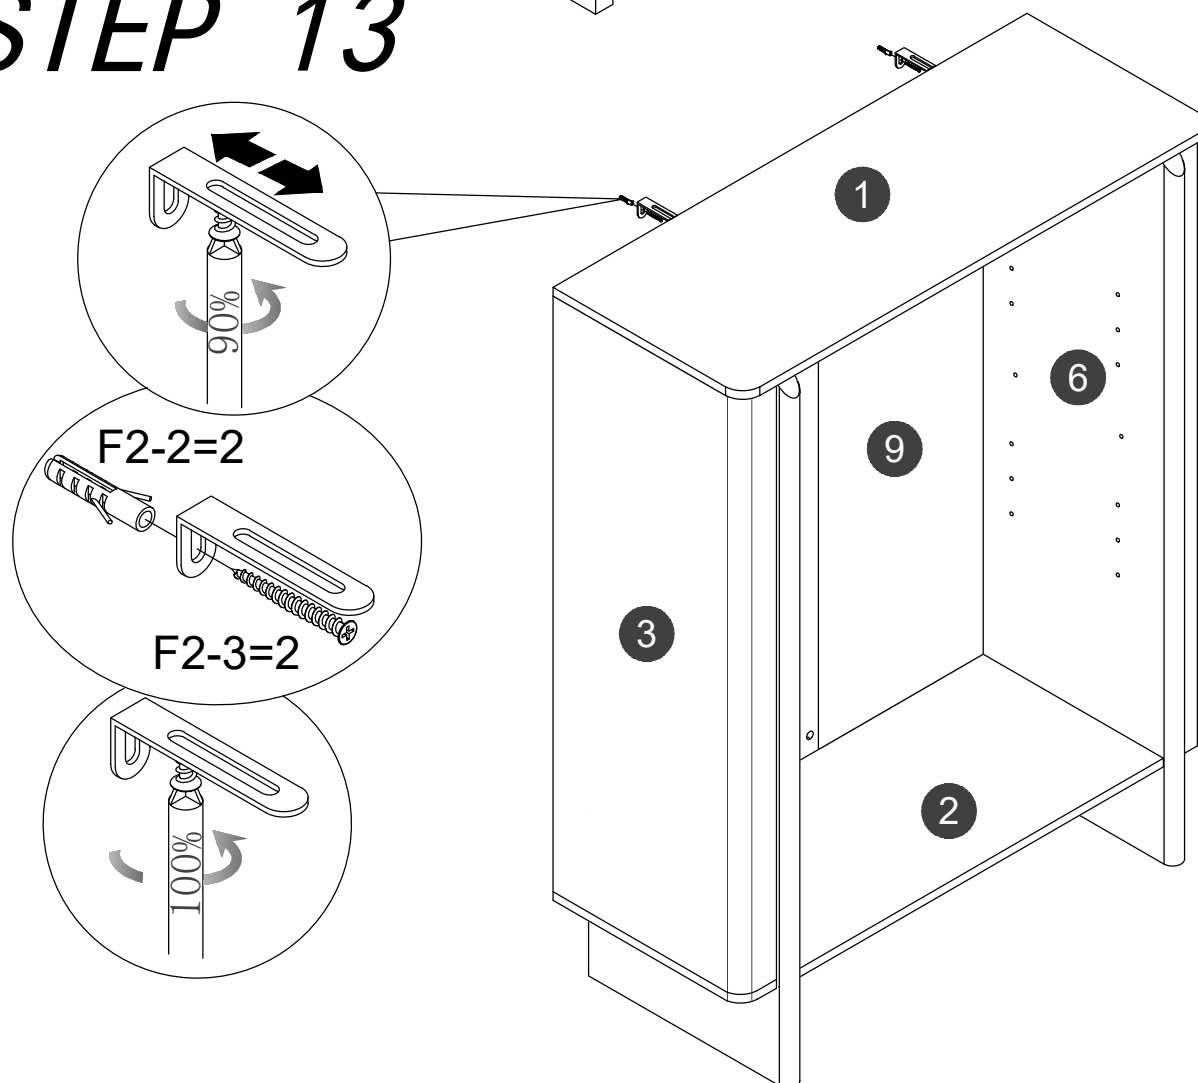


STEP 14

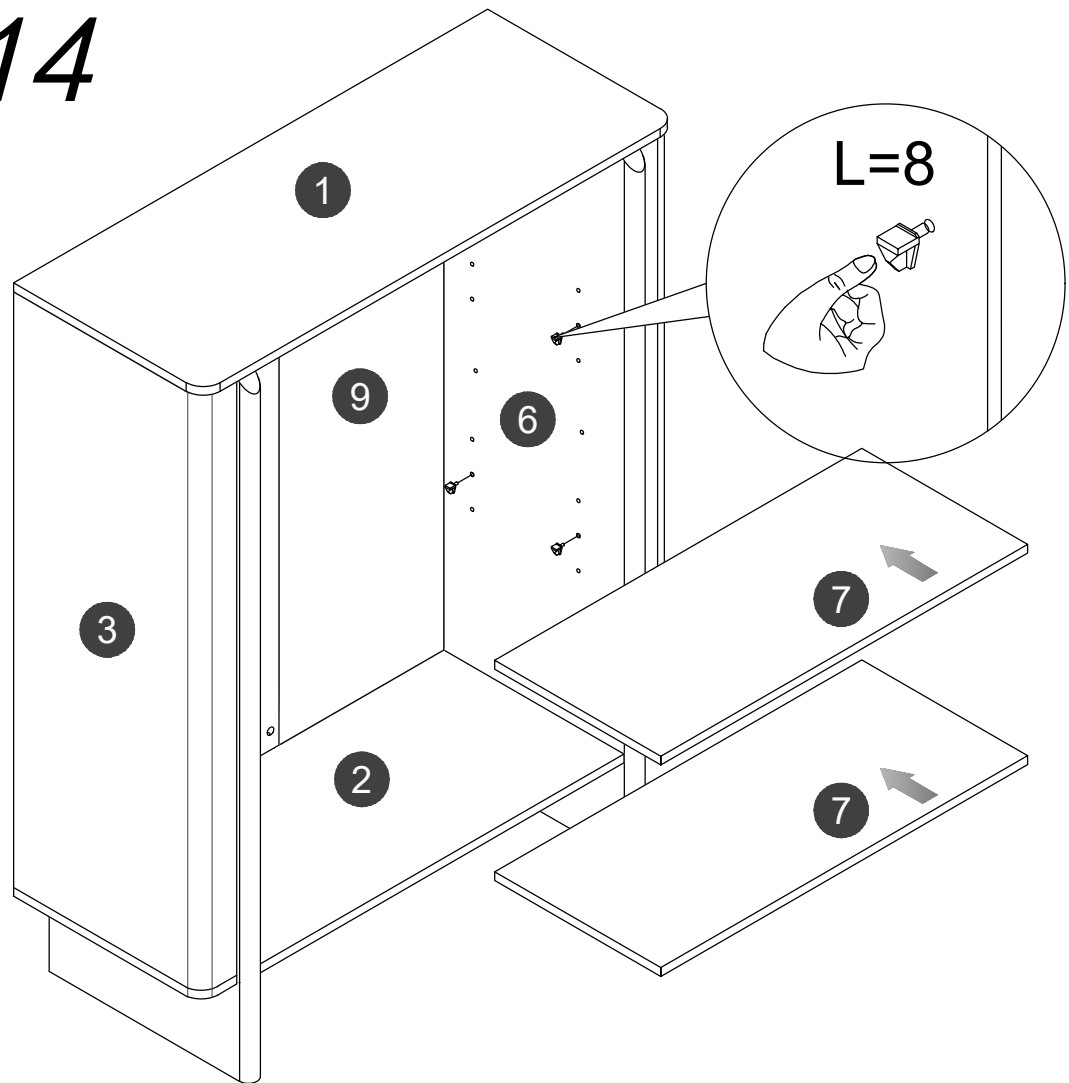




STEP 15

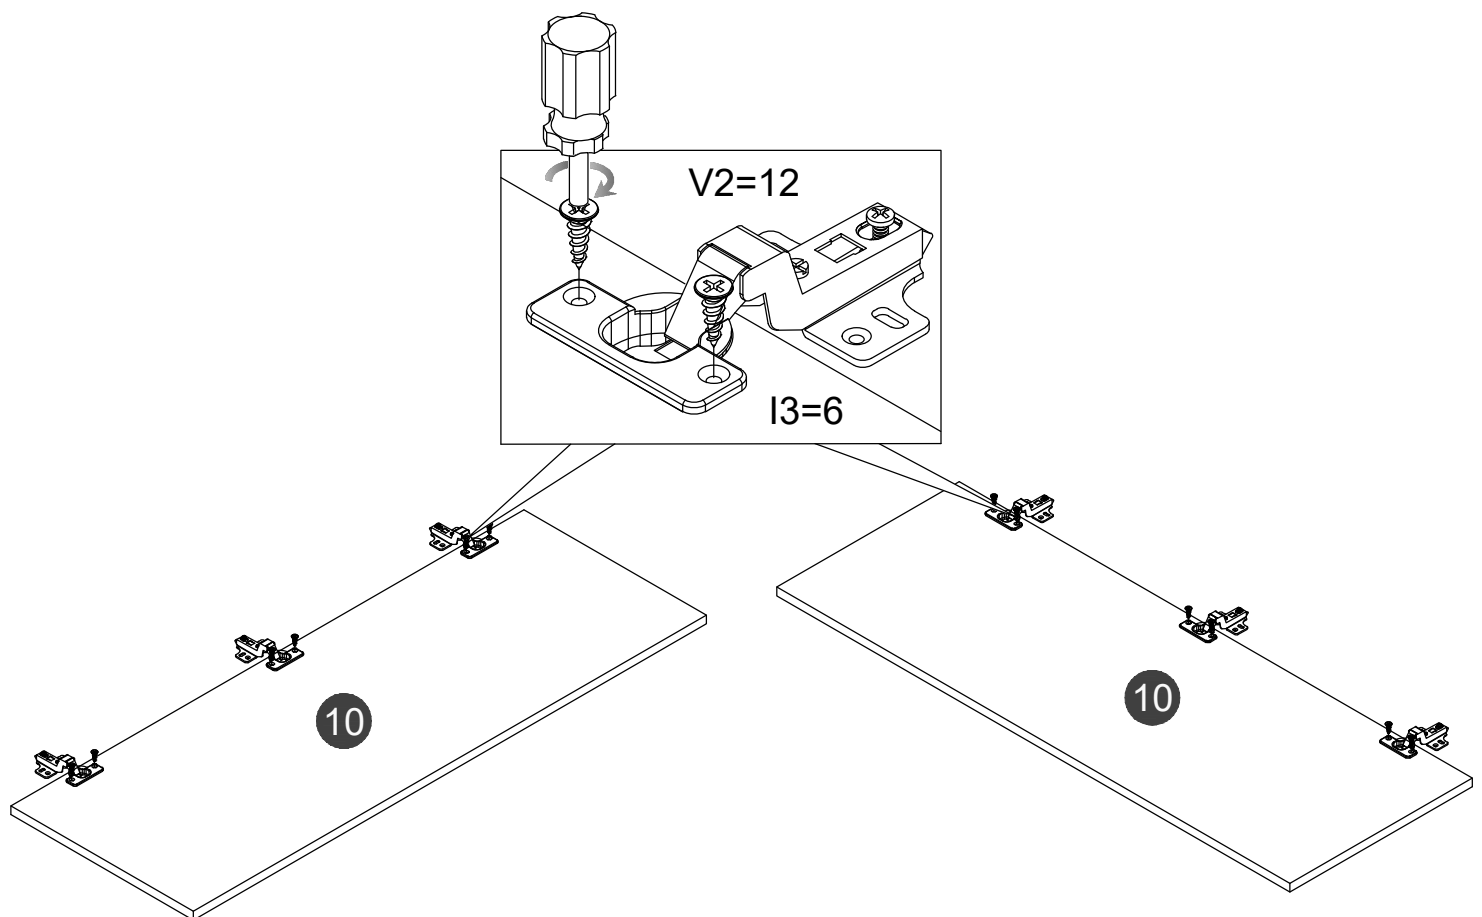


STEP 16

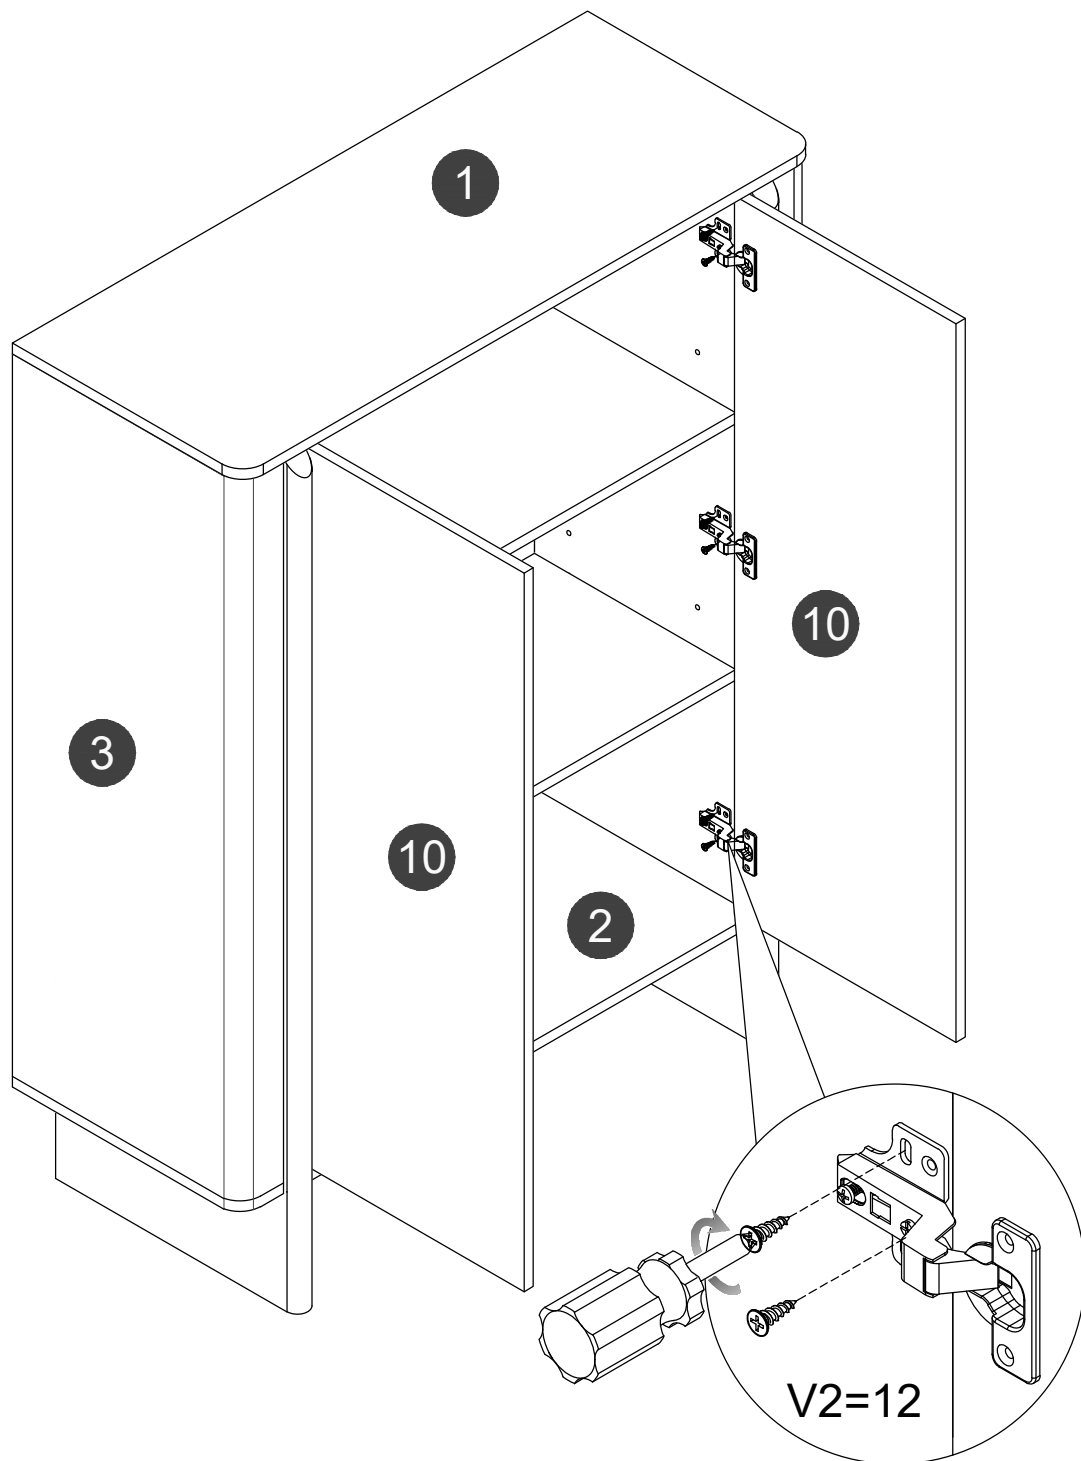

STEP 17

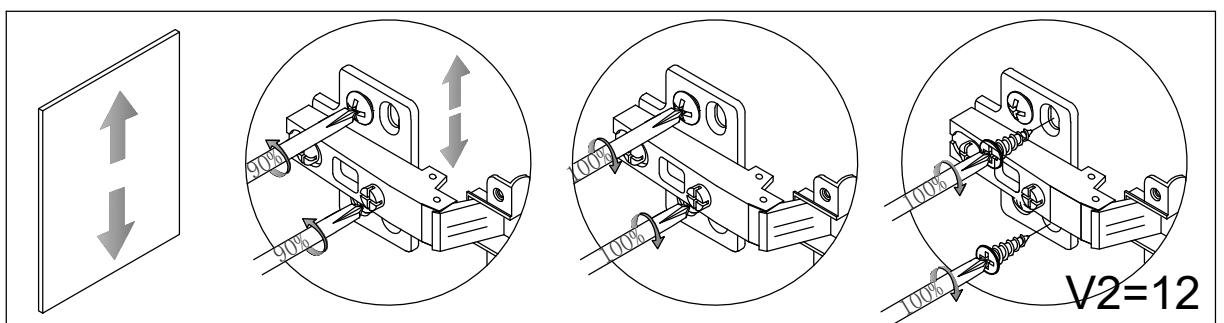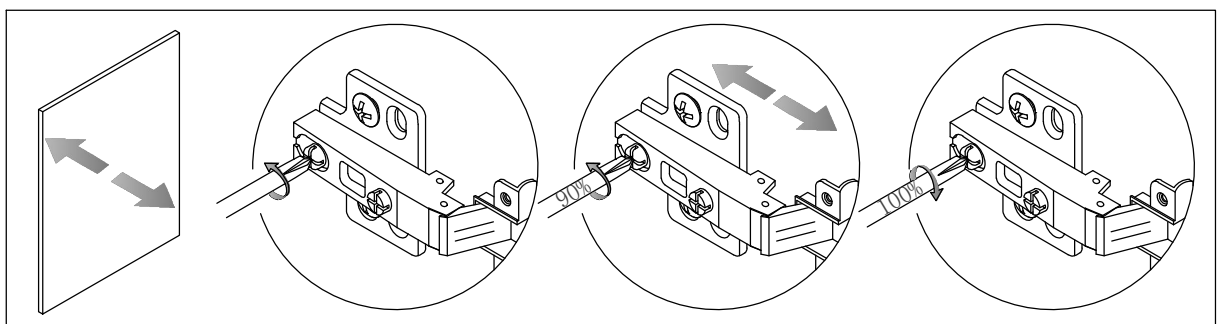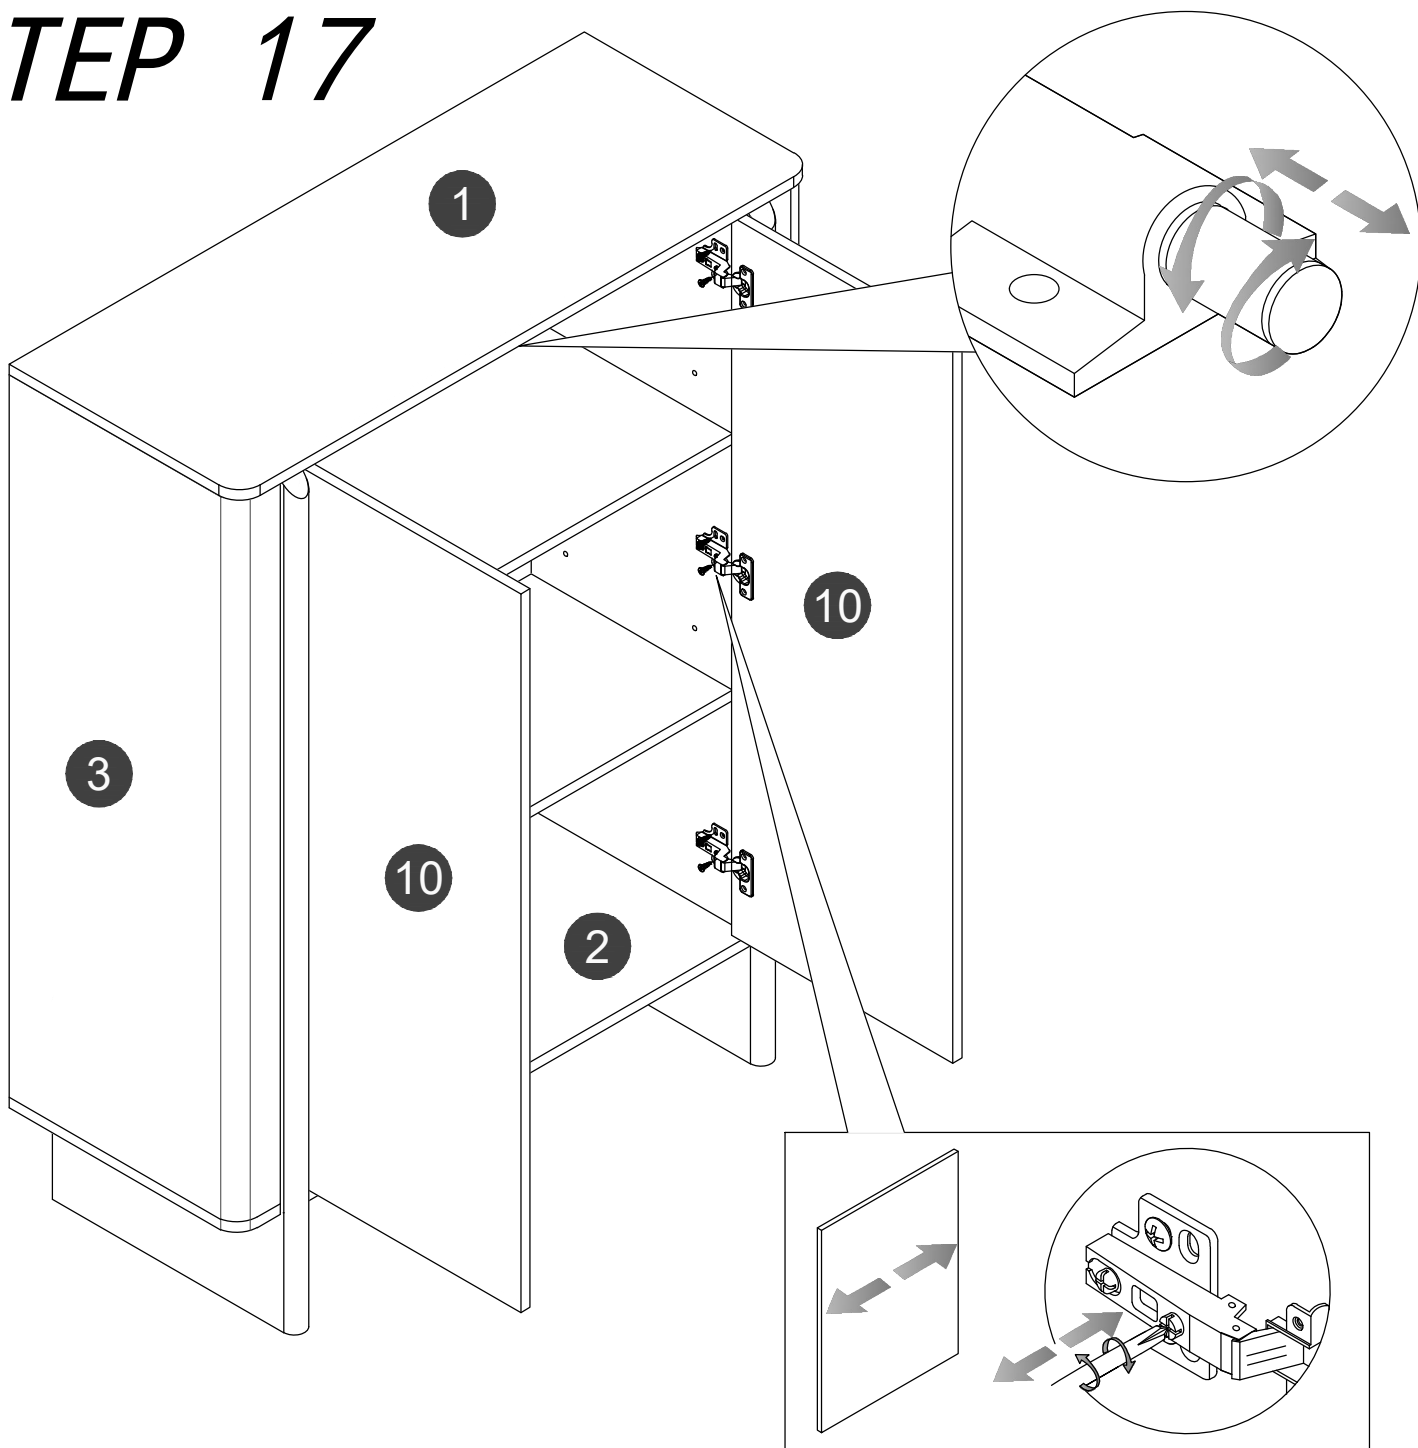

STEP 18

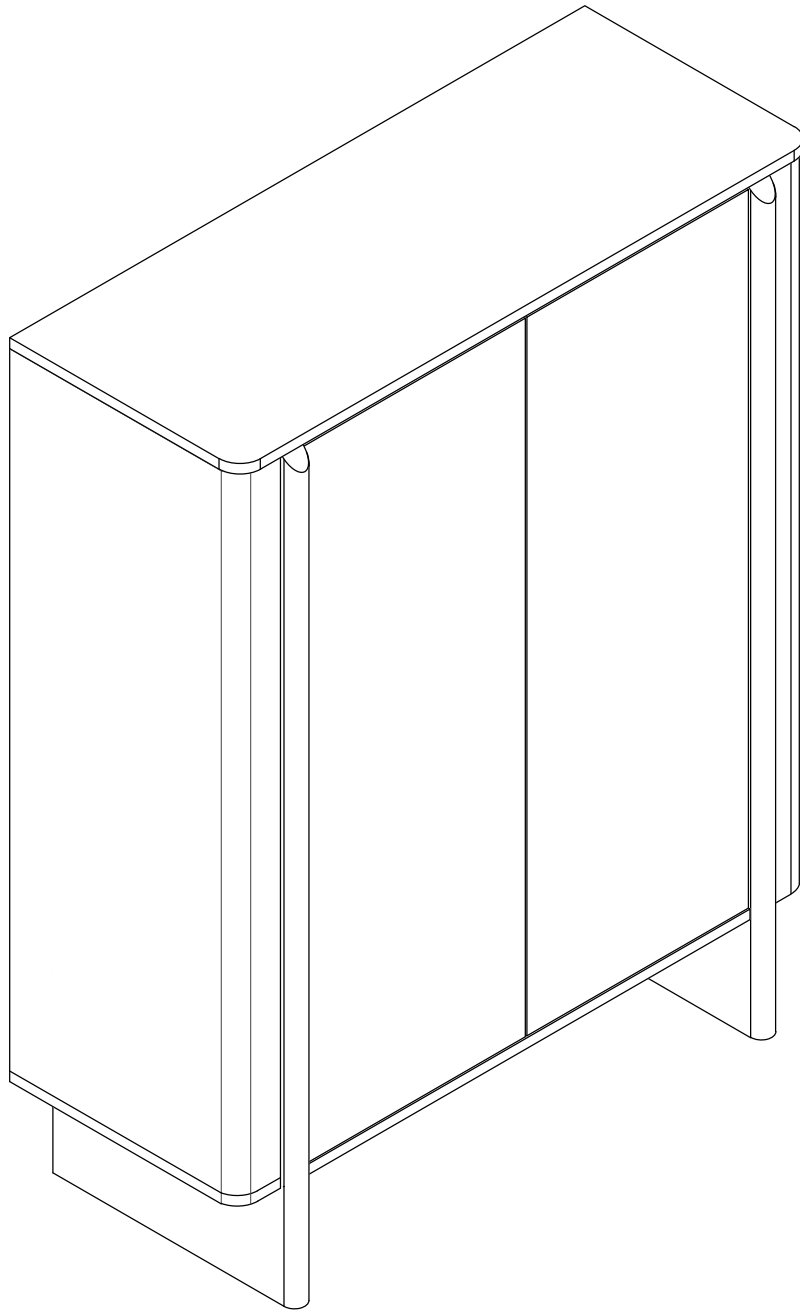

Finish