

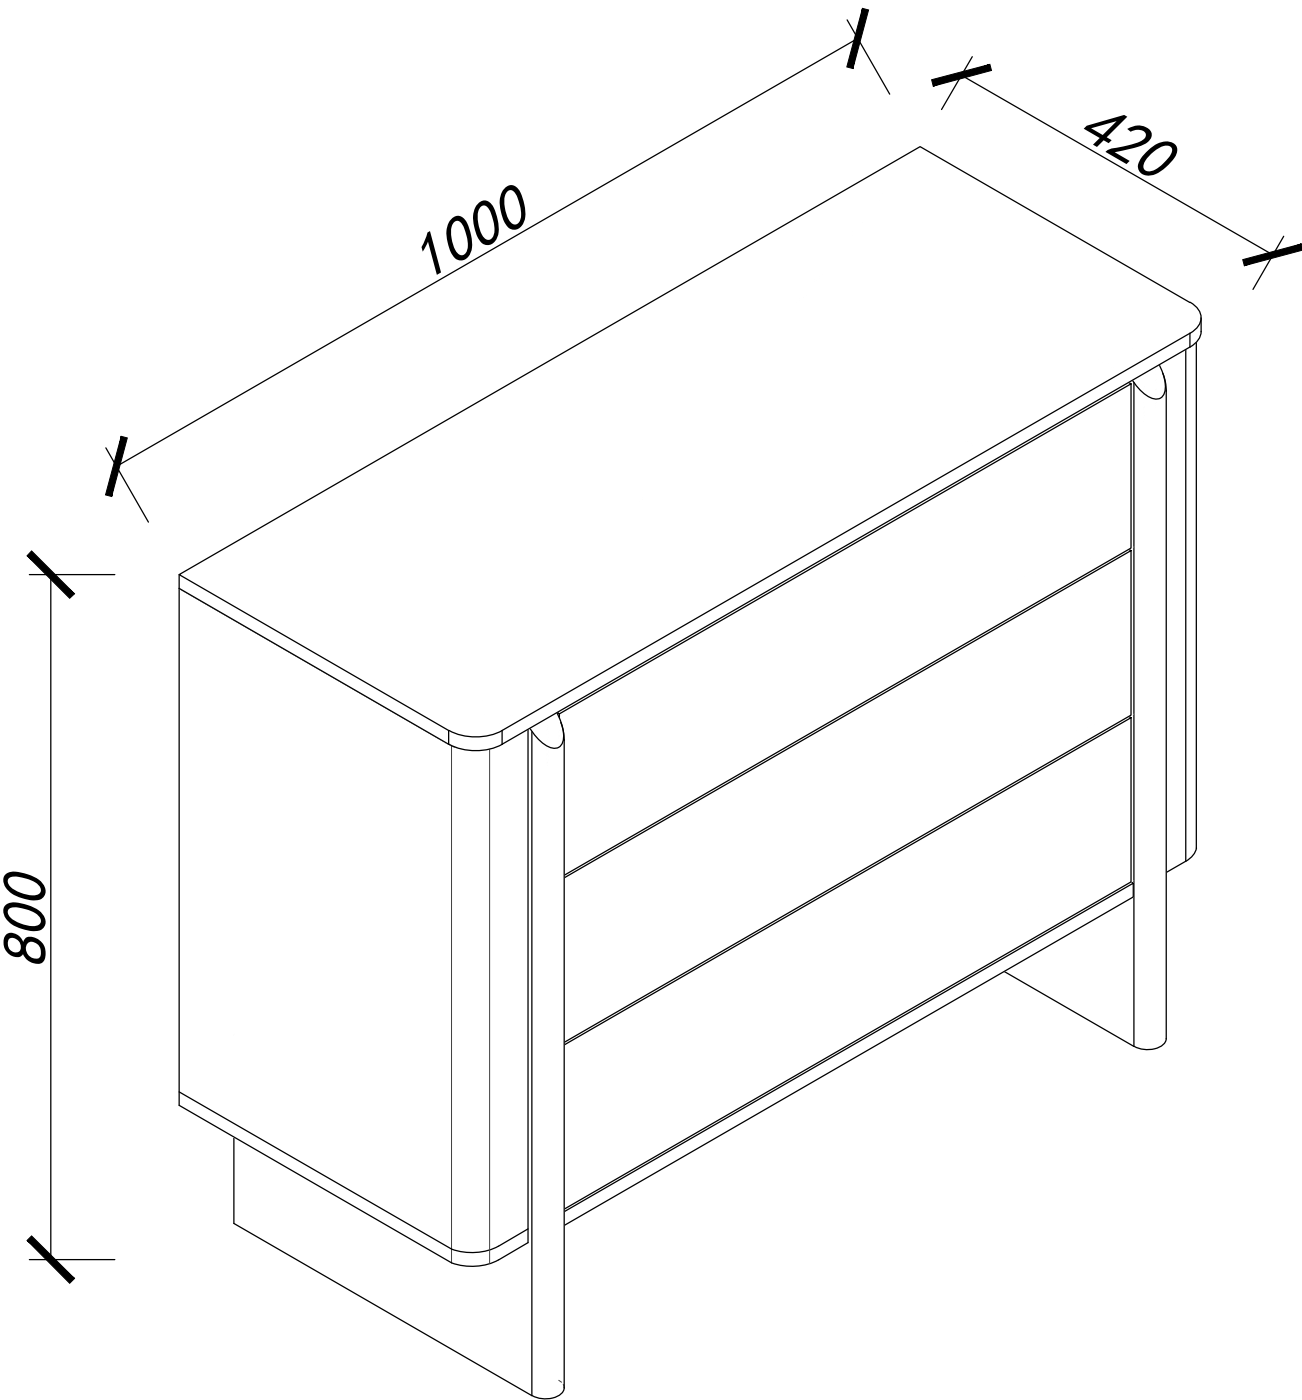
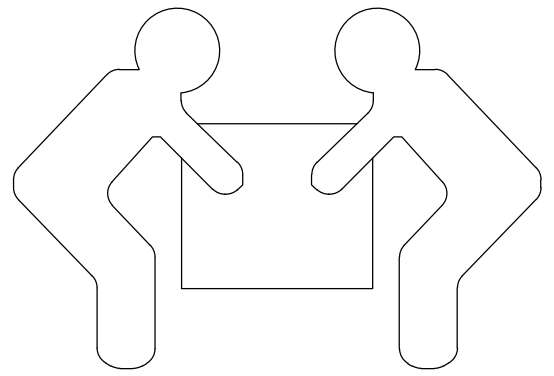








KOKETTO

Assembly Instruction

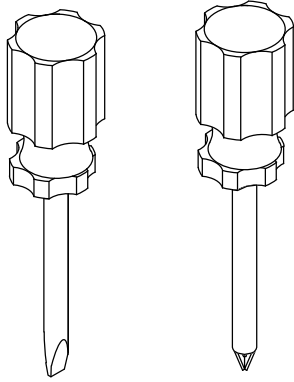

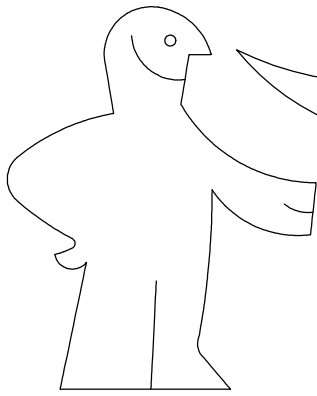


2 person recommended

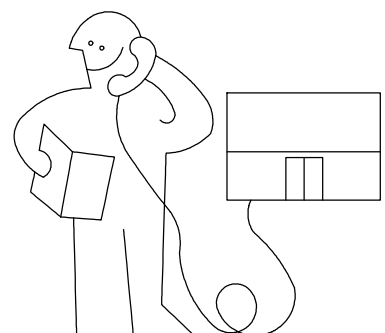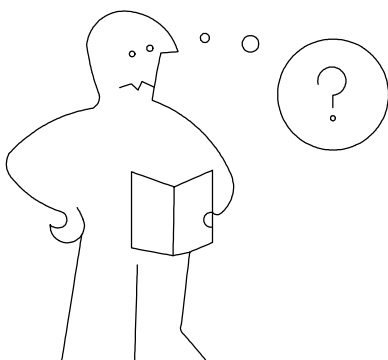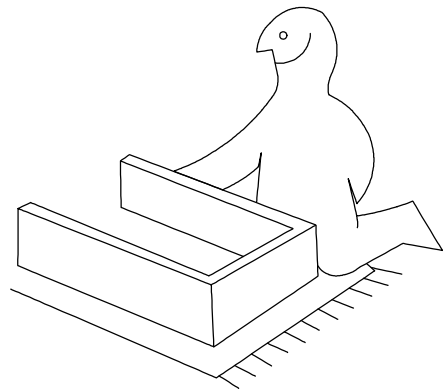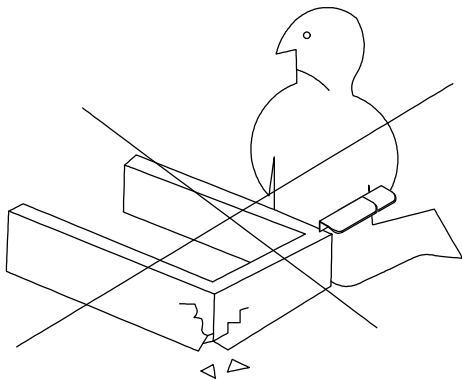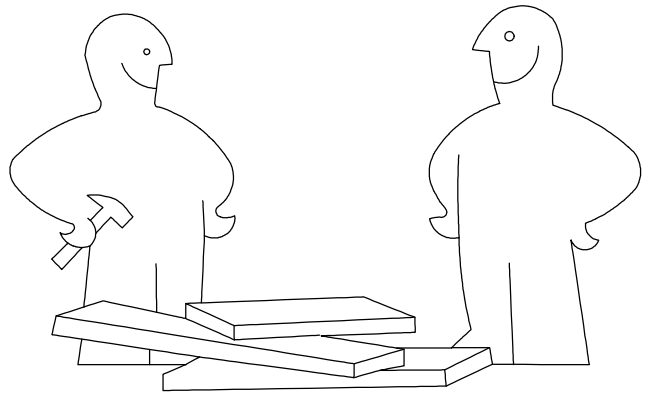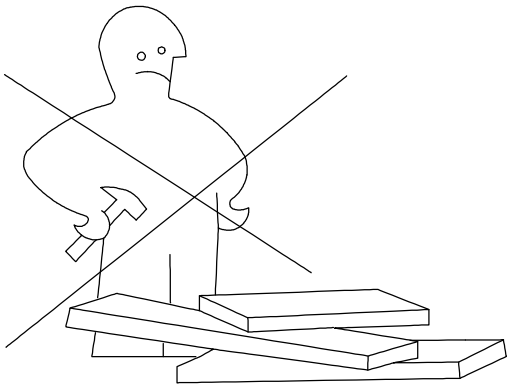

Panel No	Panel Sizes	Quantity
1	1000*400*16	1
2	777*400*16	1
3	604*396*75	1
4	604*396*75	1
5	777*80*16	2
6	588*100*16	1
7	779*420*36	1
8	779*420*36	1
9	598*348*5	2

Panel No	Panel Sizes	Quantity
10	771*192*16	3
11	733*150*12	3
12	350*150*12	3
13	350*150*12	3
14	743*348*5	3
15	337*100*12	3
16	777*60*18	1
17	777*100*18	1
18	152*60*16	1

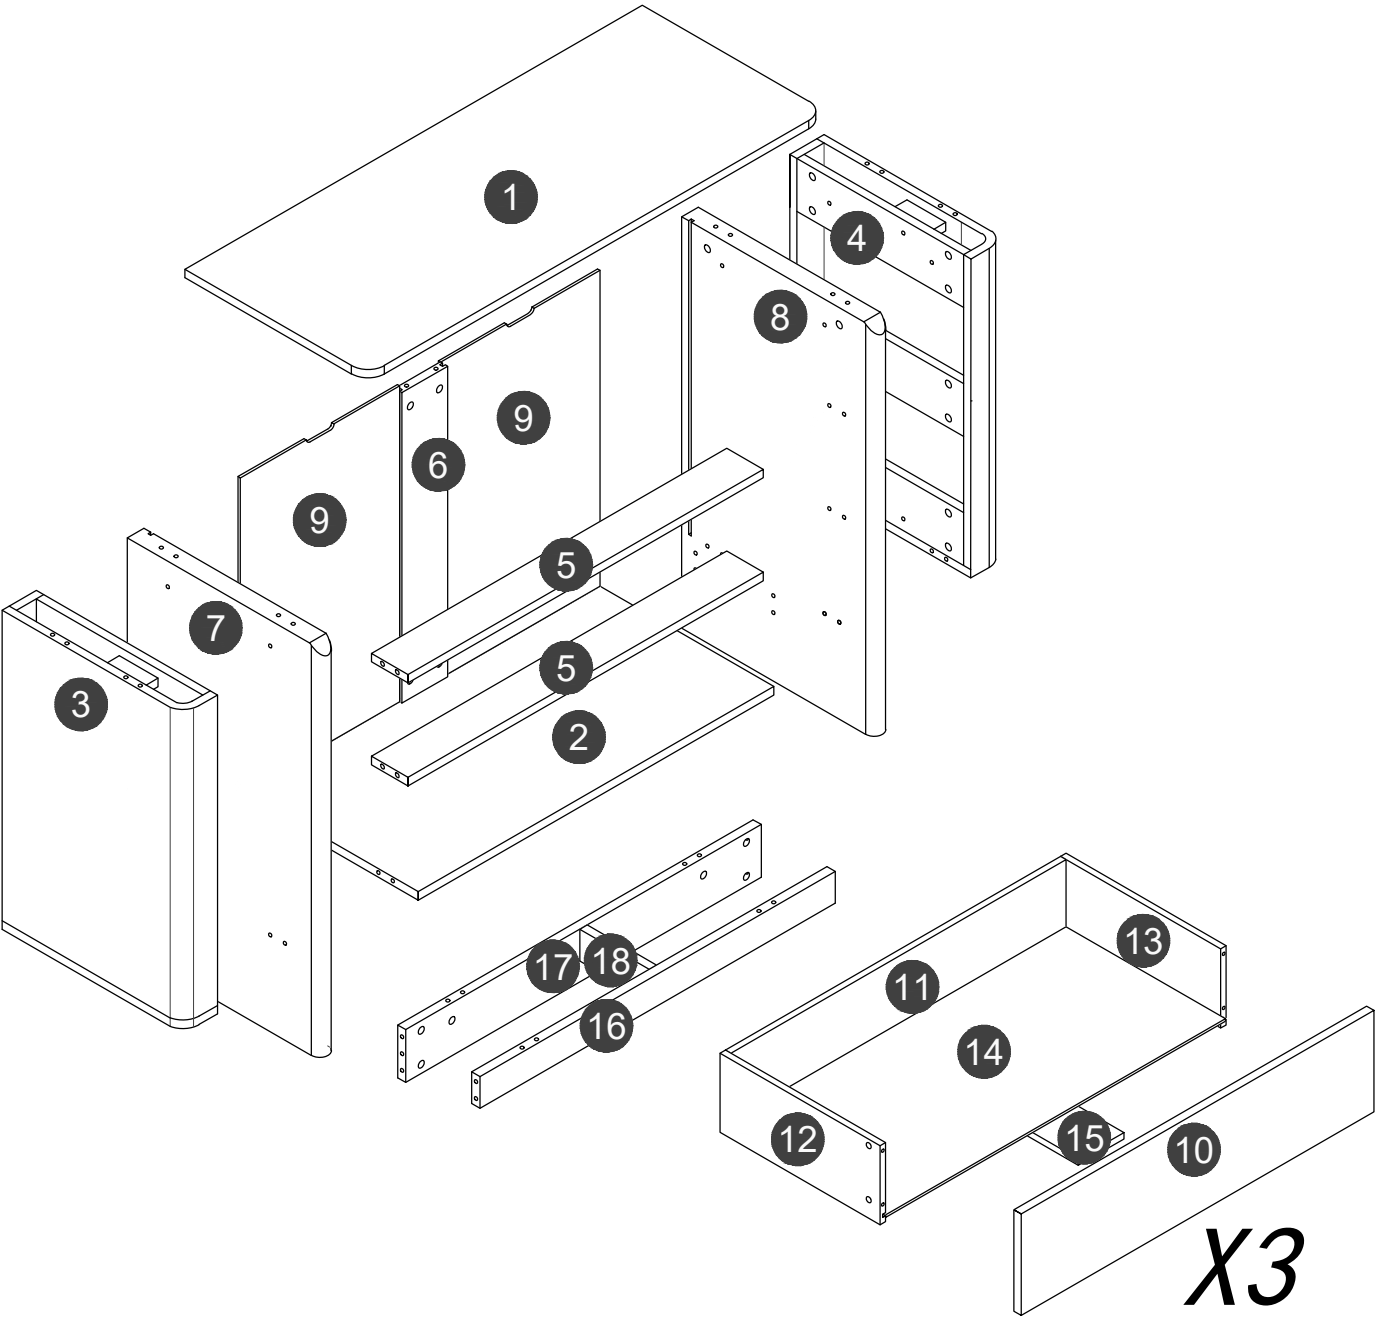


Fittings




M6*40

A1=32




Φ8*40

A2=4



Φ8*30

B=30

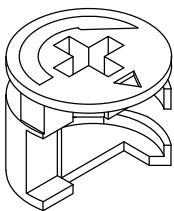


Φ15*12

C=32




Φ21

D=62

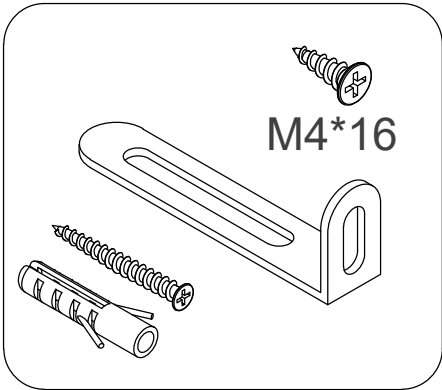


M4*16


F2=2

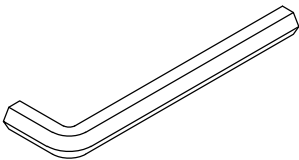

H =1

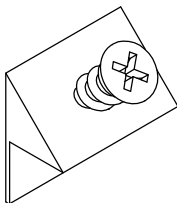


E=8




M3.5*12


V1=24

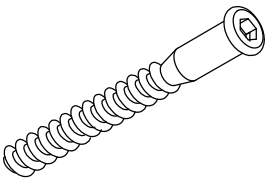

Q=4

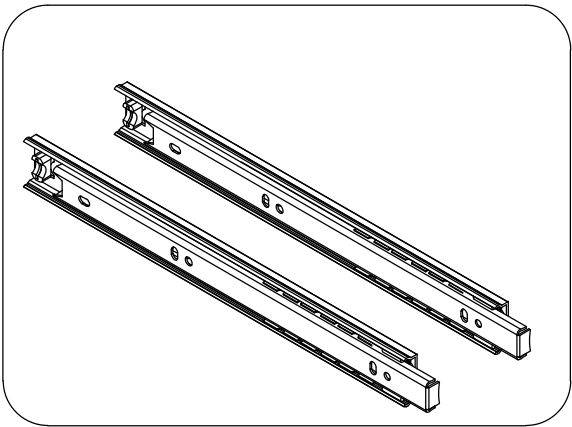

N=3

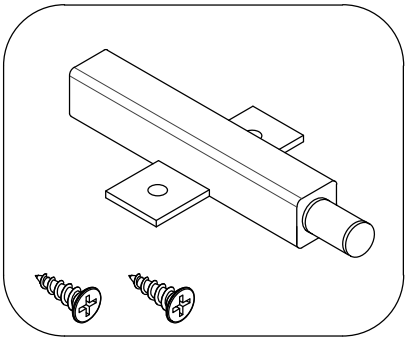

K=3




P=30




O=30


STEP 1

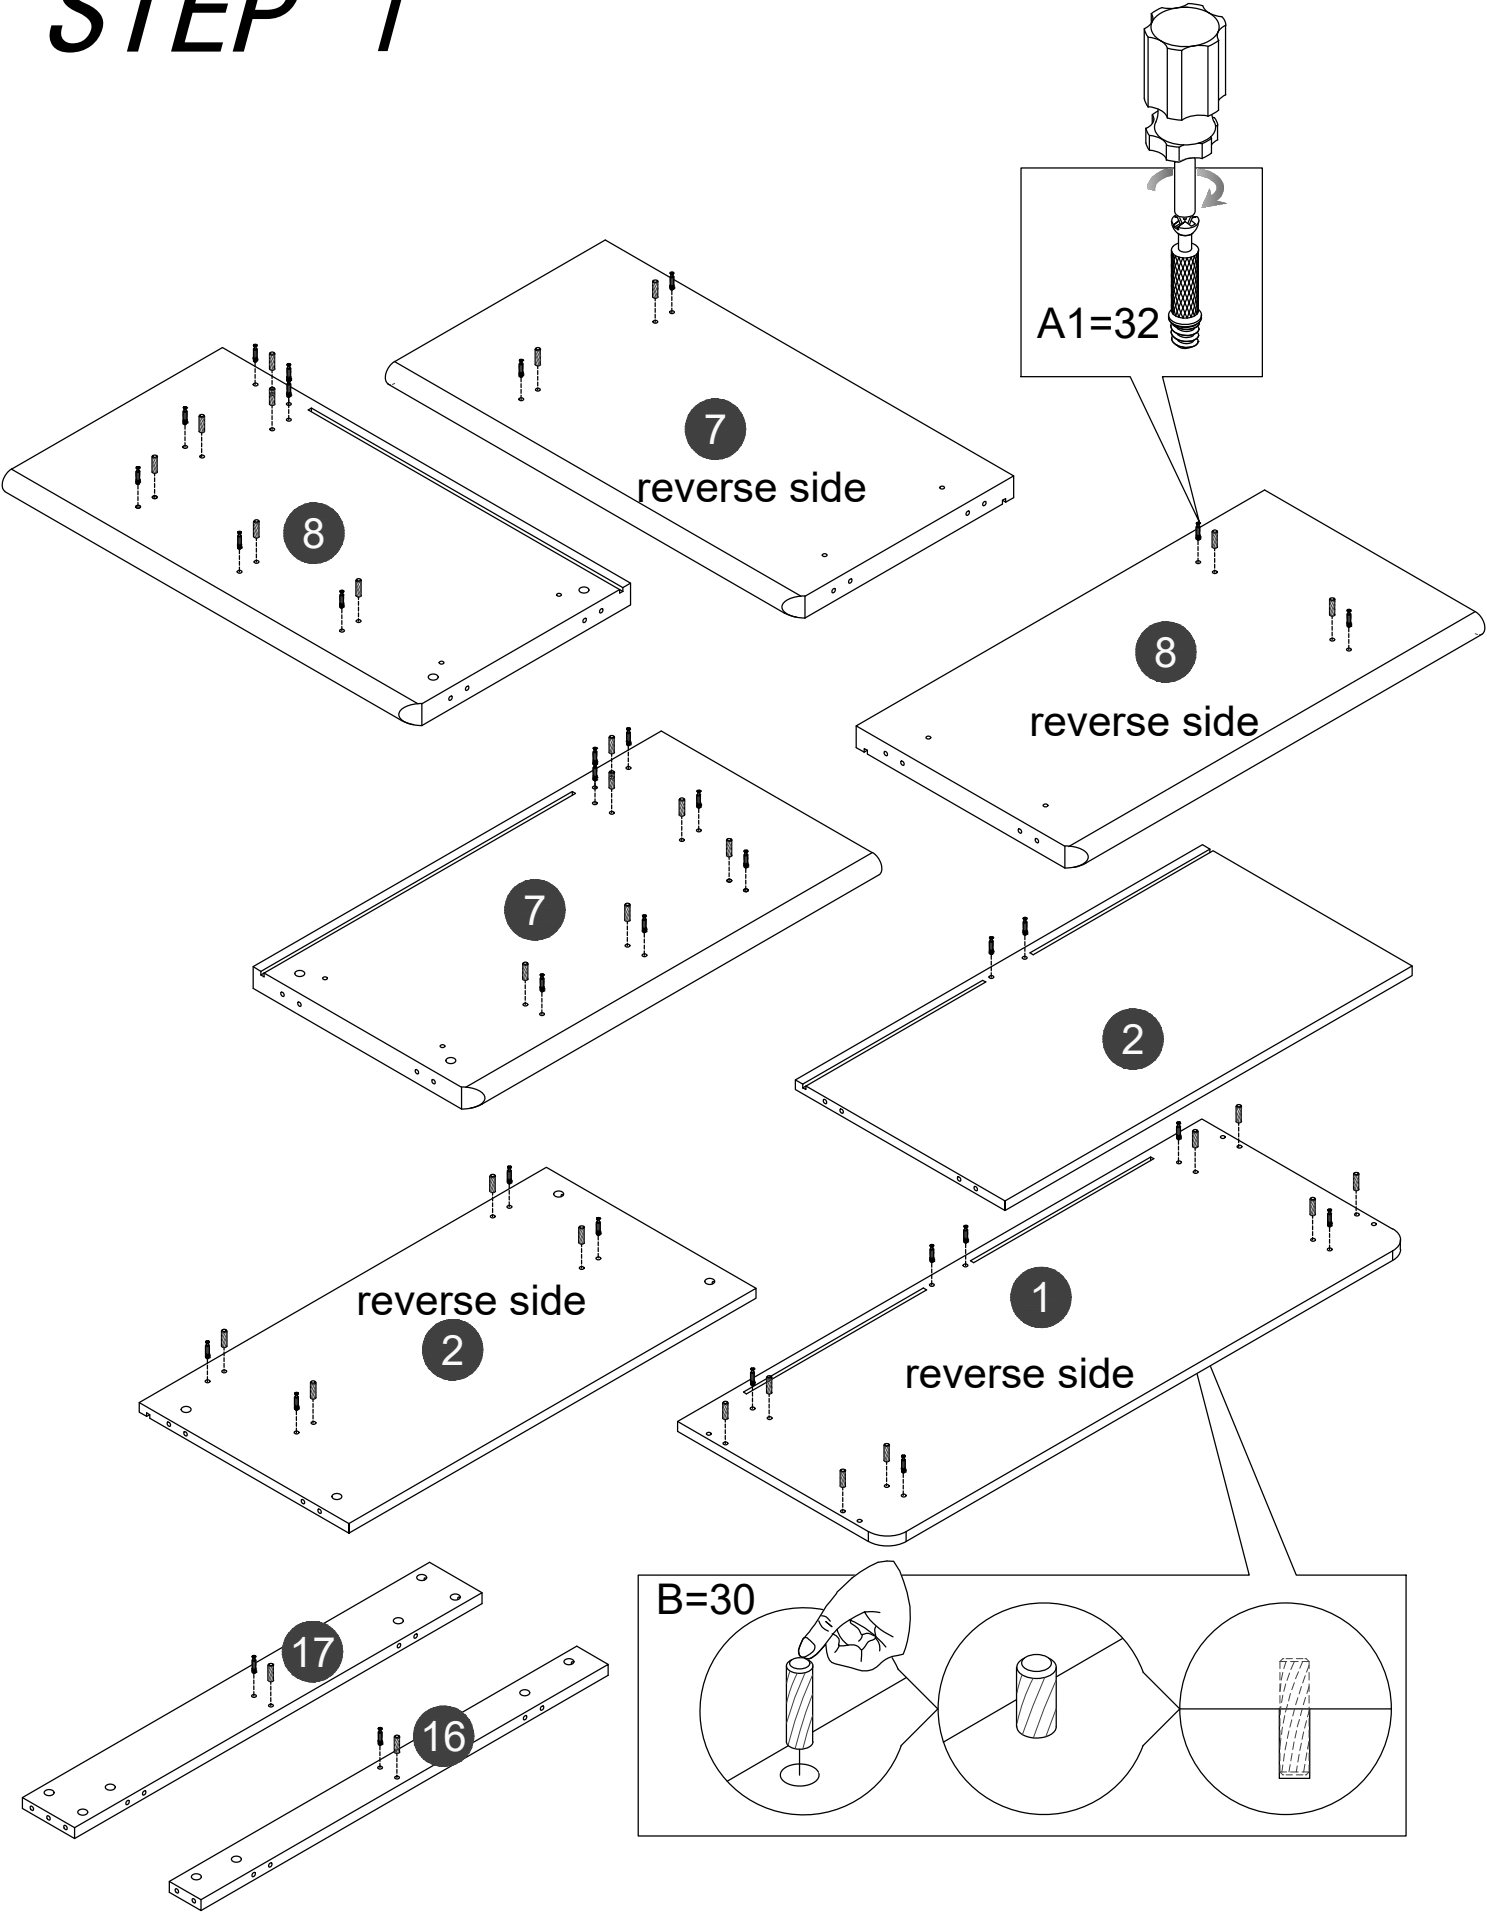


STEP 2

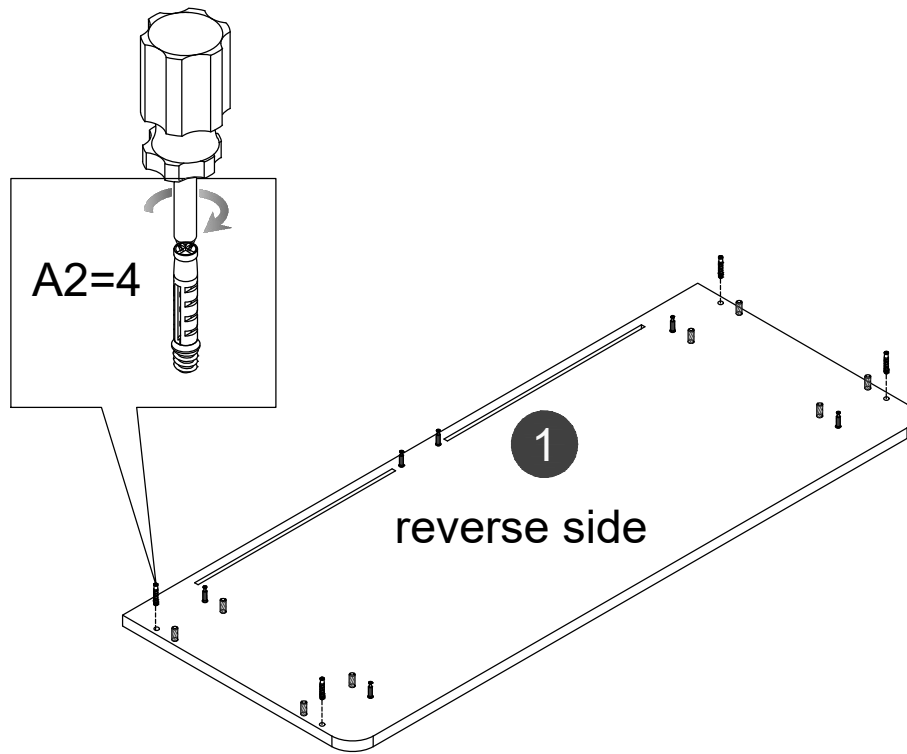


STEP 3

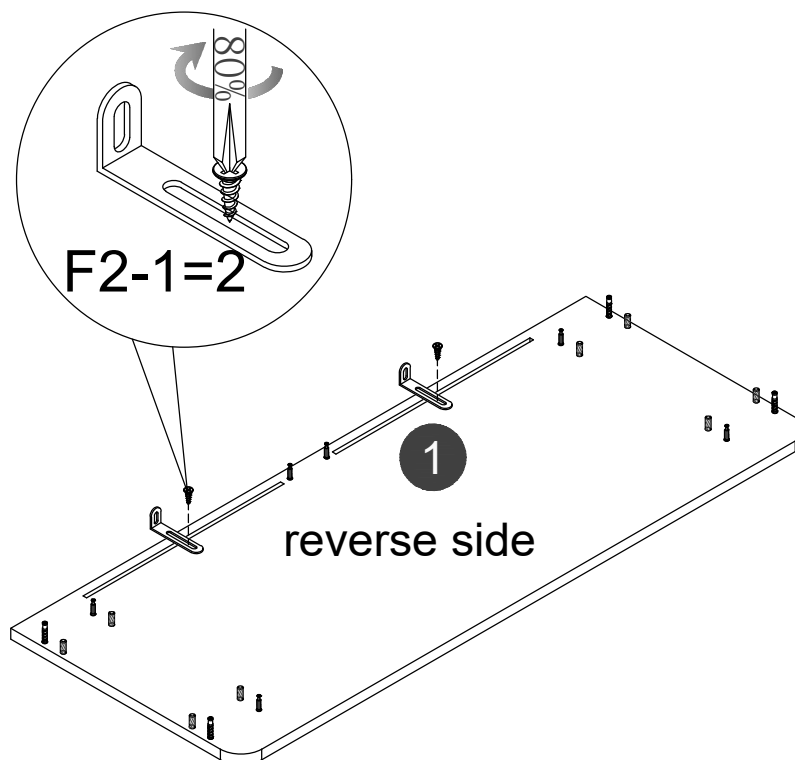


STEP 4

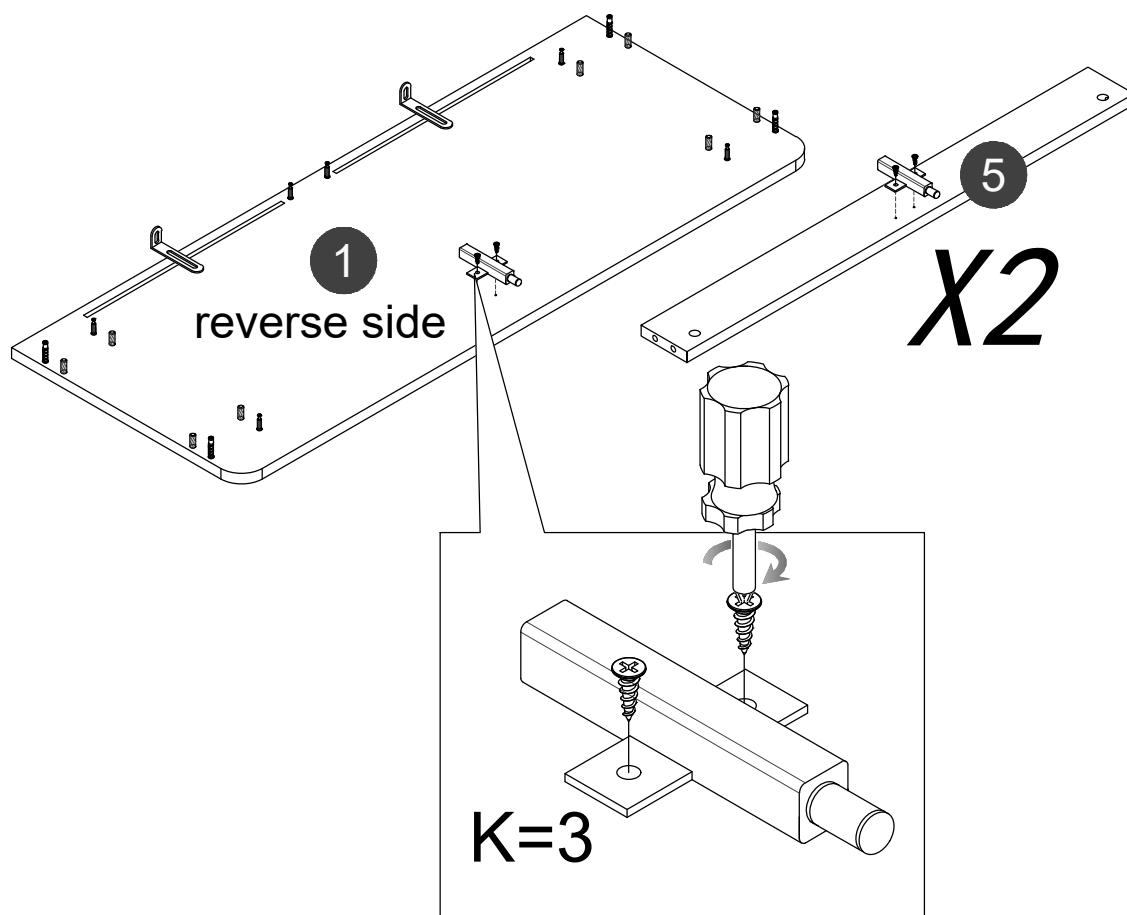


STEP 5

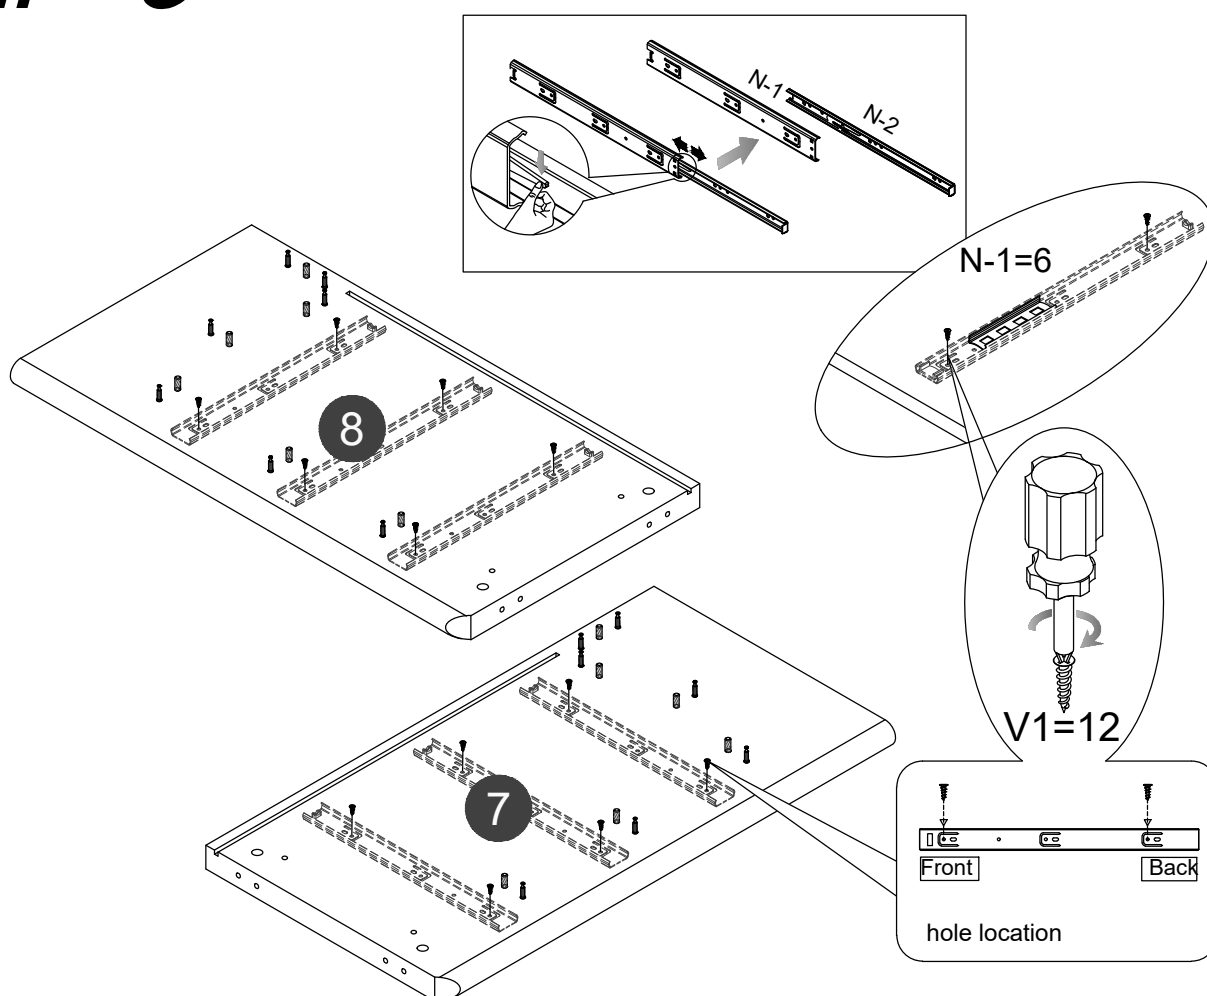


STEP 6

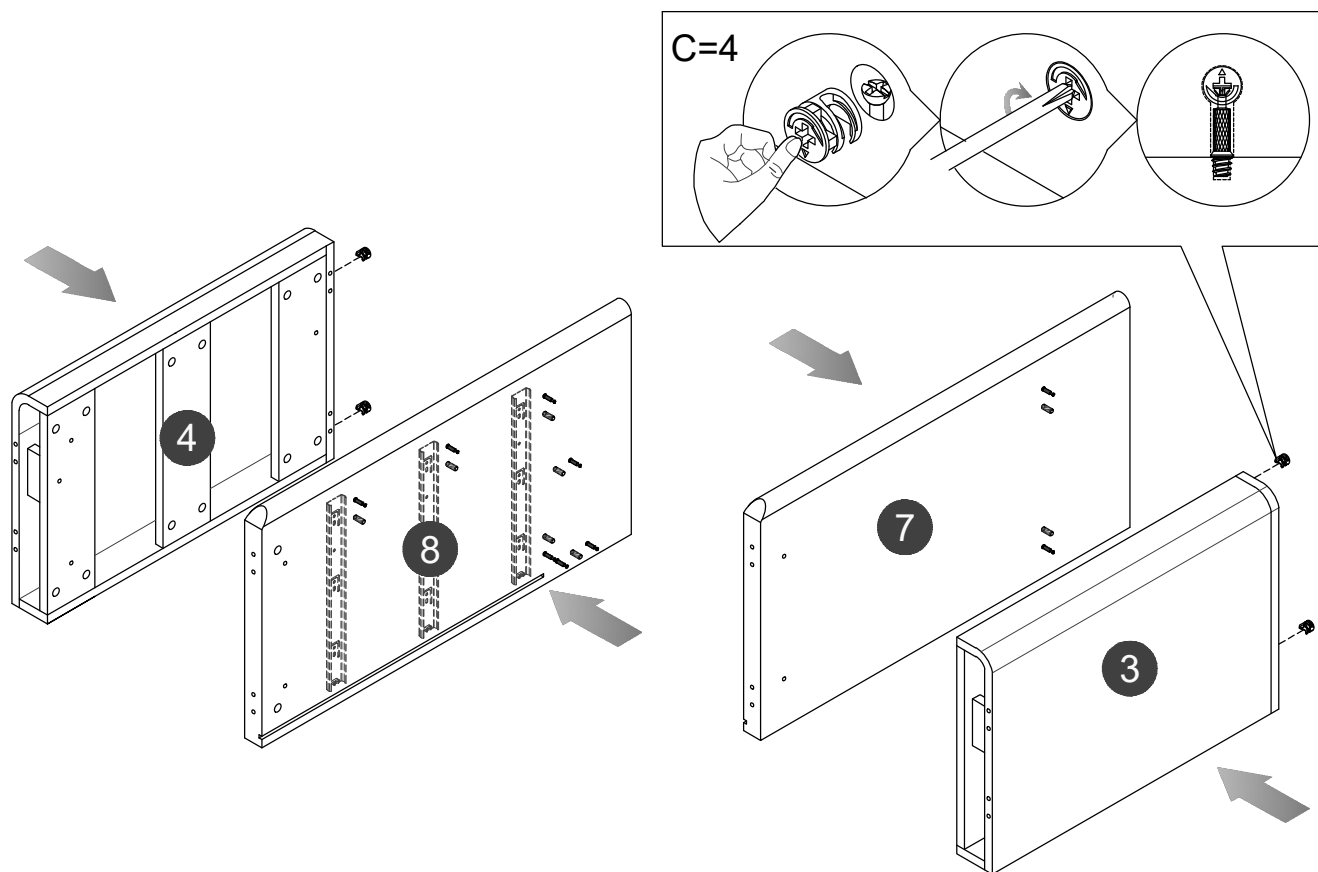


STEP 7

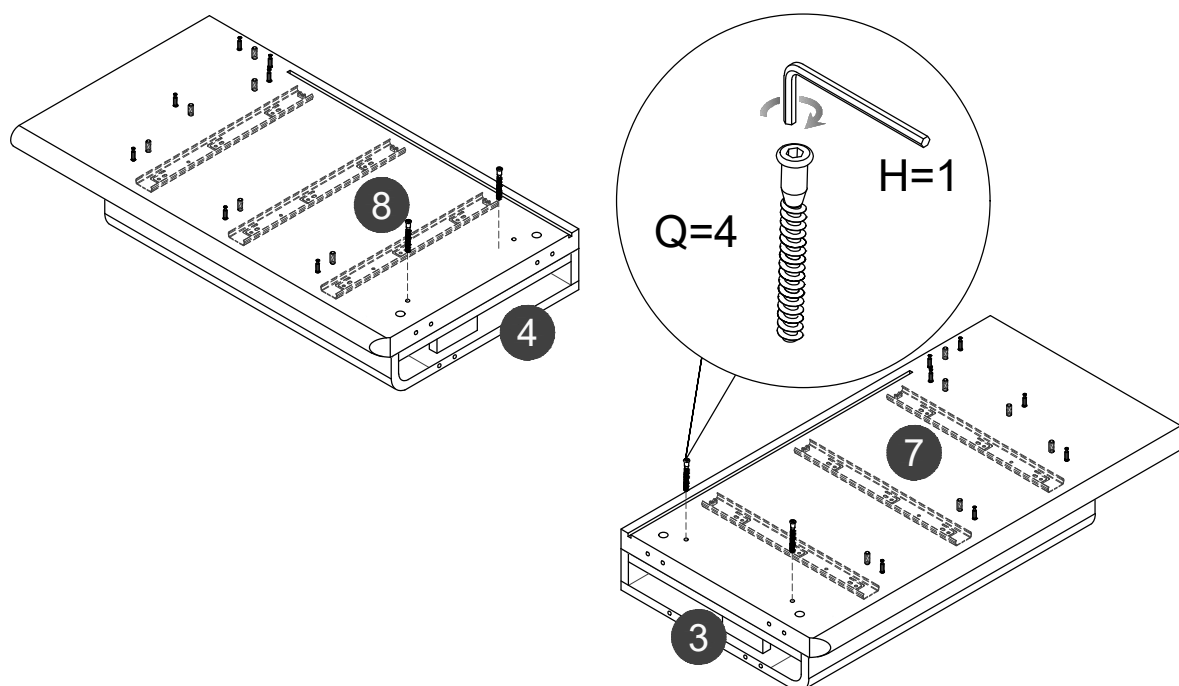


STEP 8

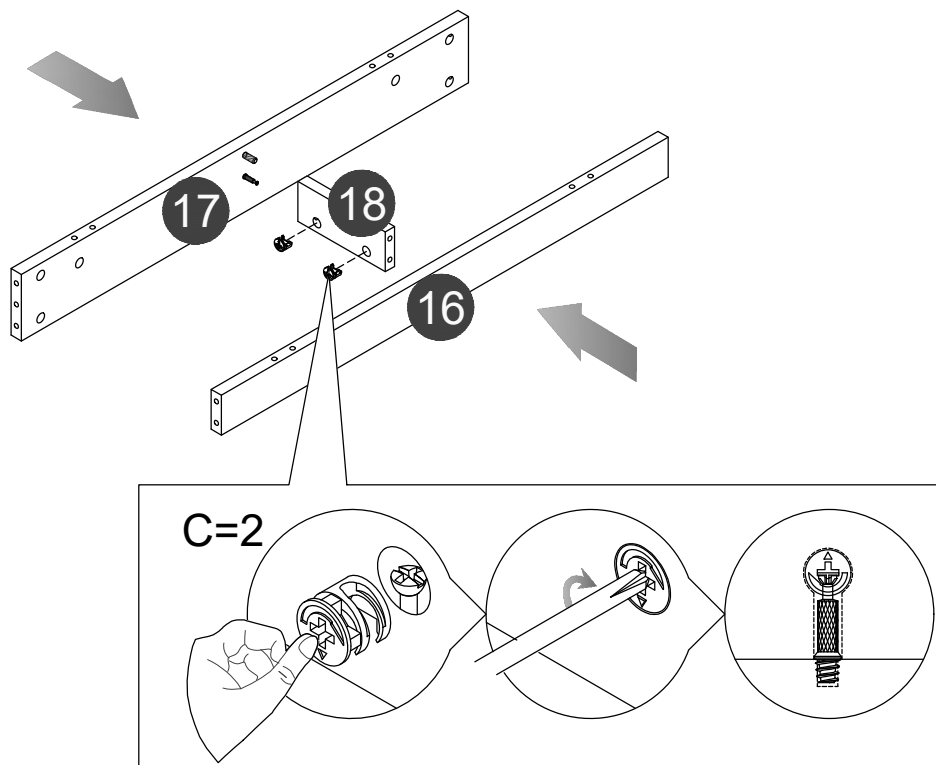


STEP 9

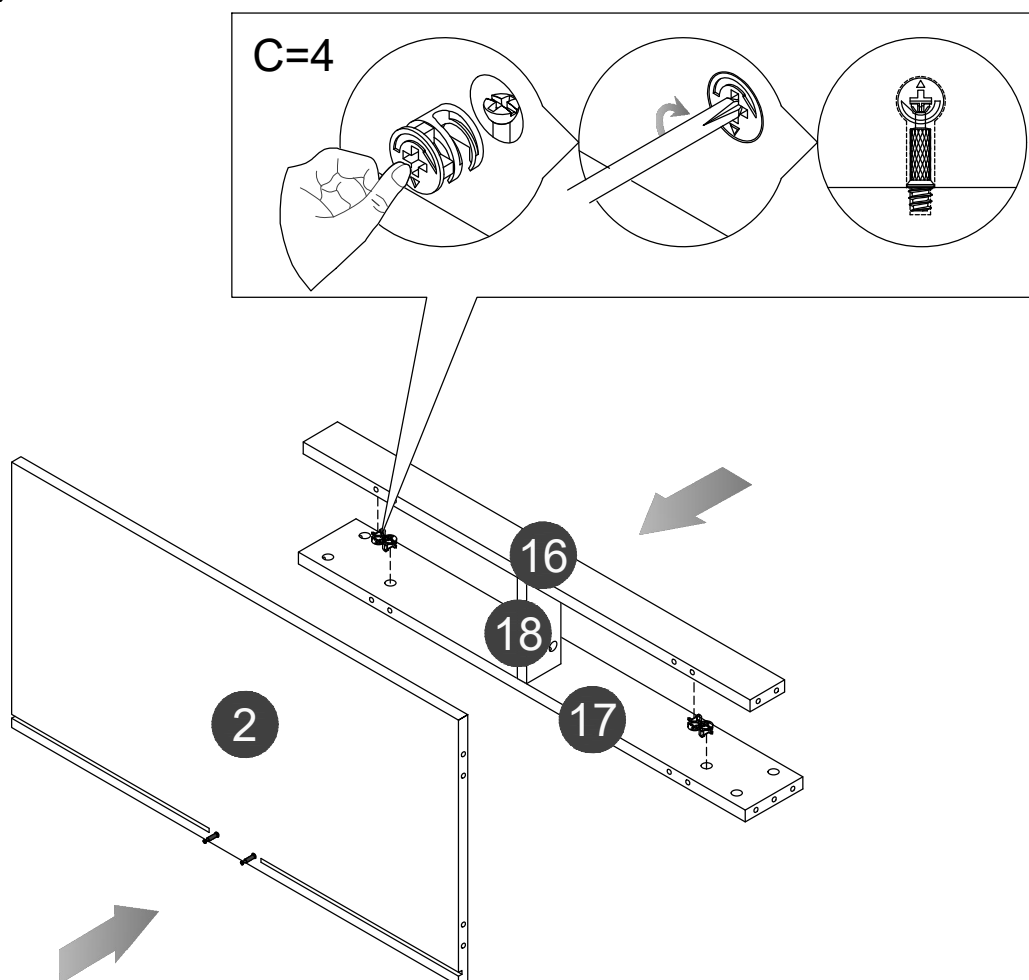


STEP 10

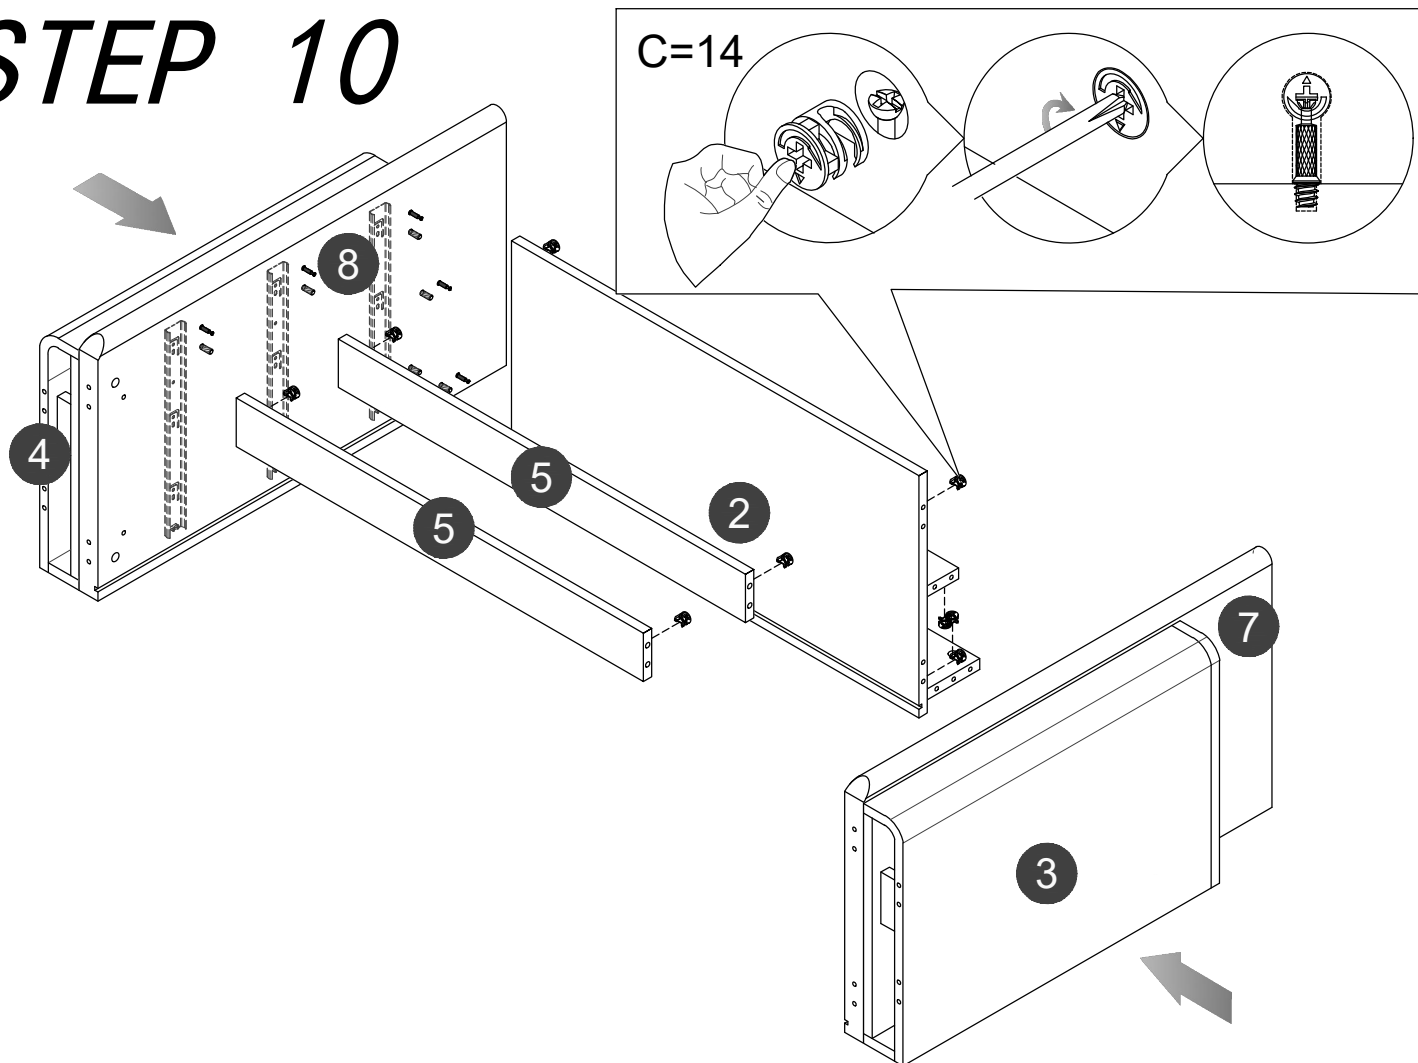


STEP 11

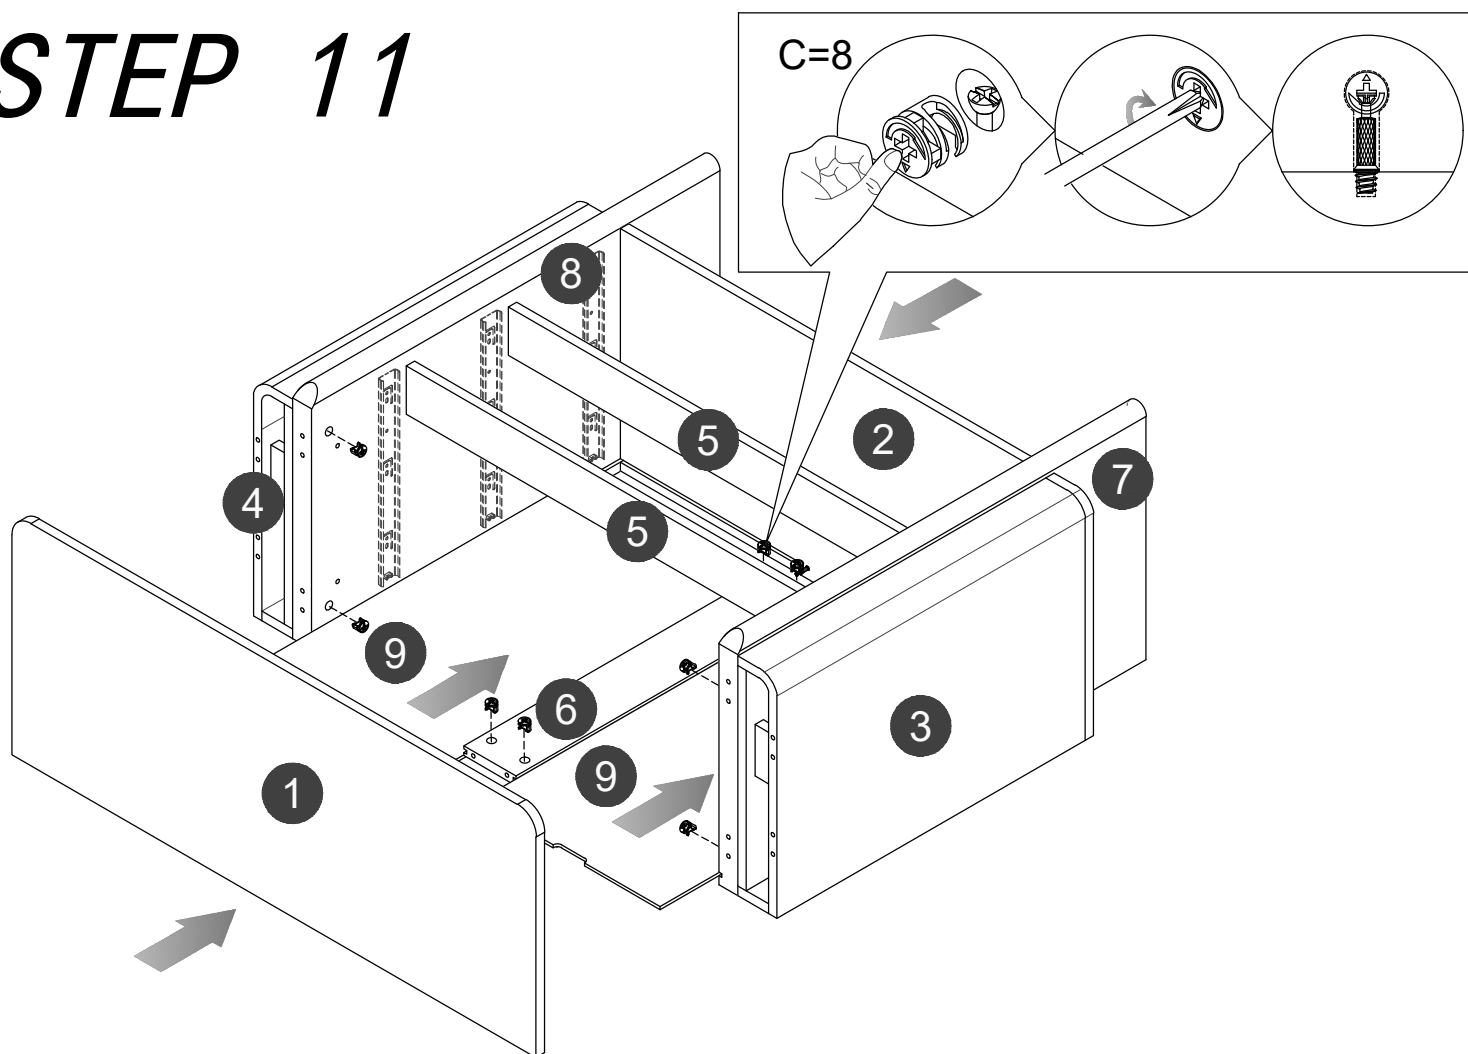


STEP 12

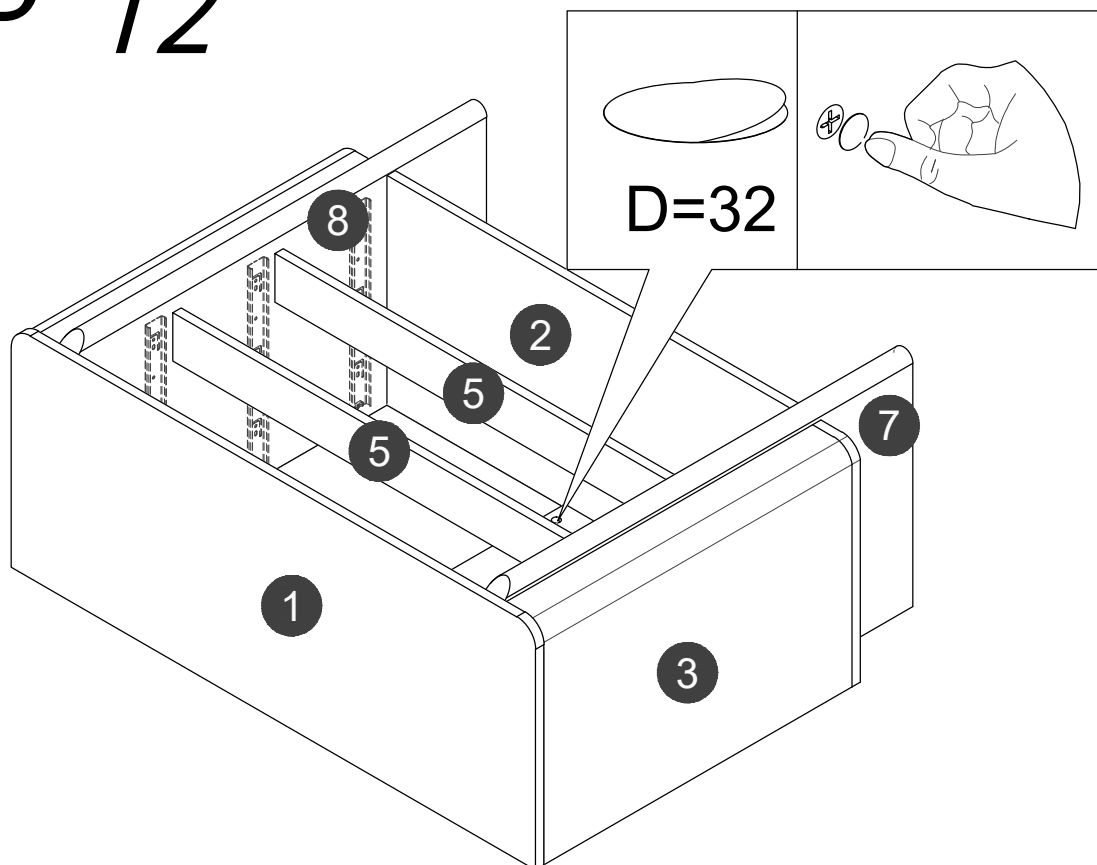


STEP 13

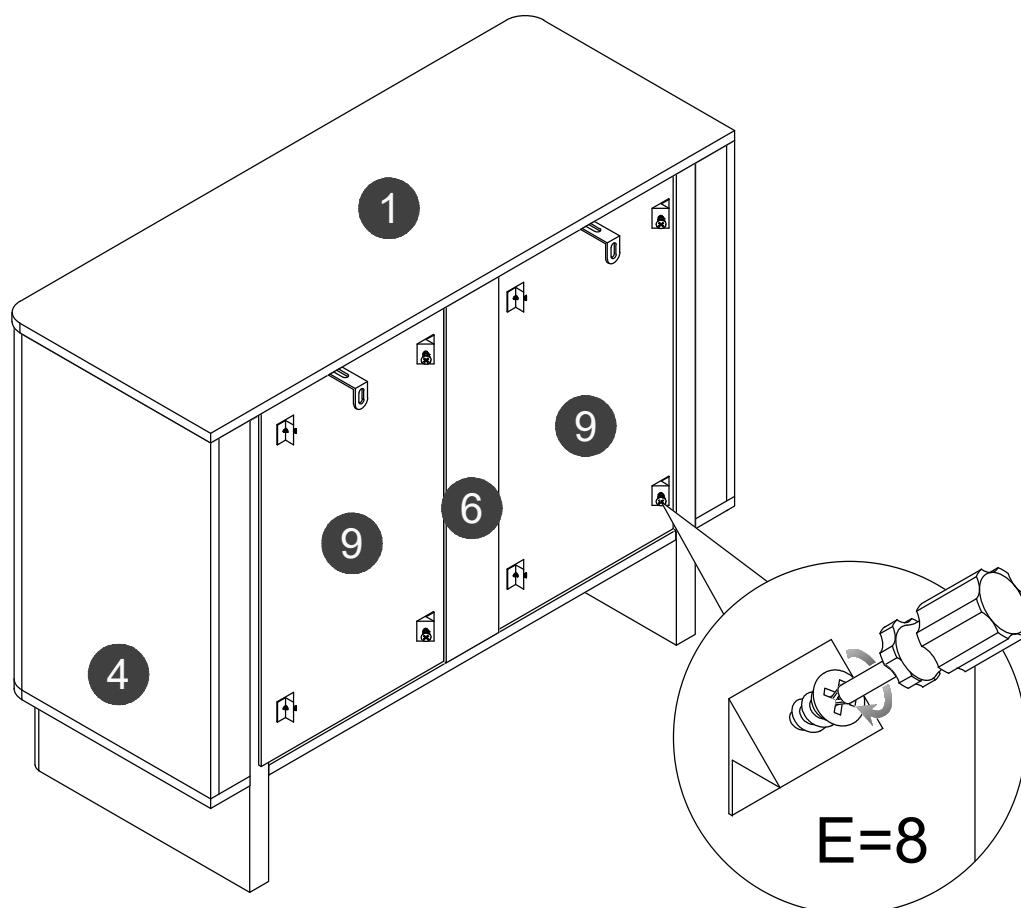

STEP 14

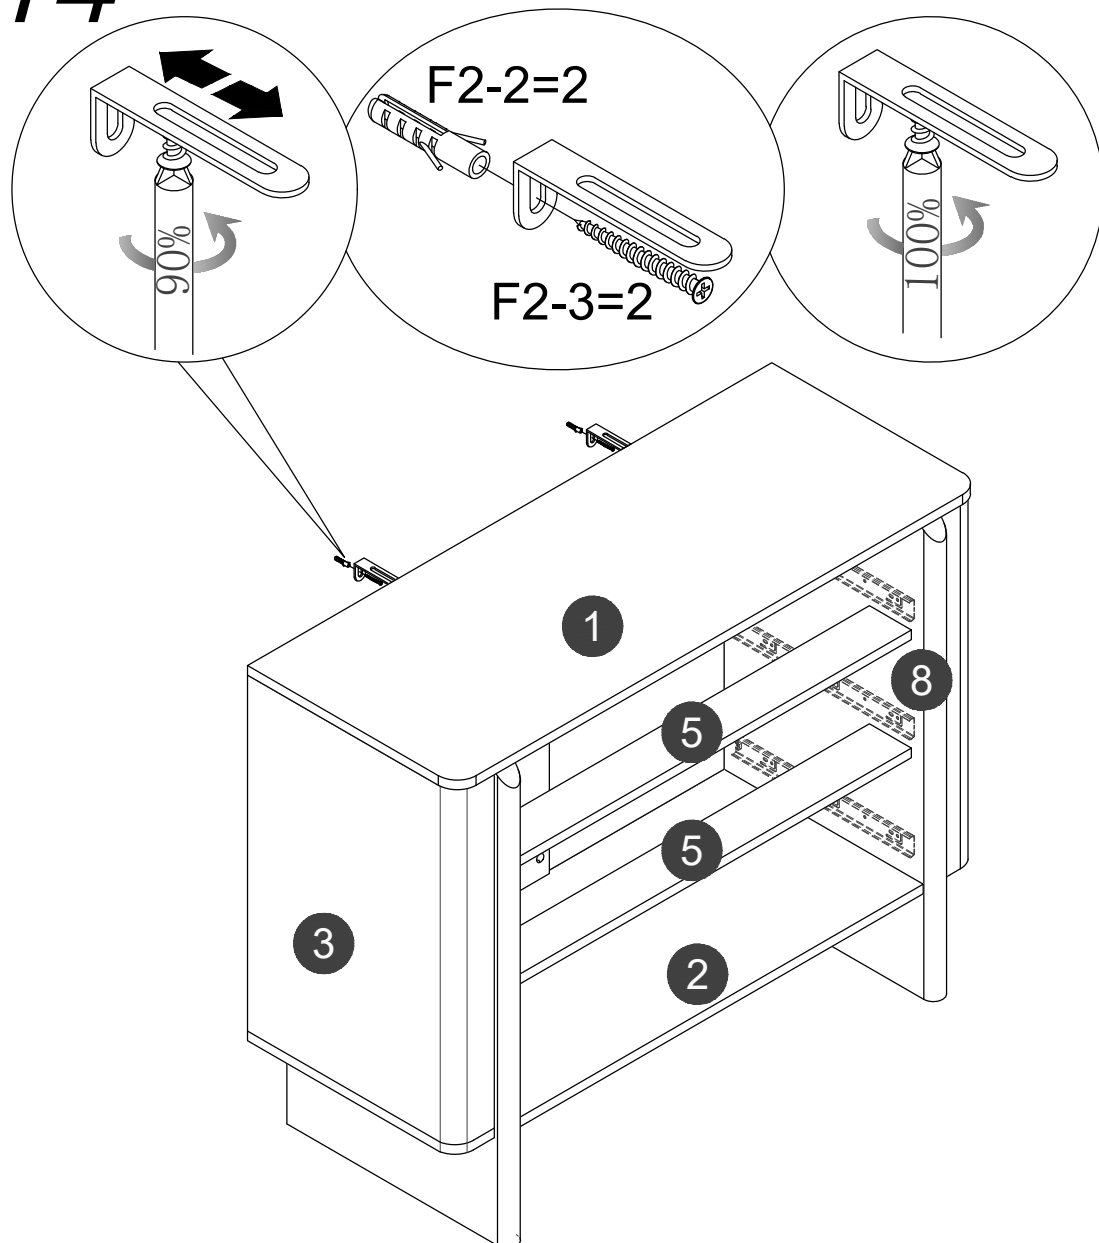


STEP 15

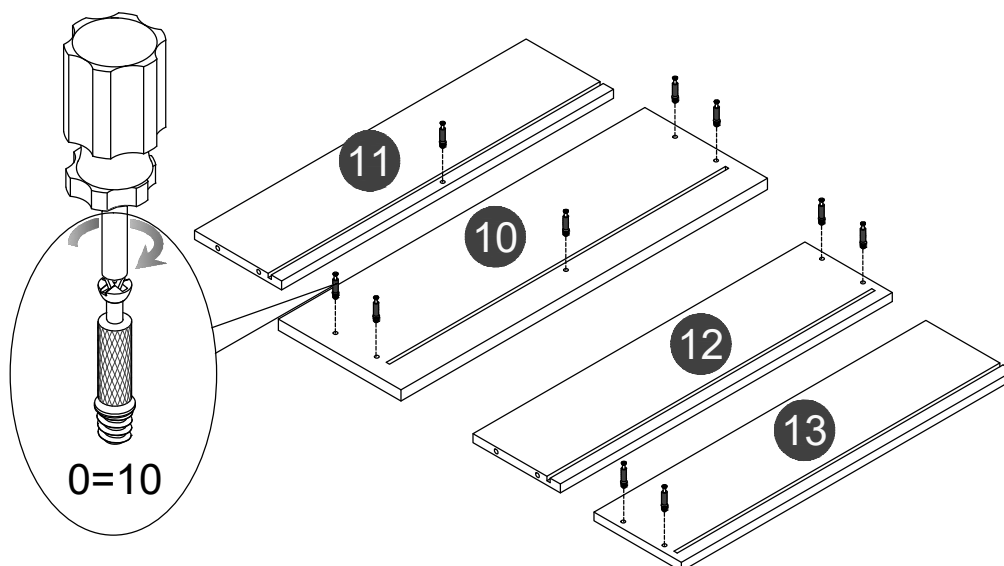


X3

STEP 16

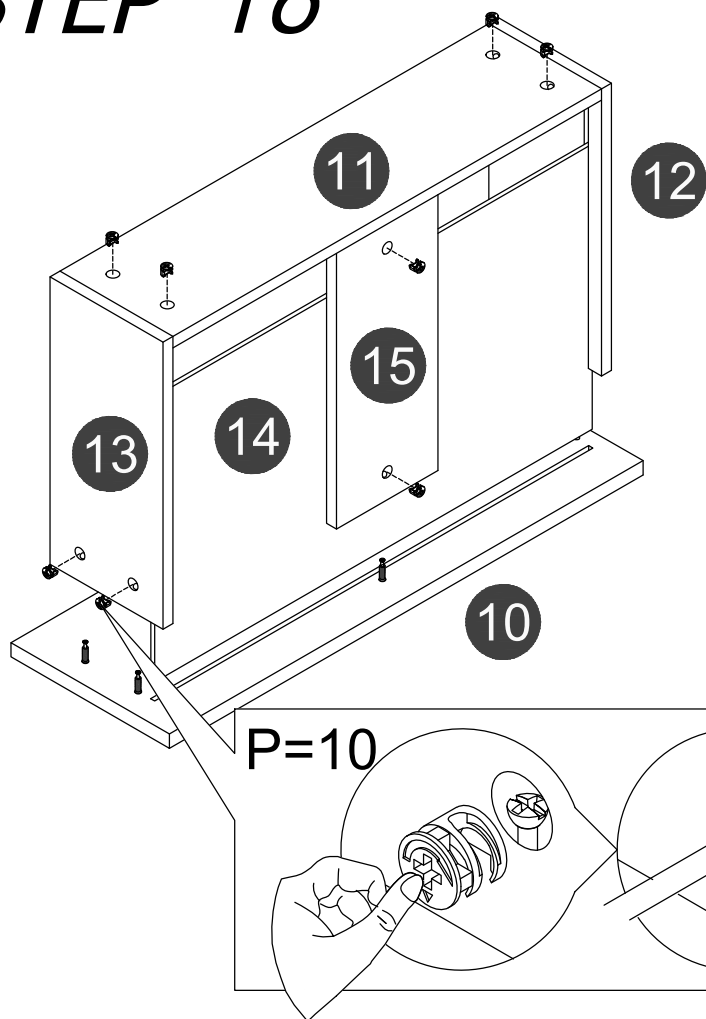


X3

STEP 17

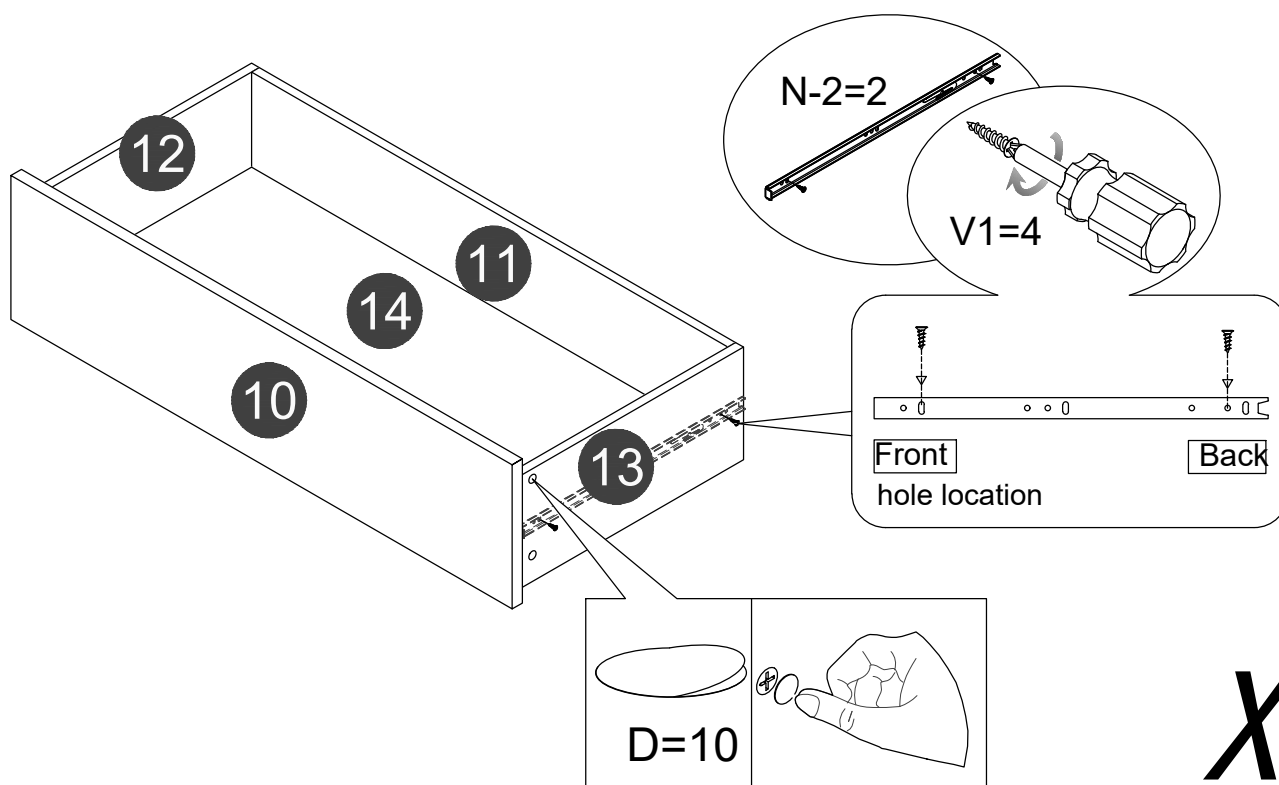


X3


STEP 18

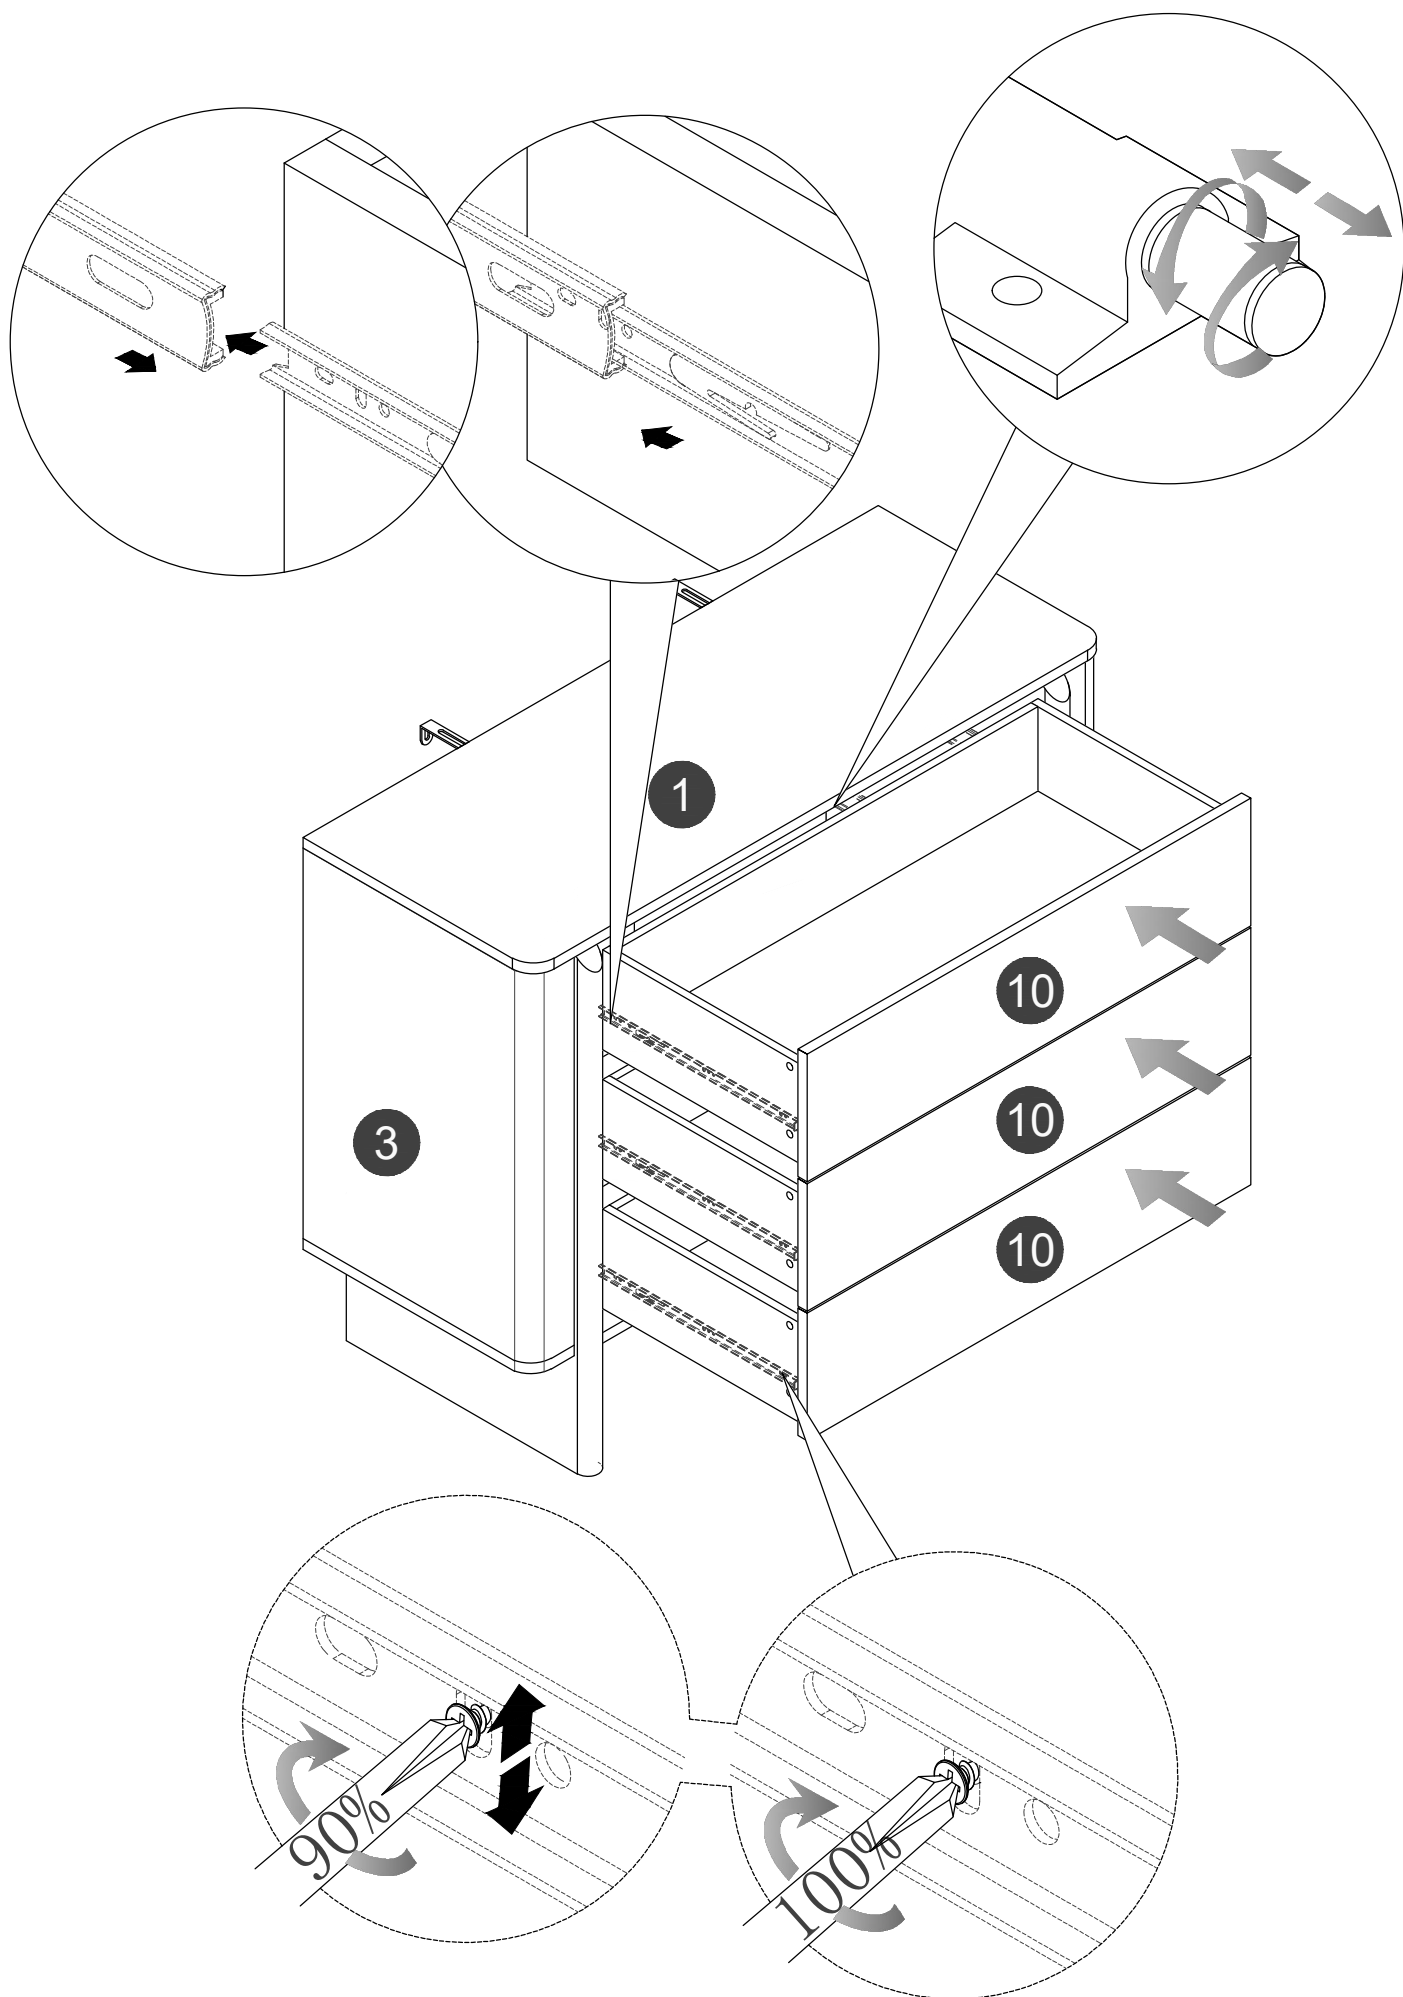

STEP 19

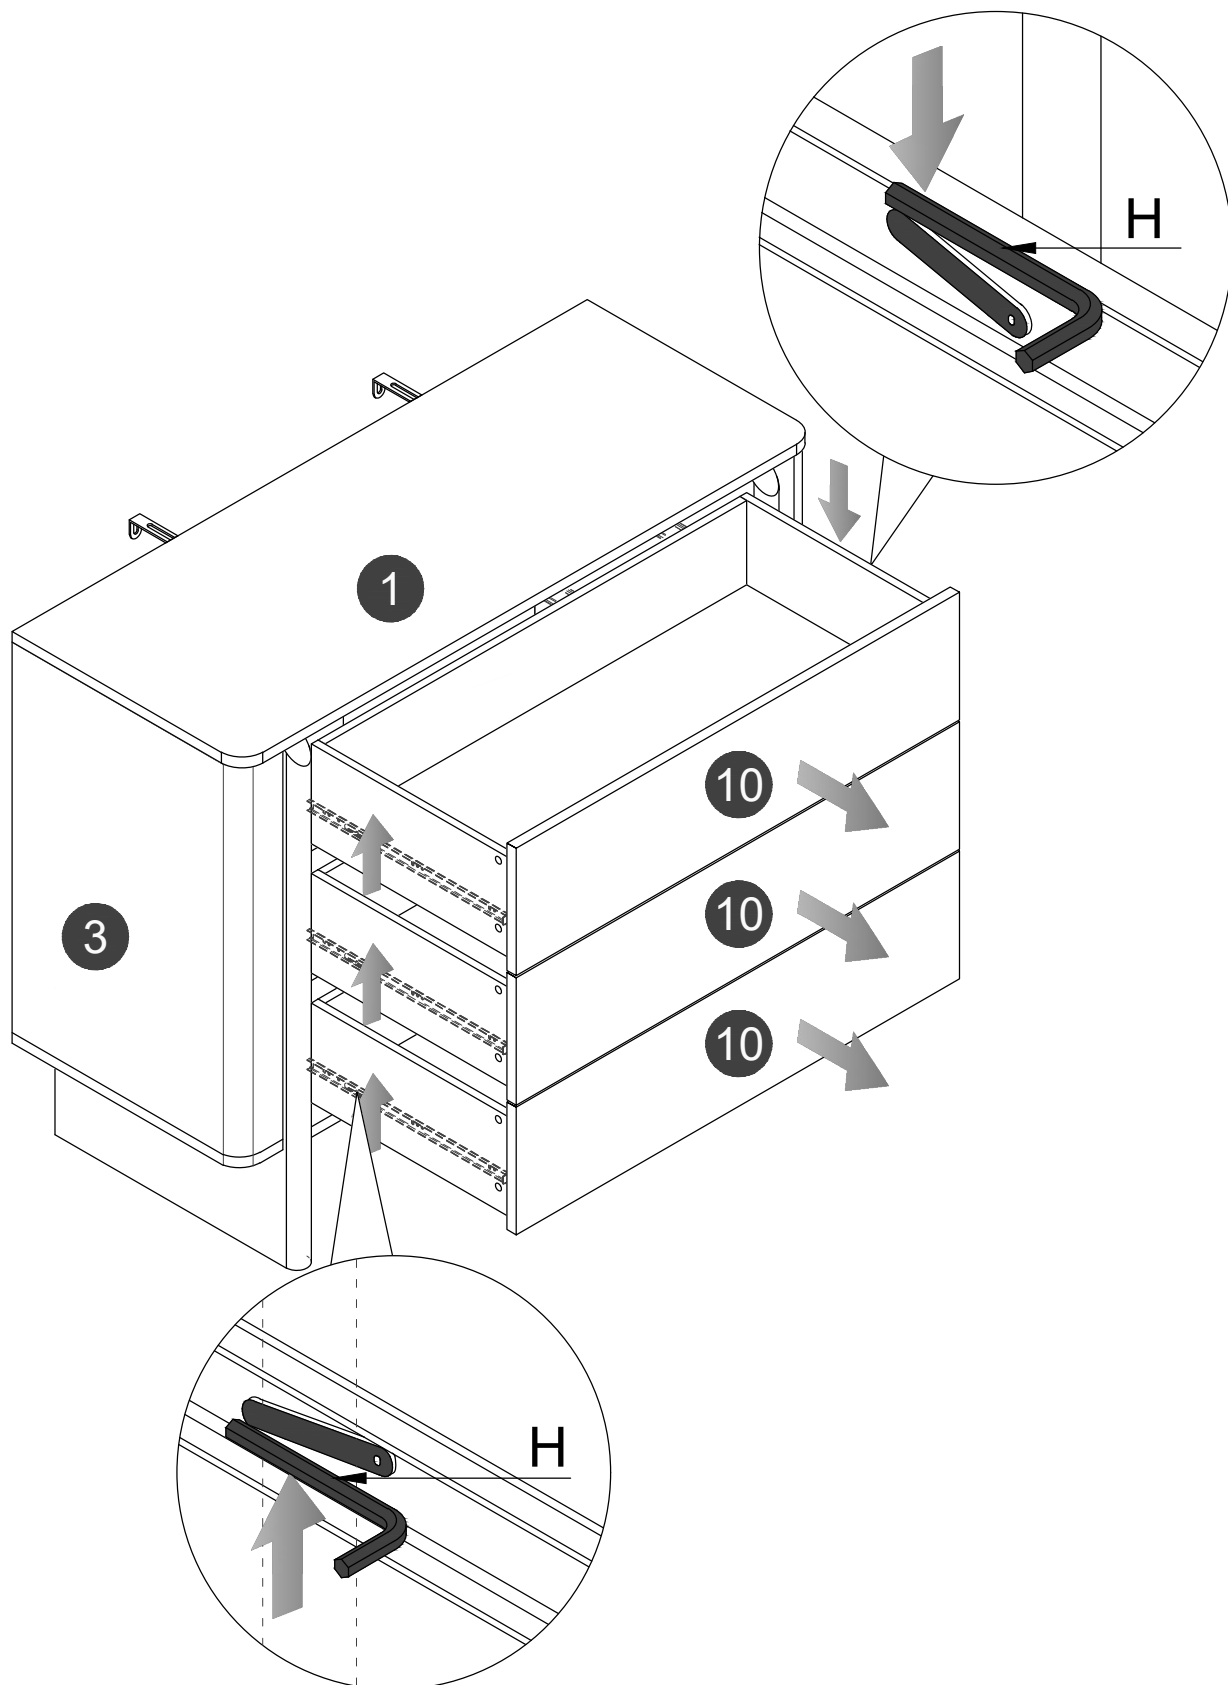

STEP 20

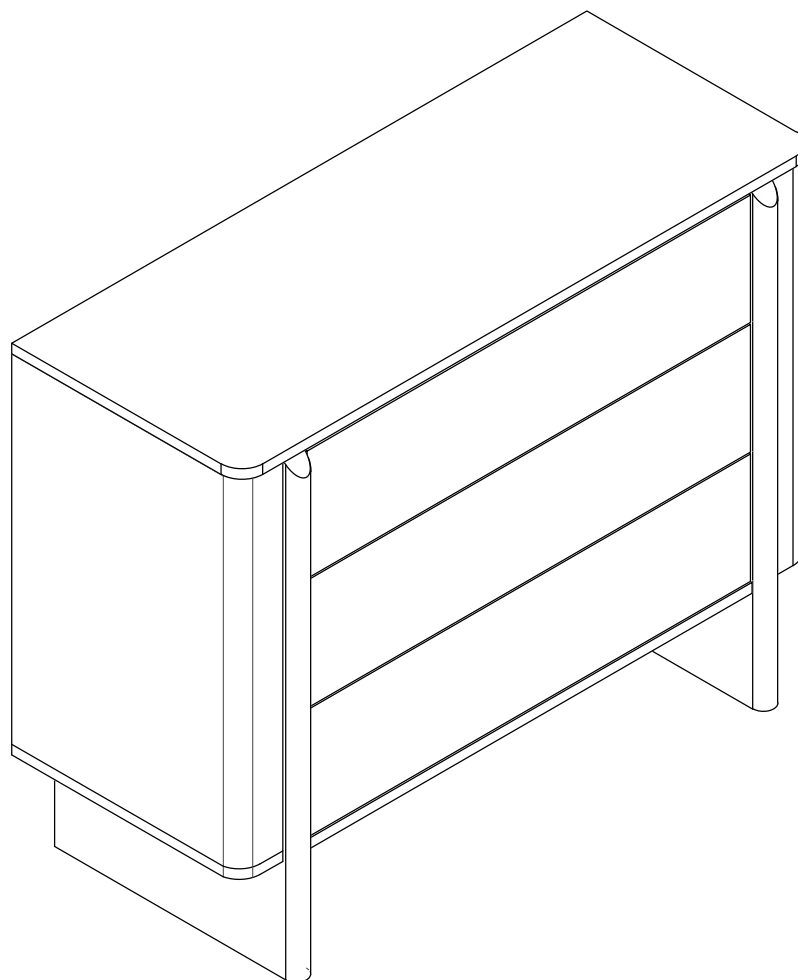

Finish