

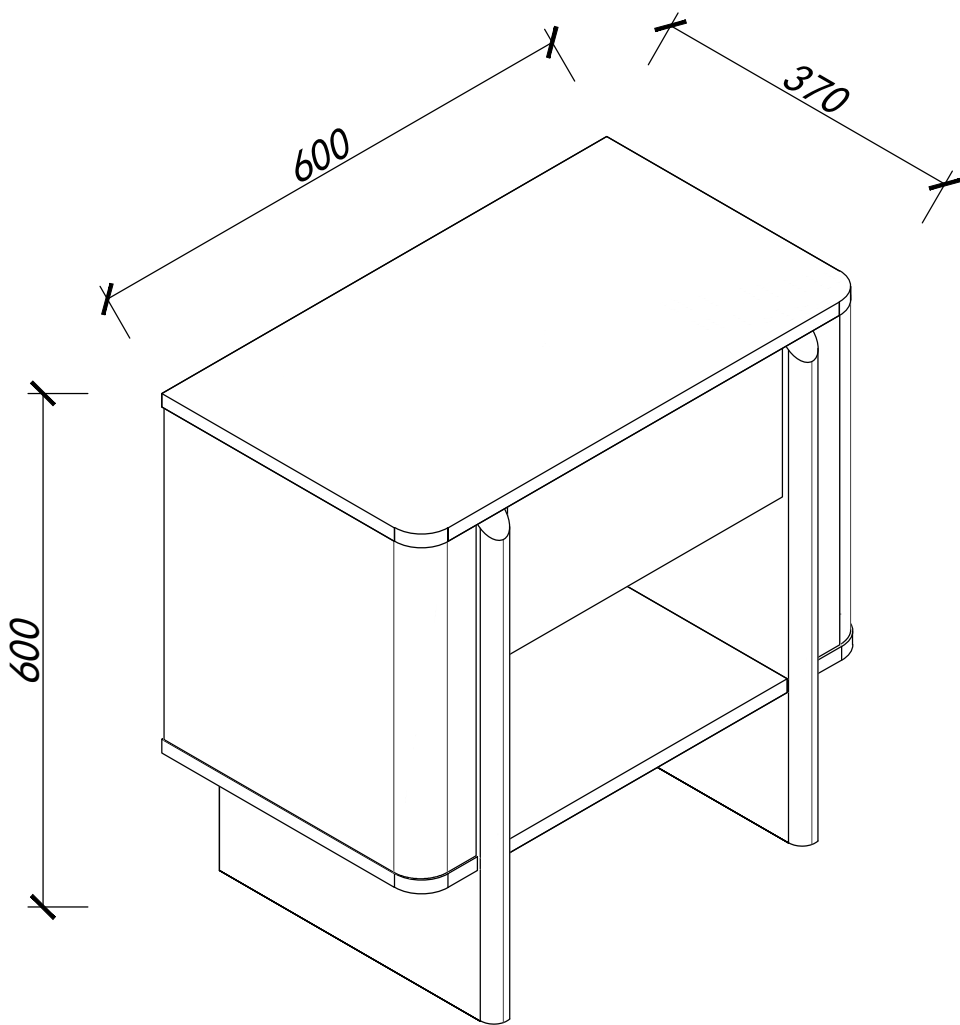
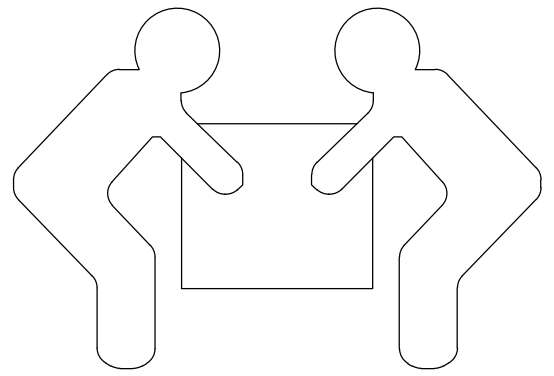








# KOKETTO

## Assembly Instruction

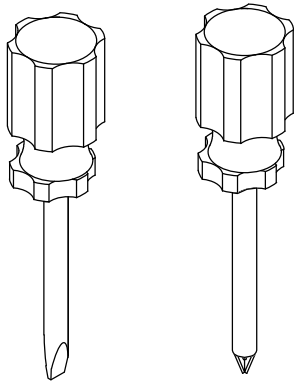

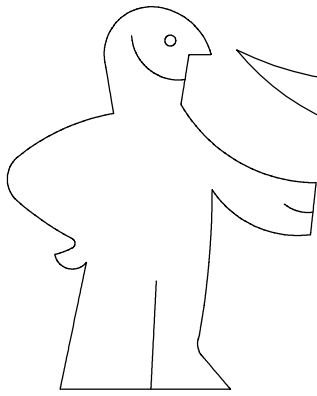


2 person recommended

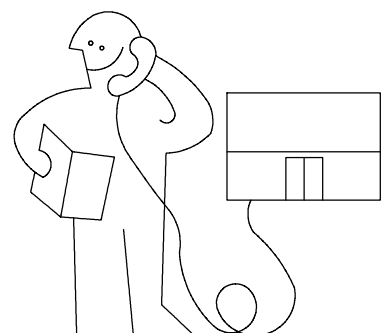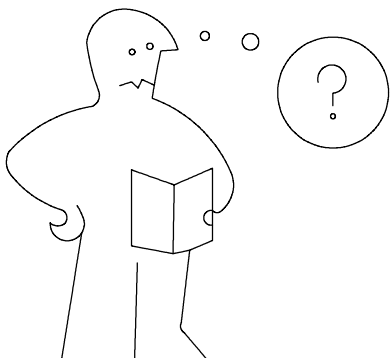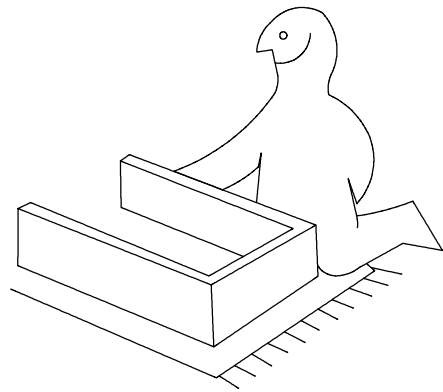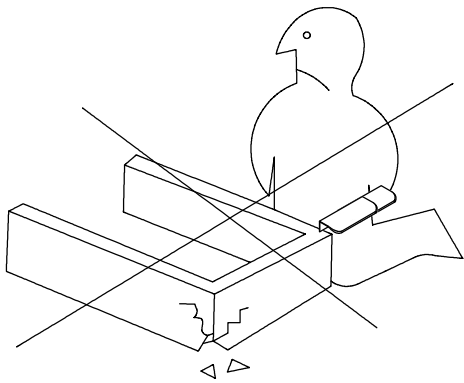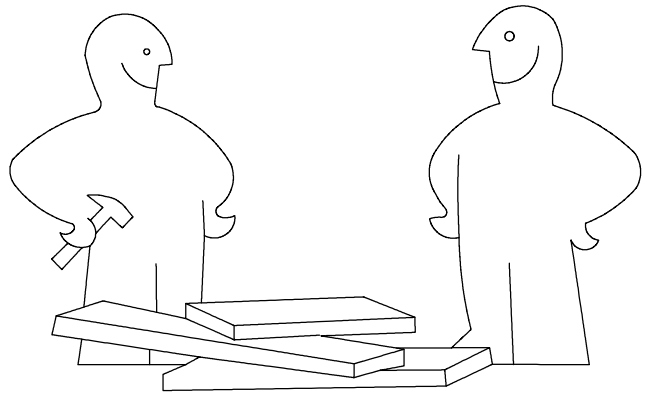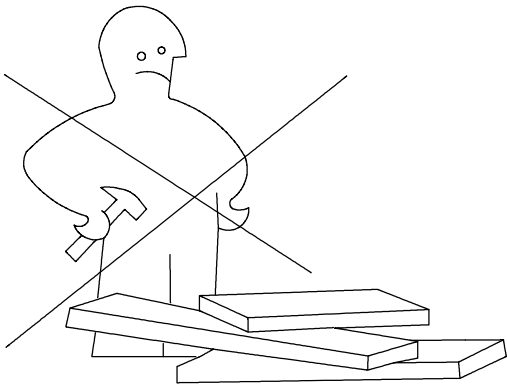


| Panel No | Panel Sizes | Quantity |
|----------|-------------|----------|
| 1        | 600*350*16  | 1        |
| 2        | 377*350*16  | 1        |
| 3        | 404*346*75  | 1        |
| 4        | 404*346*75  | 1        |
| 5        | 579*370*36  | 1        |
| 6        | 579*370*36  | 1        |
| 7        | 377*60*18   | 1        |

| Panel No | Panel Sizes | Quantity |
|----------|-------------|----------|
| 8        | 377*100*18  | 1        |
| 9        | 398*387*5   | 1        |
| 10       | 371*190*16  | 1        |
| 11       | 333*150*12  | 1        |
| 12       | 300*150*12  | 1        |
| 13       | 300*150*12  | 1        |
| 14       | 343*298*5   | 1        |

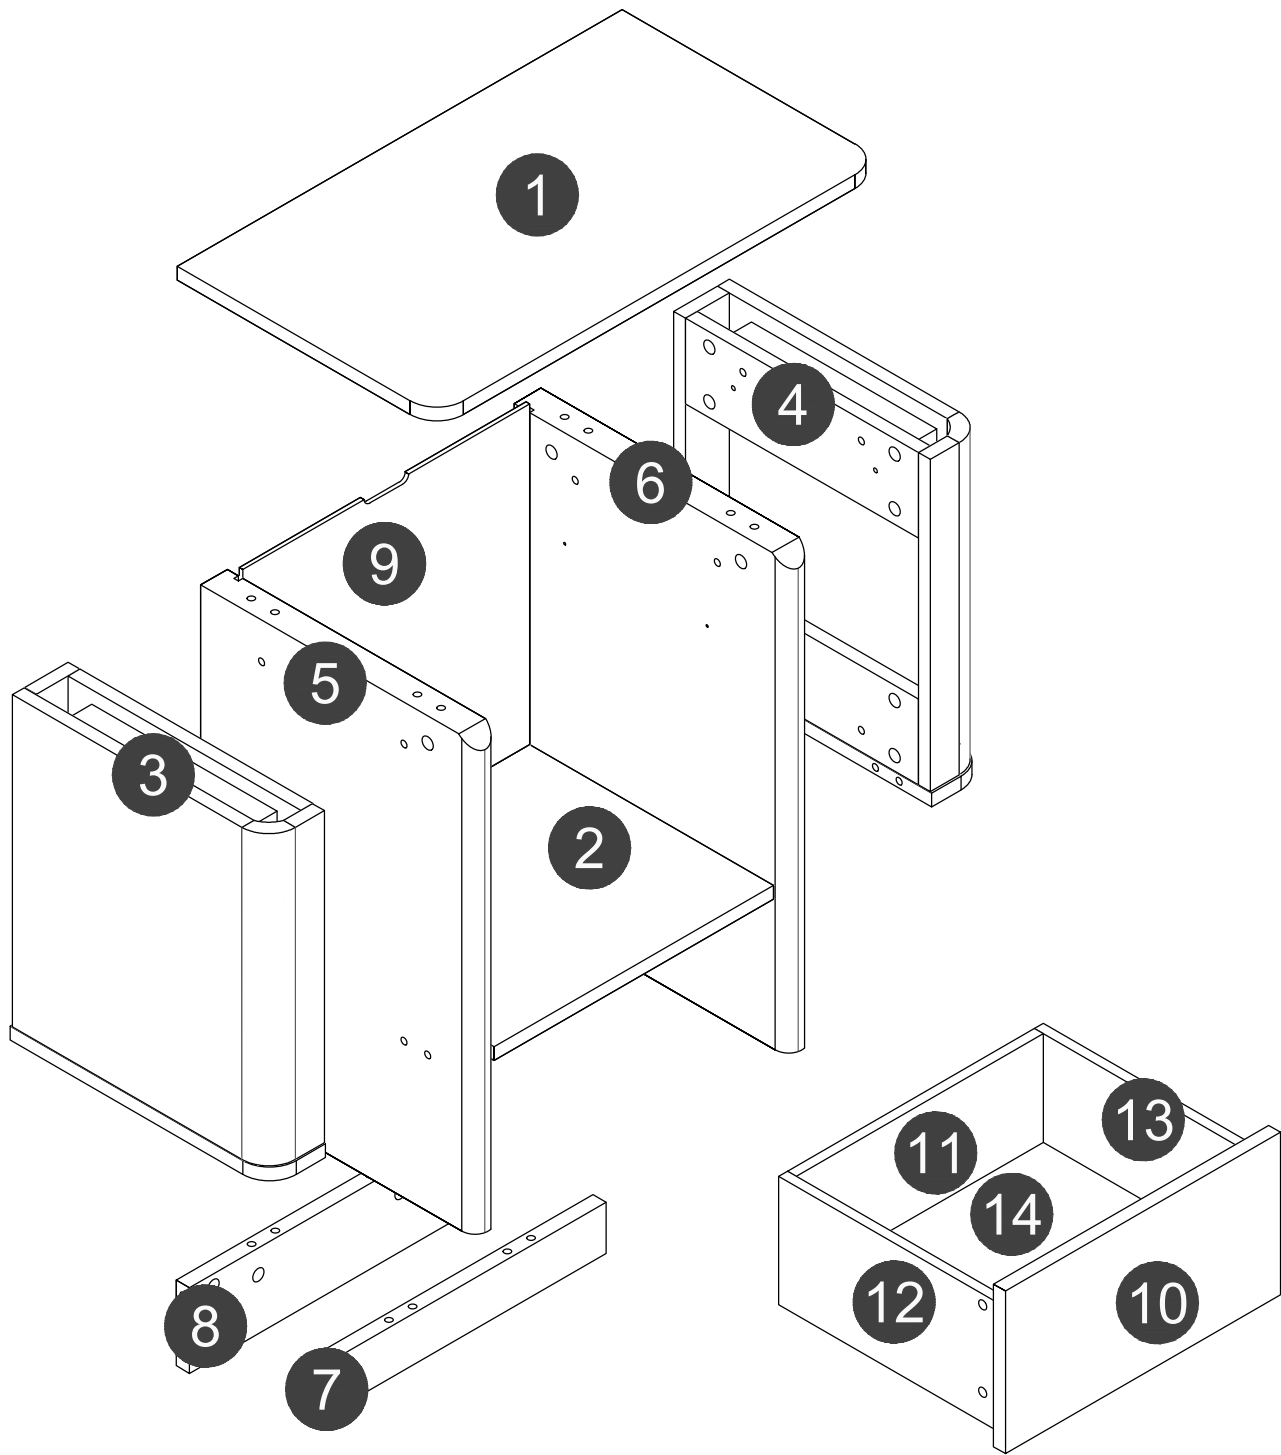


# Fittings



M6\*40

A1=22




Φ8\*40

A2=4



Φ8\*30

B=24

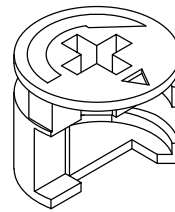


Φ15\*12

C=22




Φ21

D=30

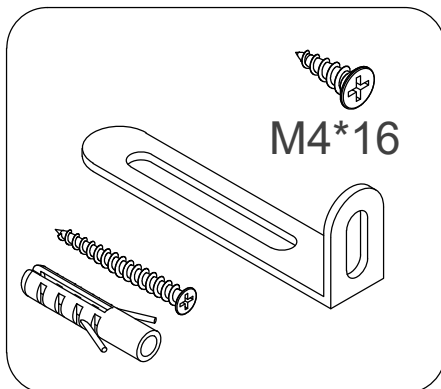


M4\*16


F2=1

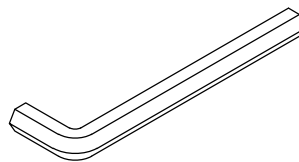

H =1

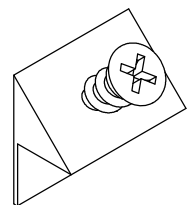


E=4




M3.5\*12

V1=8

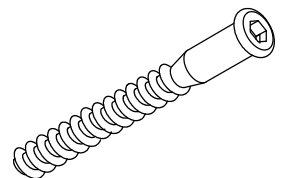

Q=4

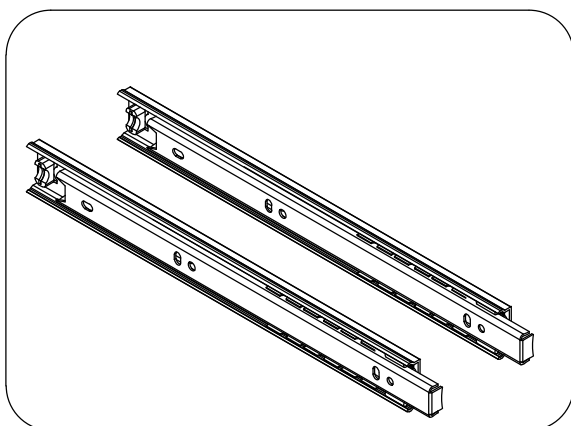

N=1




P=8




O=8


# STEP 1

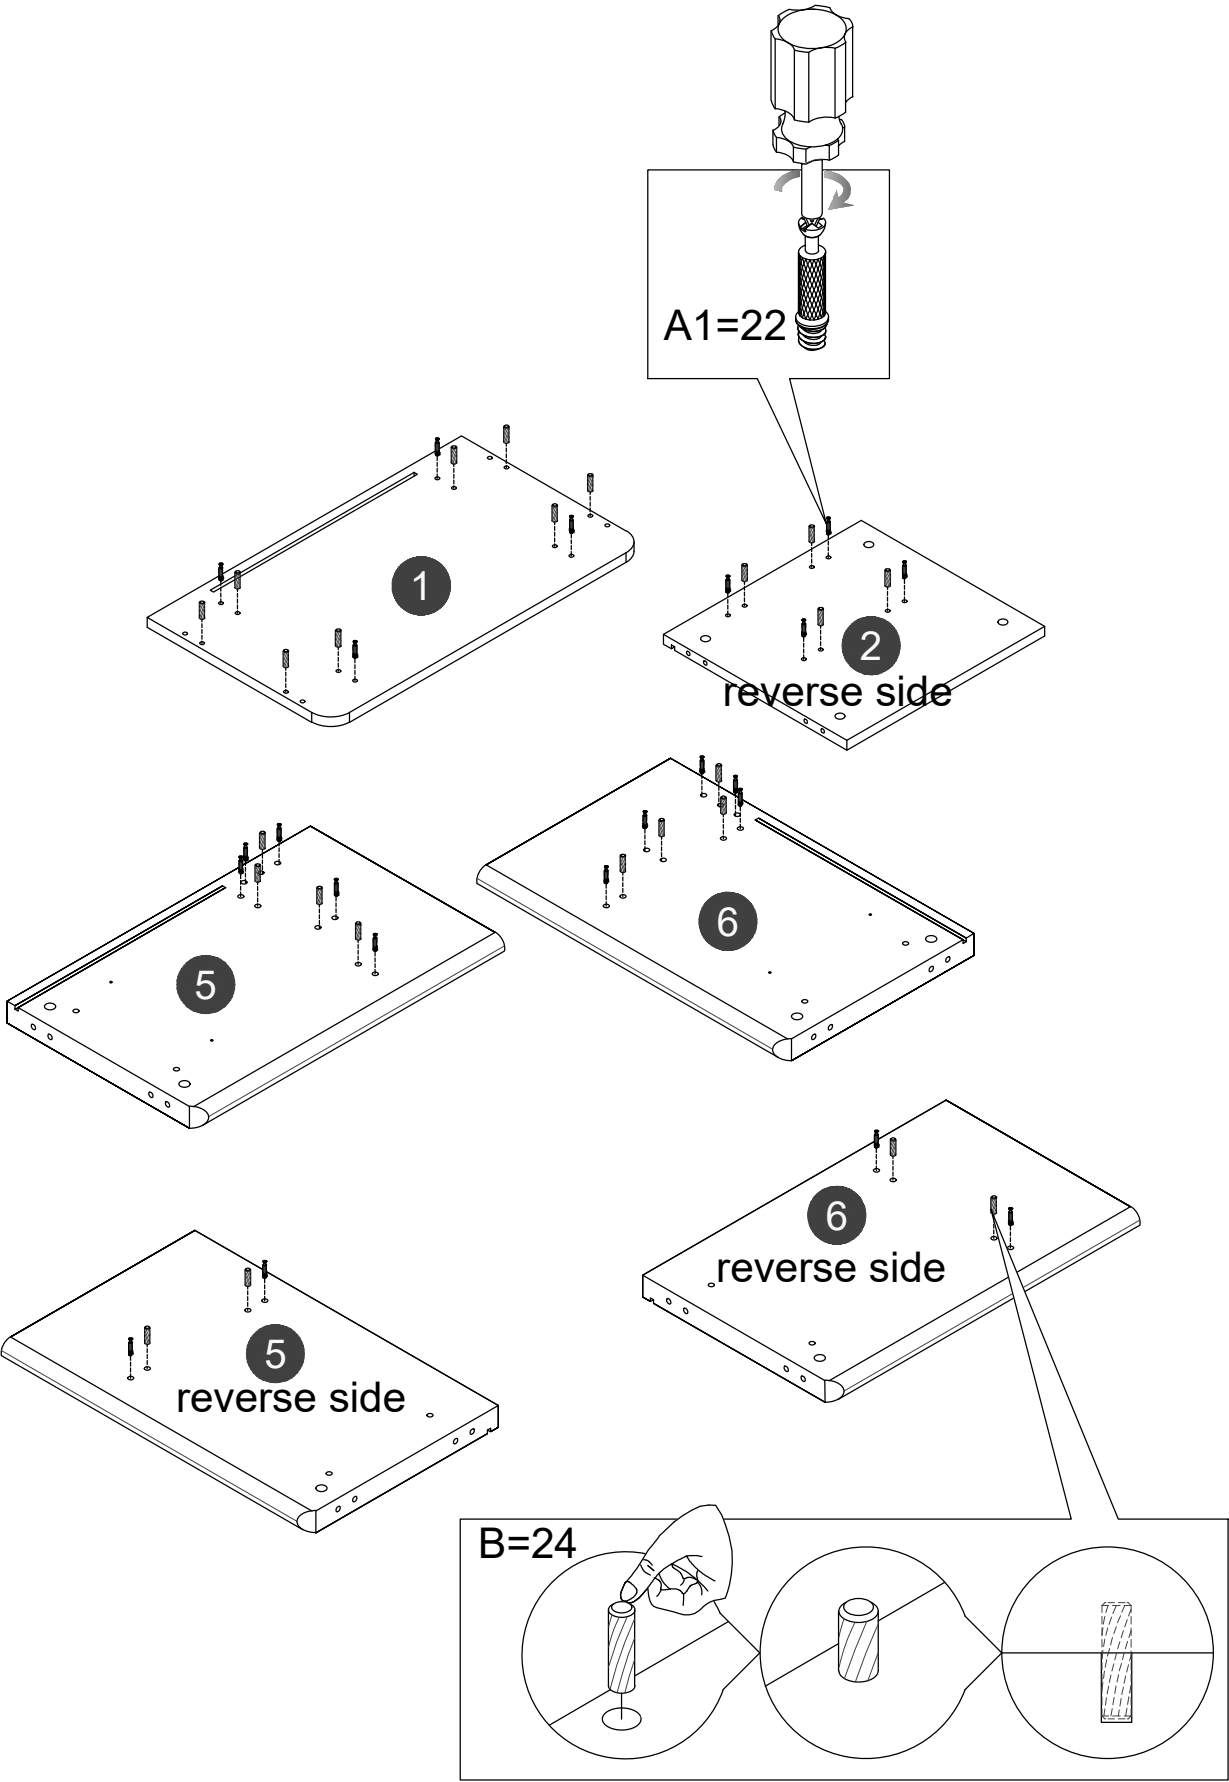


# STEP 2

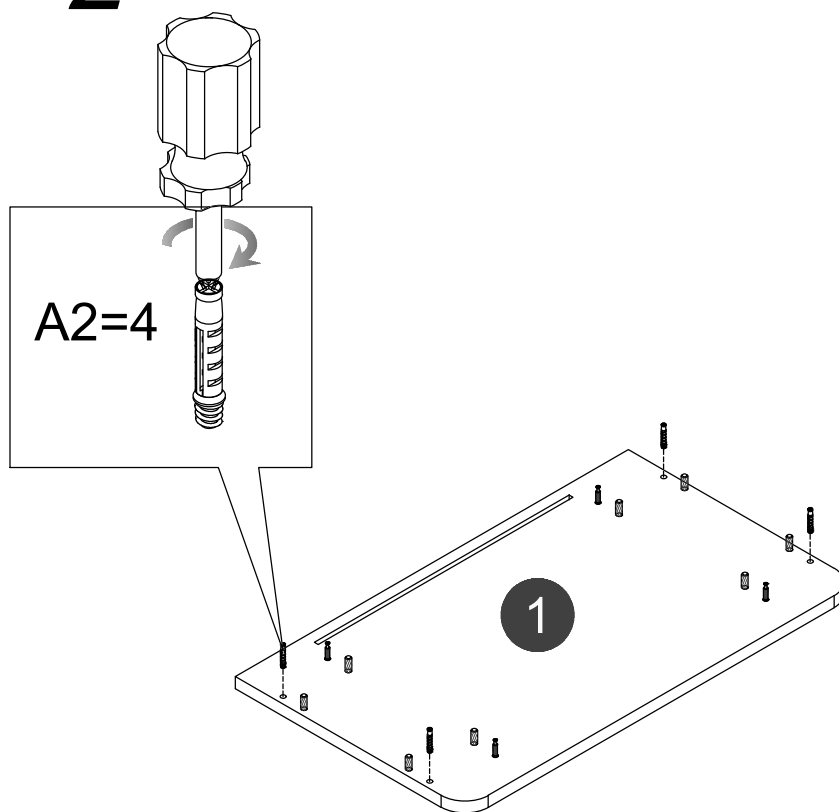


# STEP 3

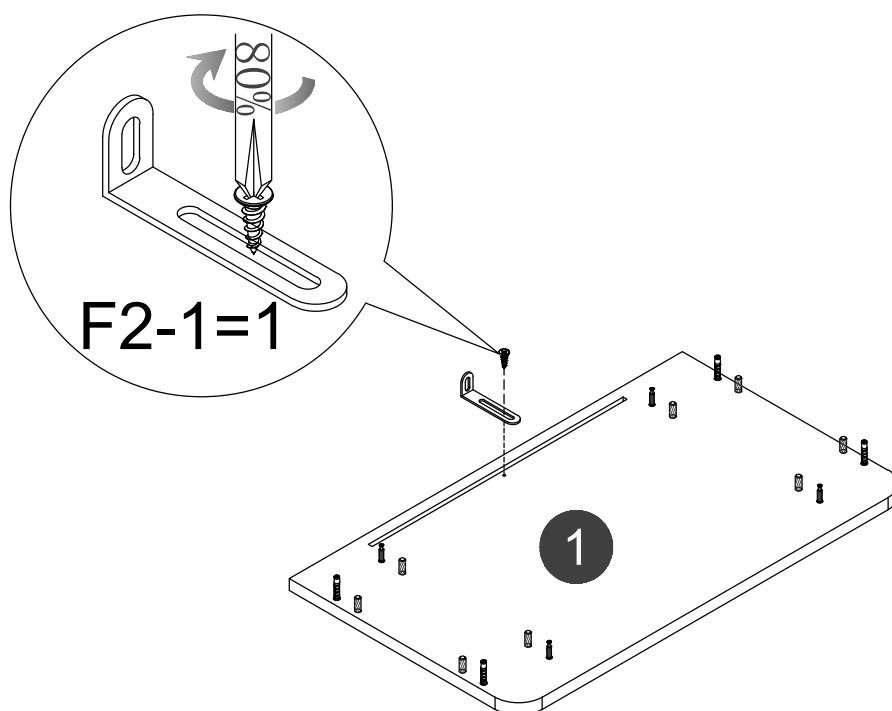


# STEP 4

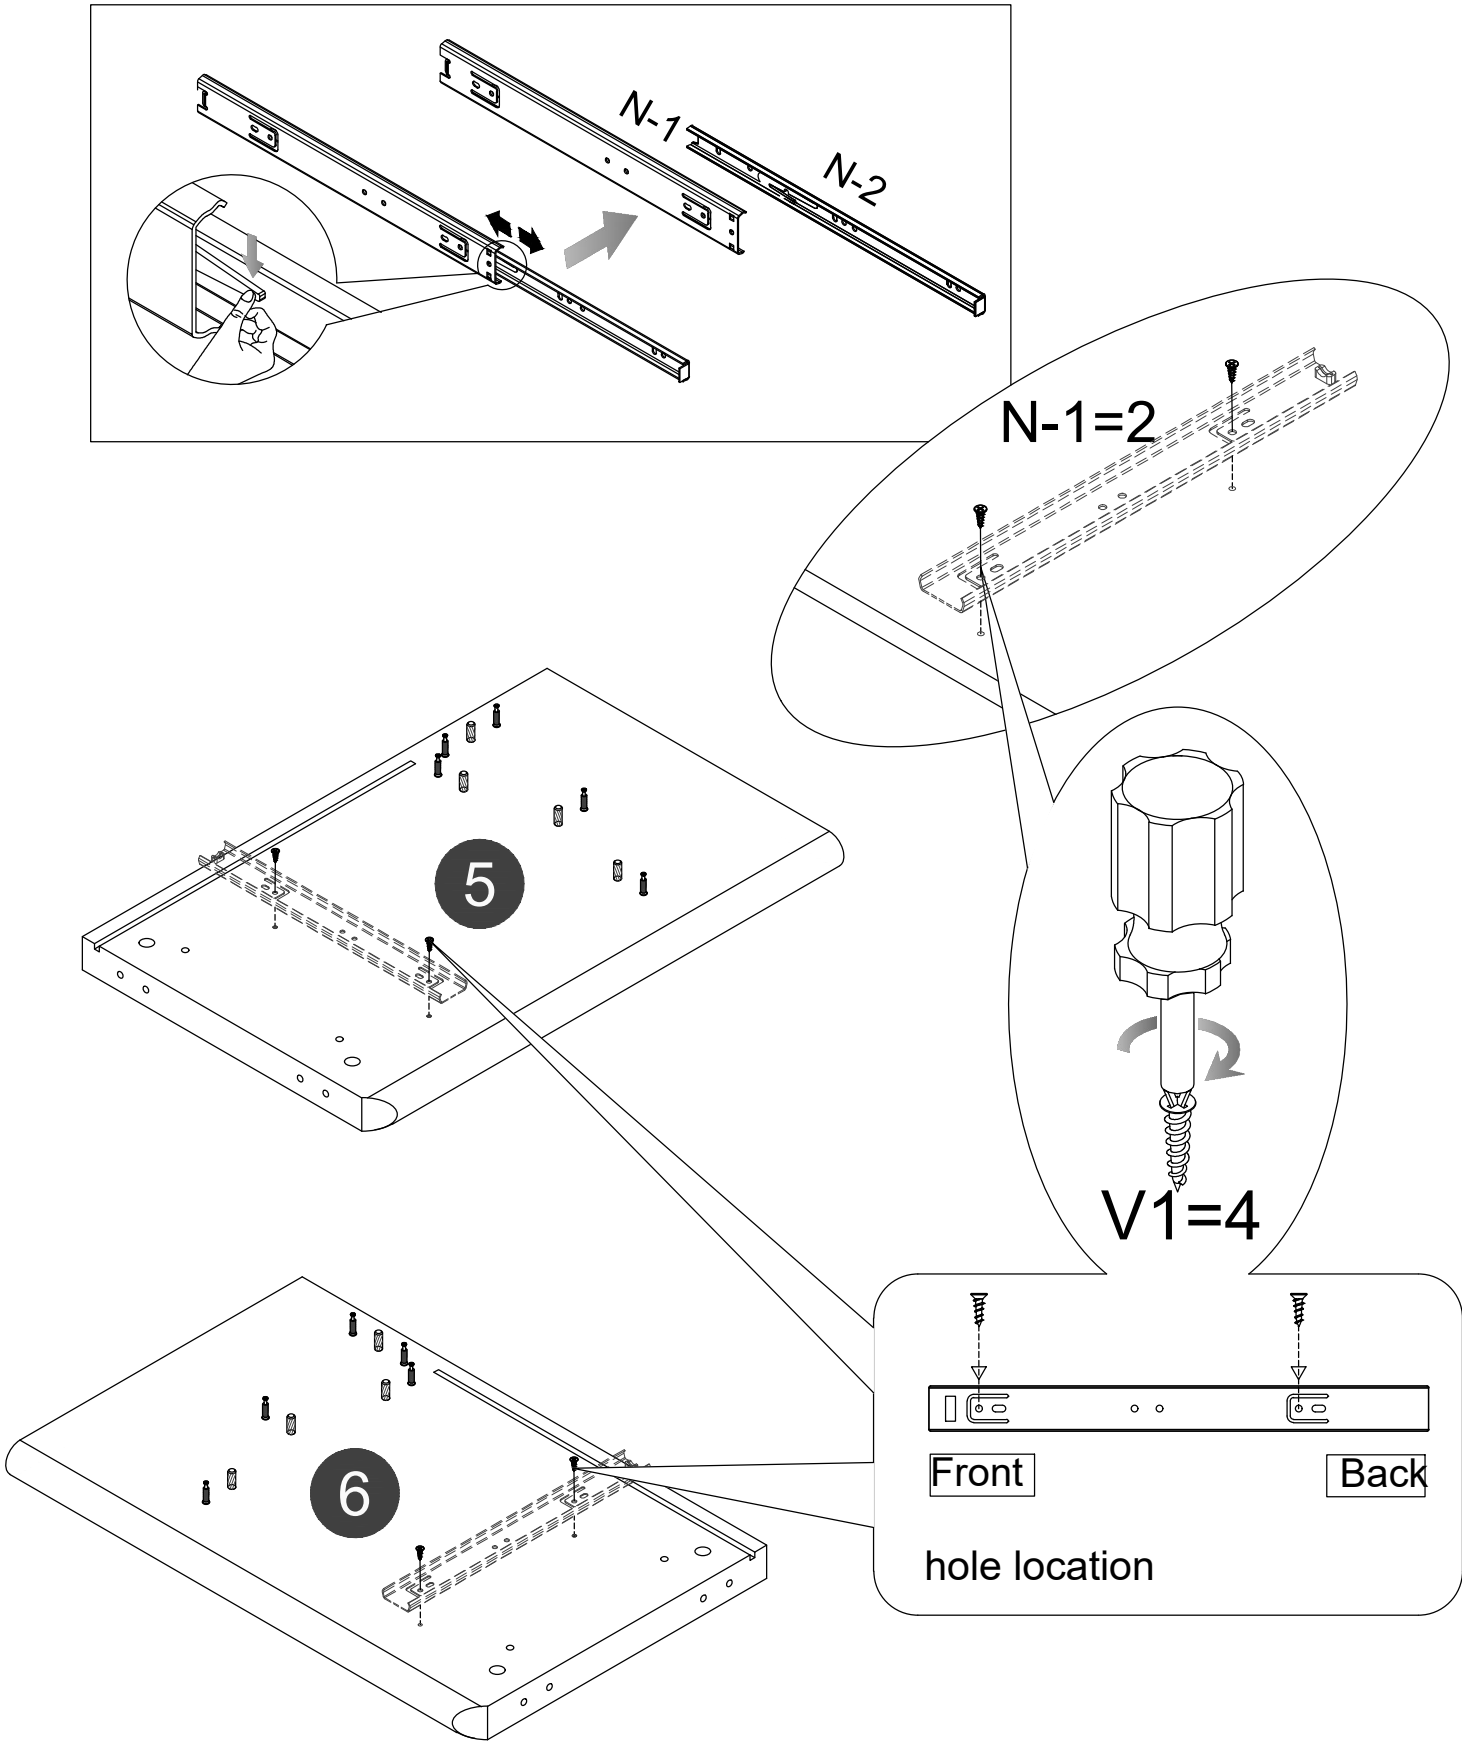


# STEP 5

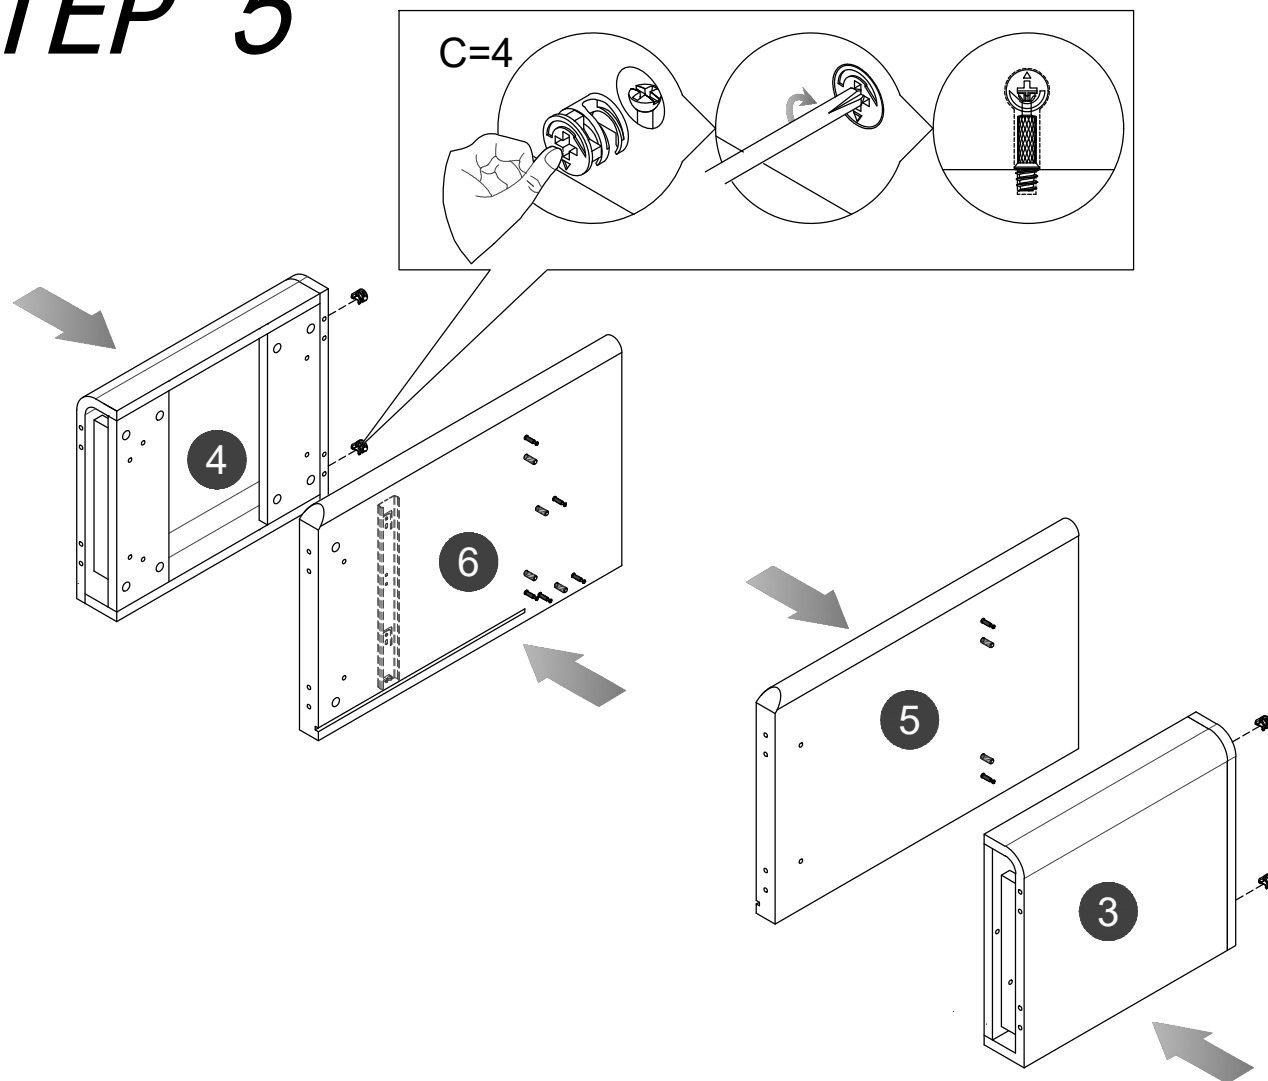


# STEP 6

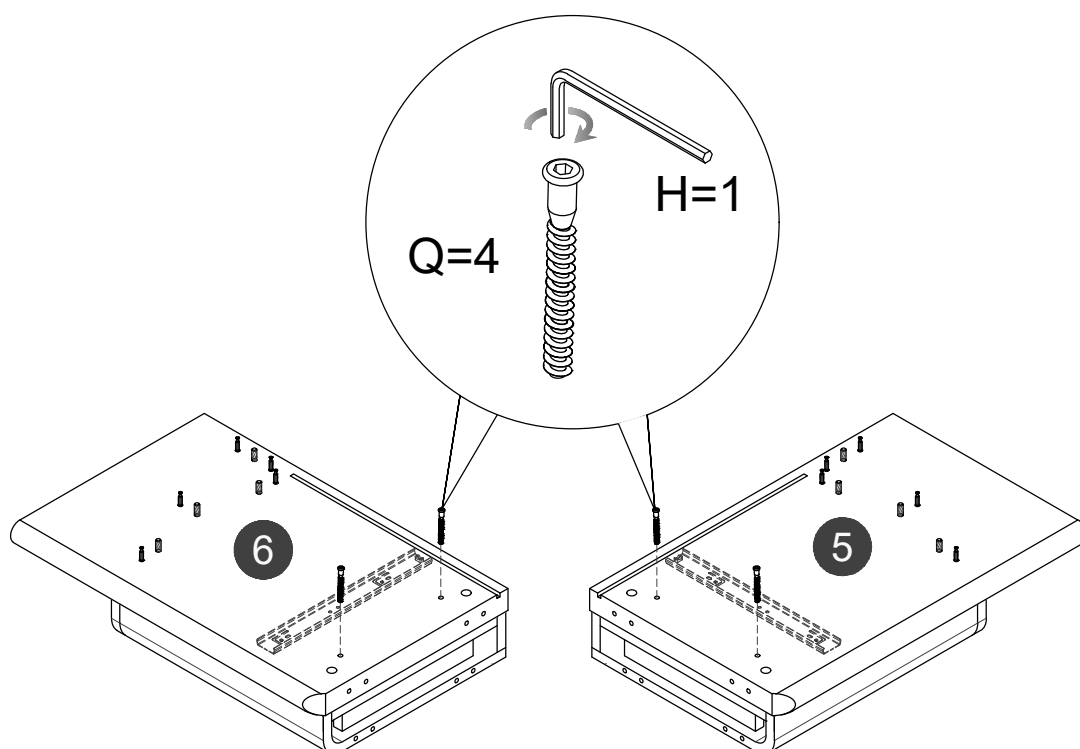


# STEP 7

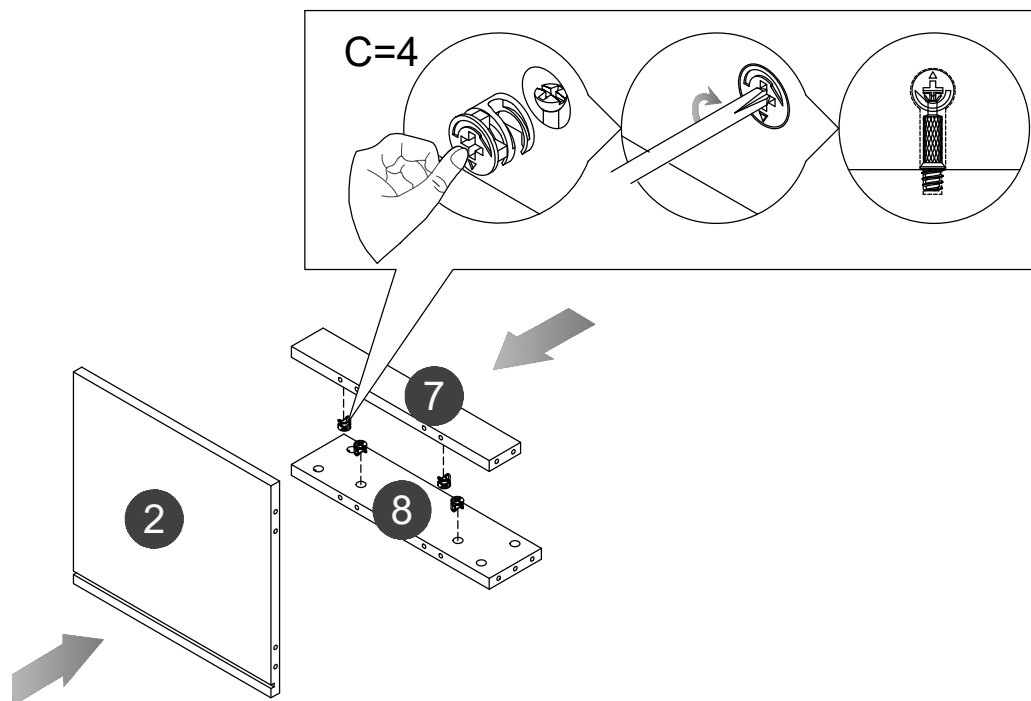


# STEP 8

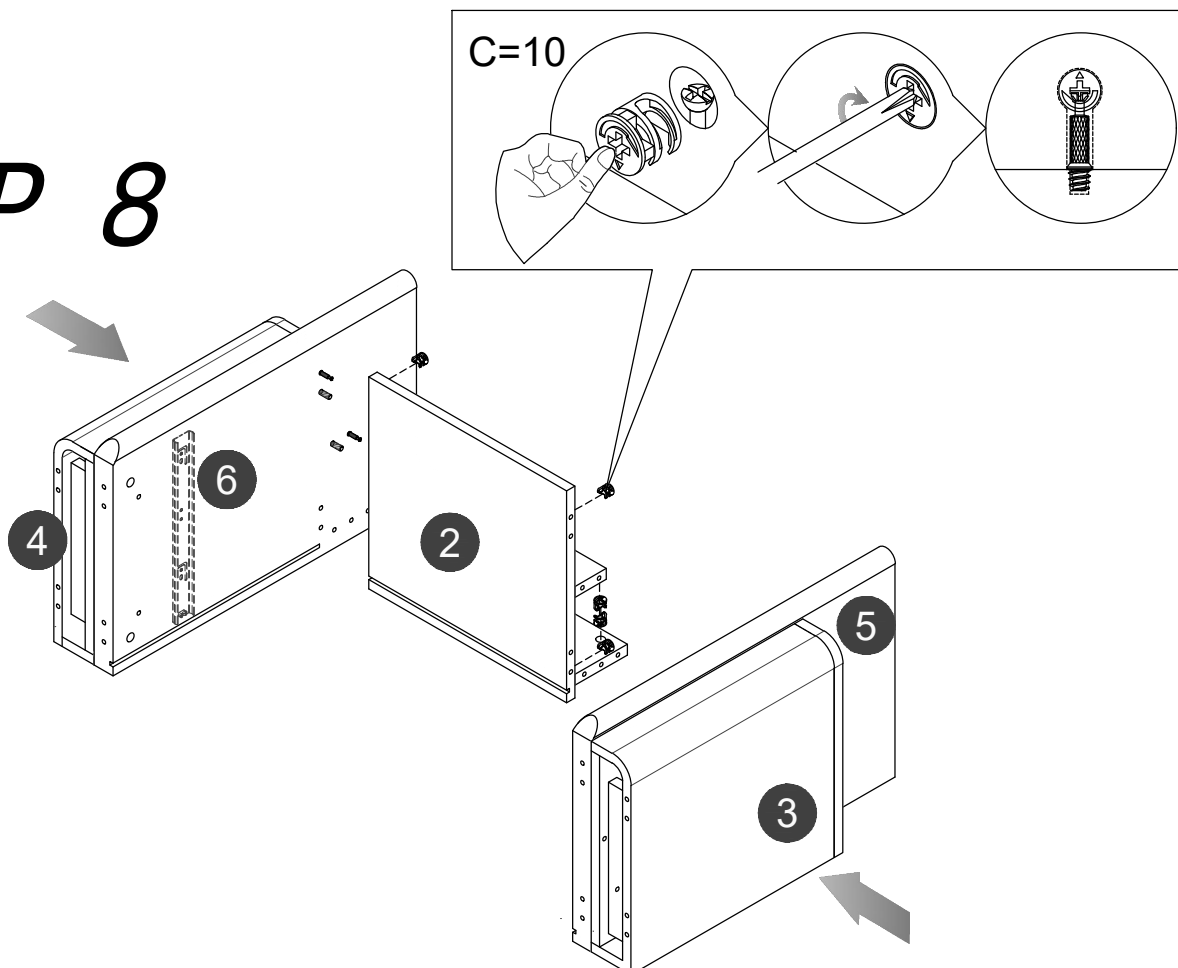


# STEP 9

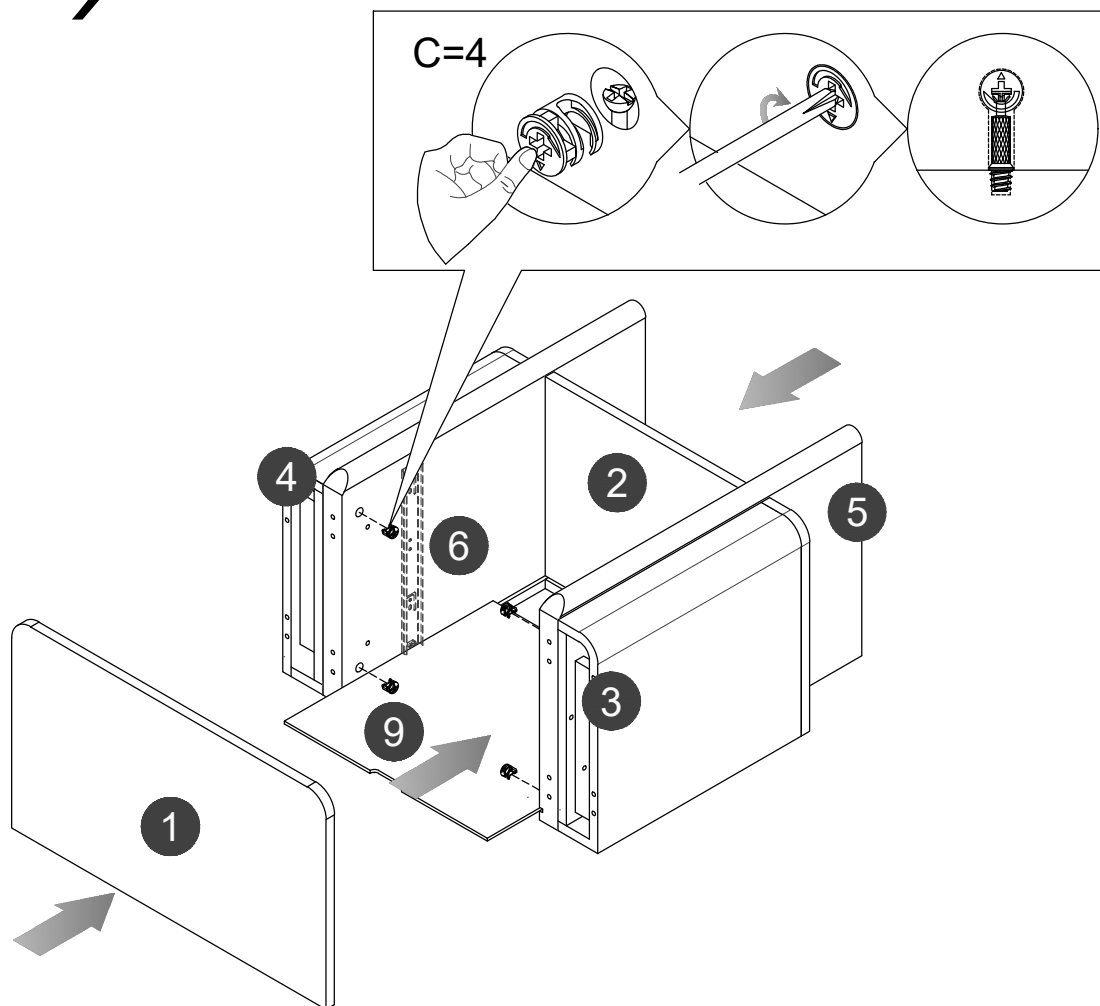


# STEP 10

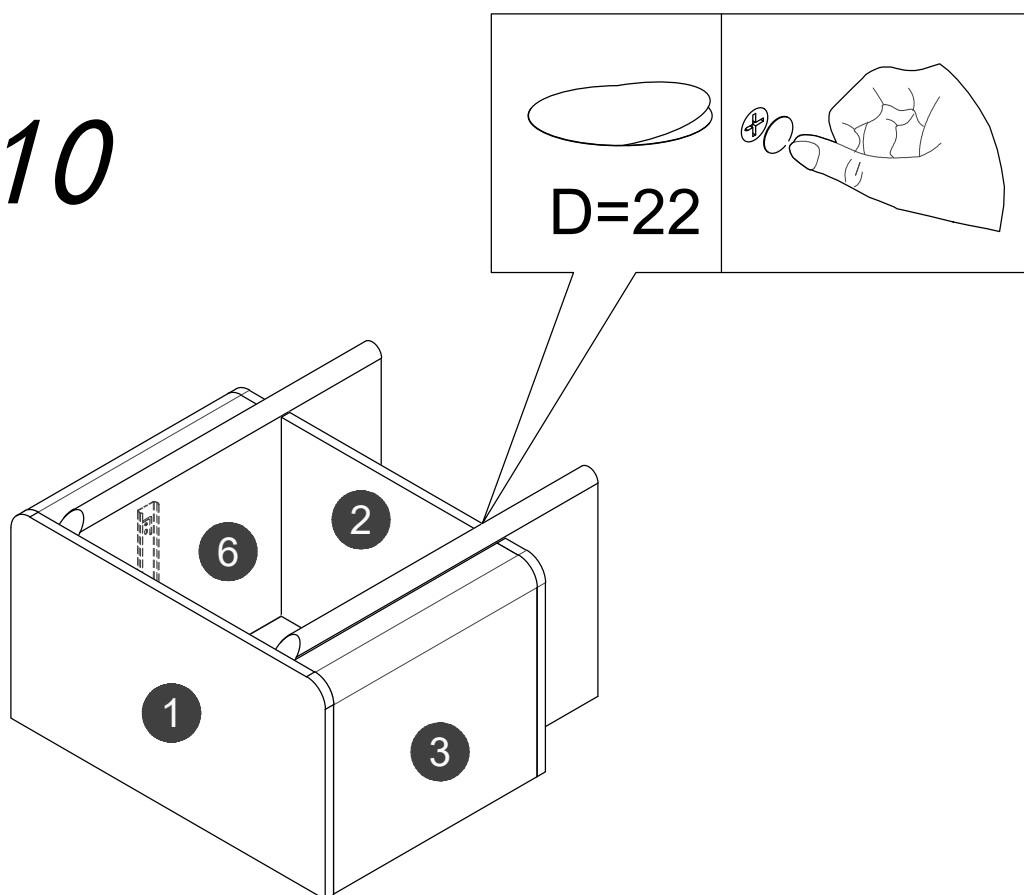


# STEP 11

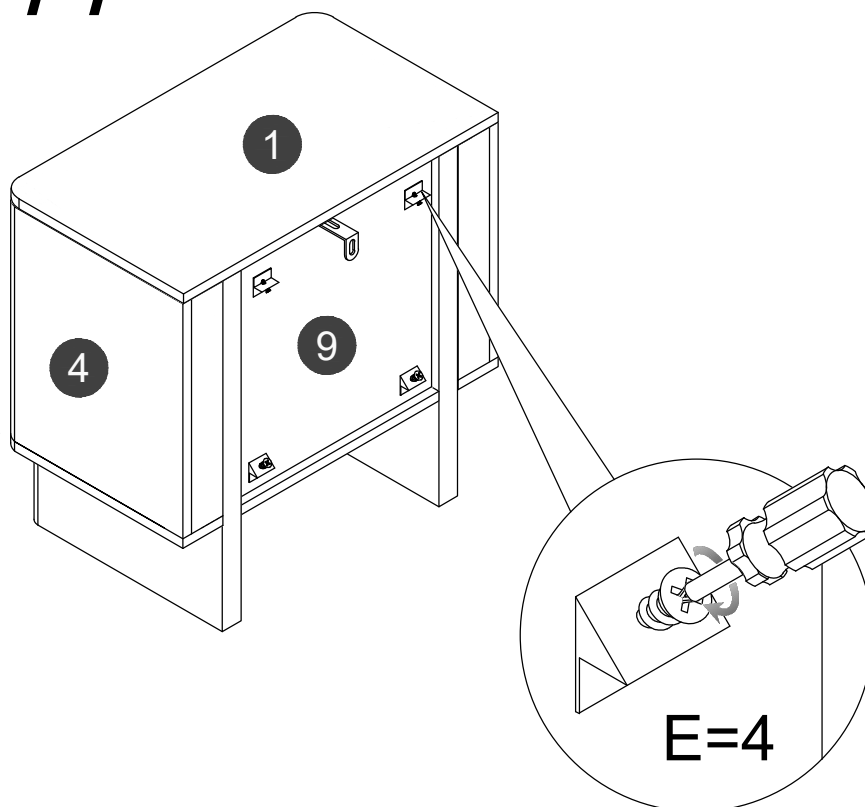


# STEP 12

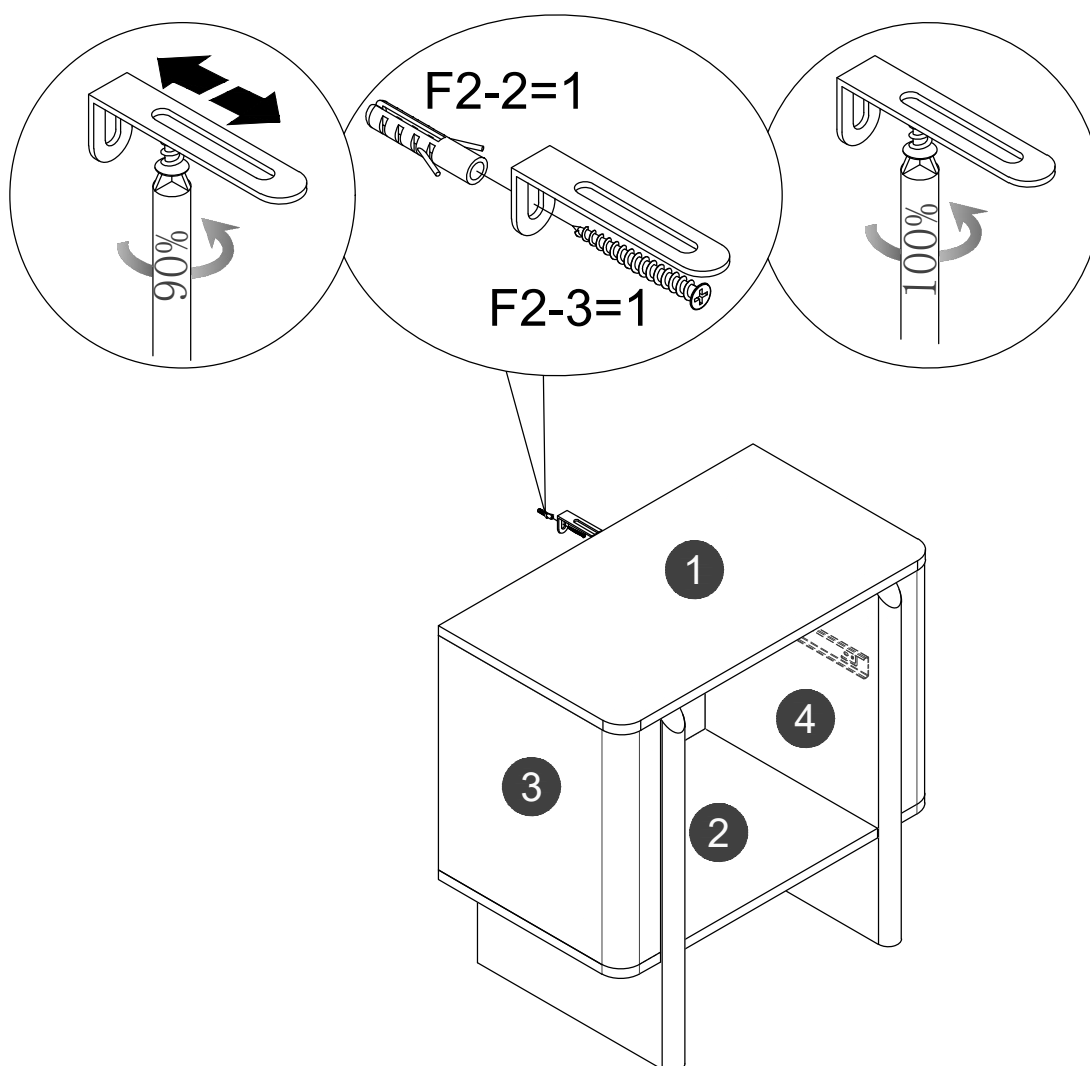


# STEP 13

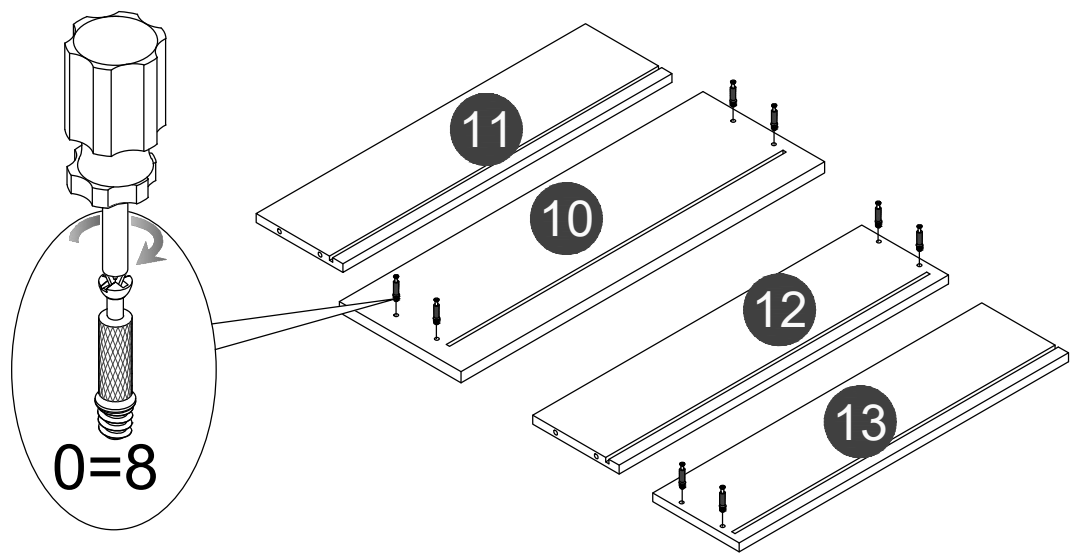


# STEP 14

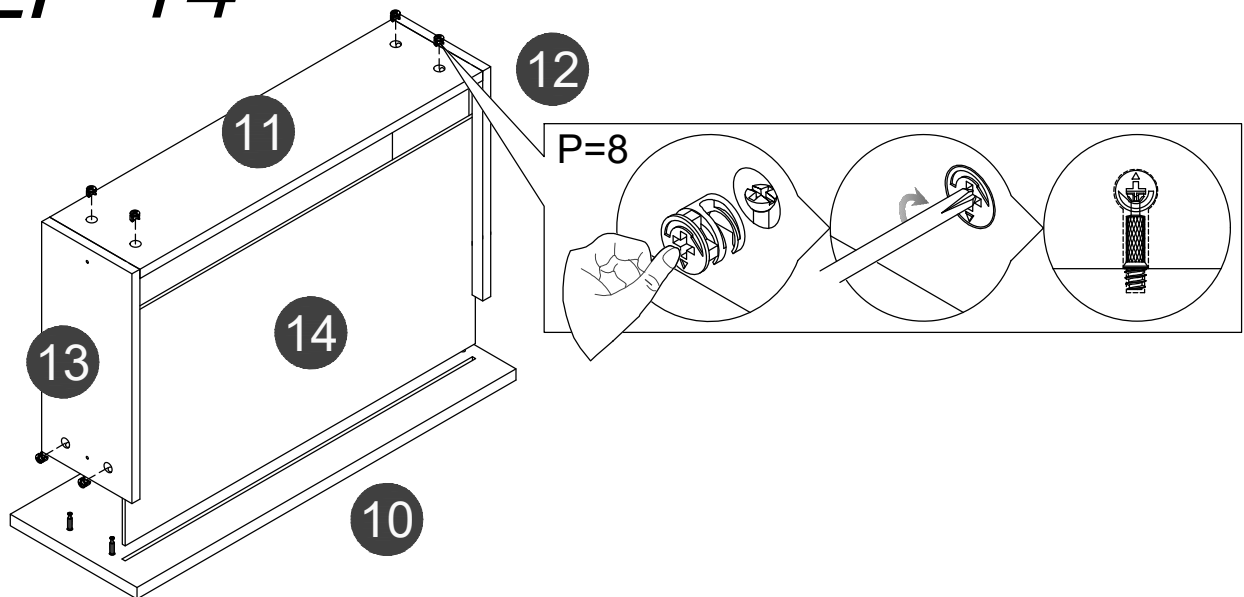


# STEP 15

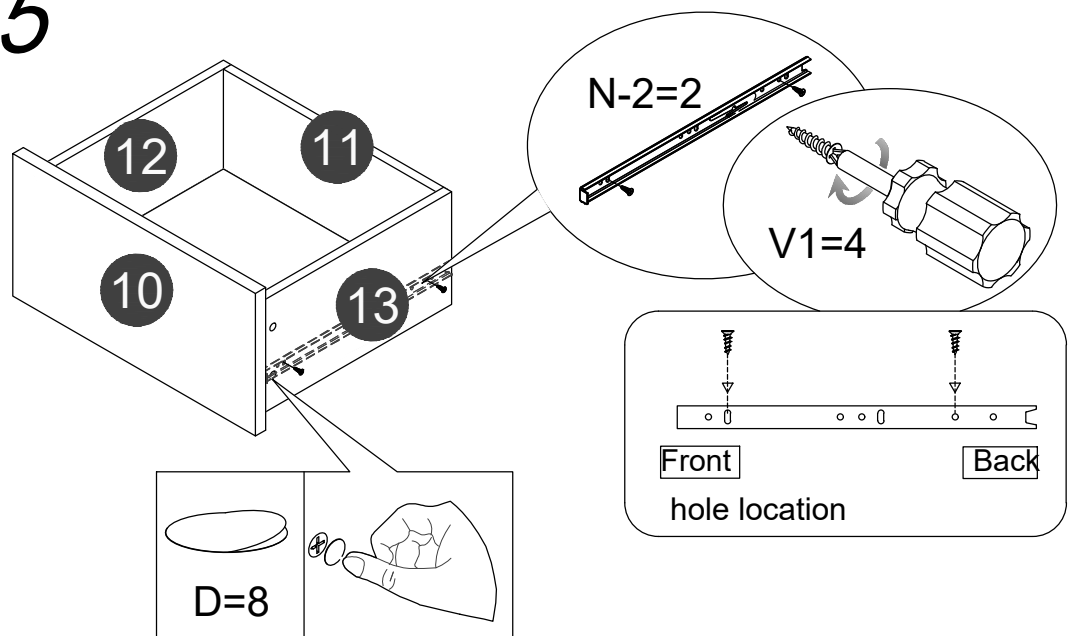


# STEP 16

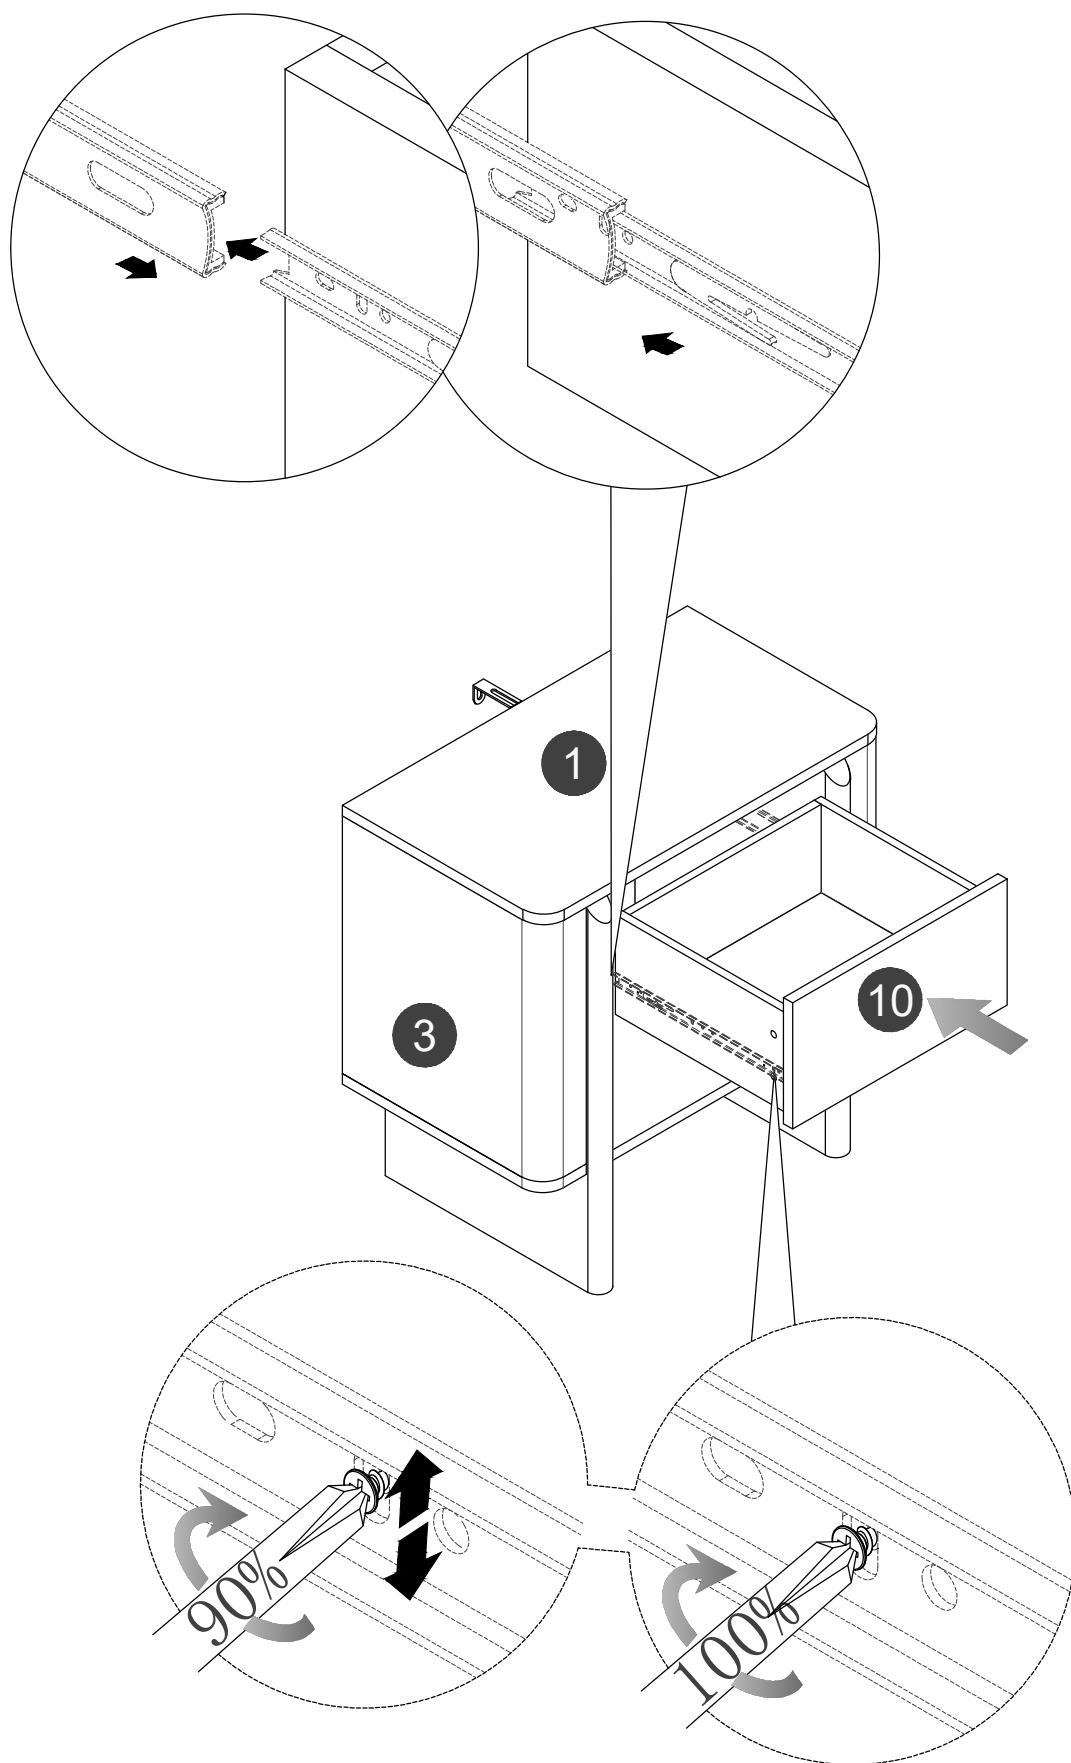

# STEP 17

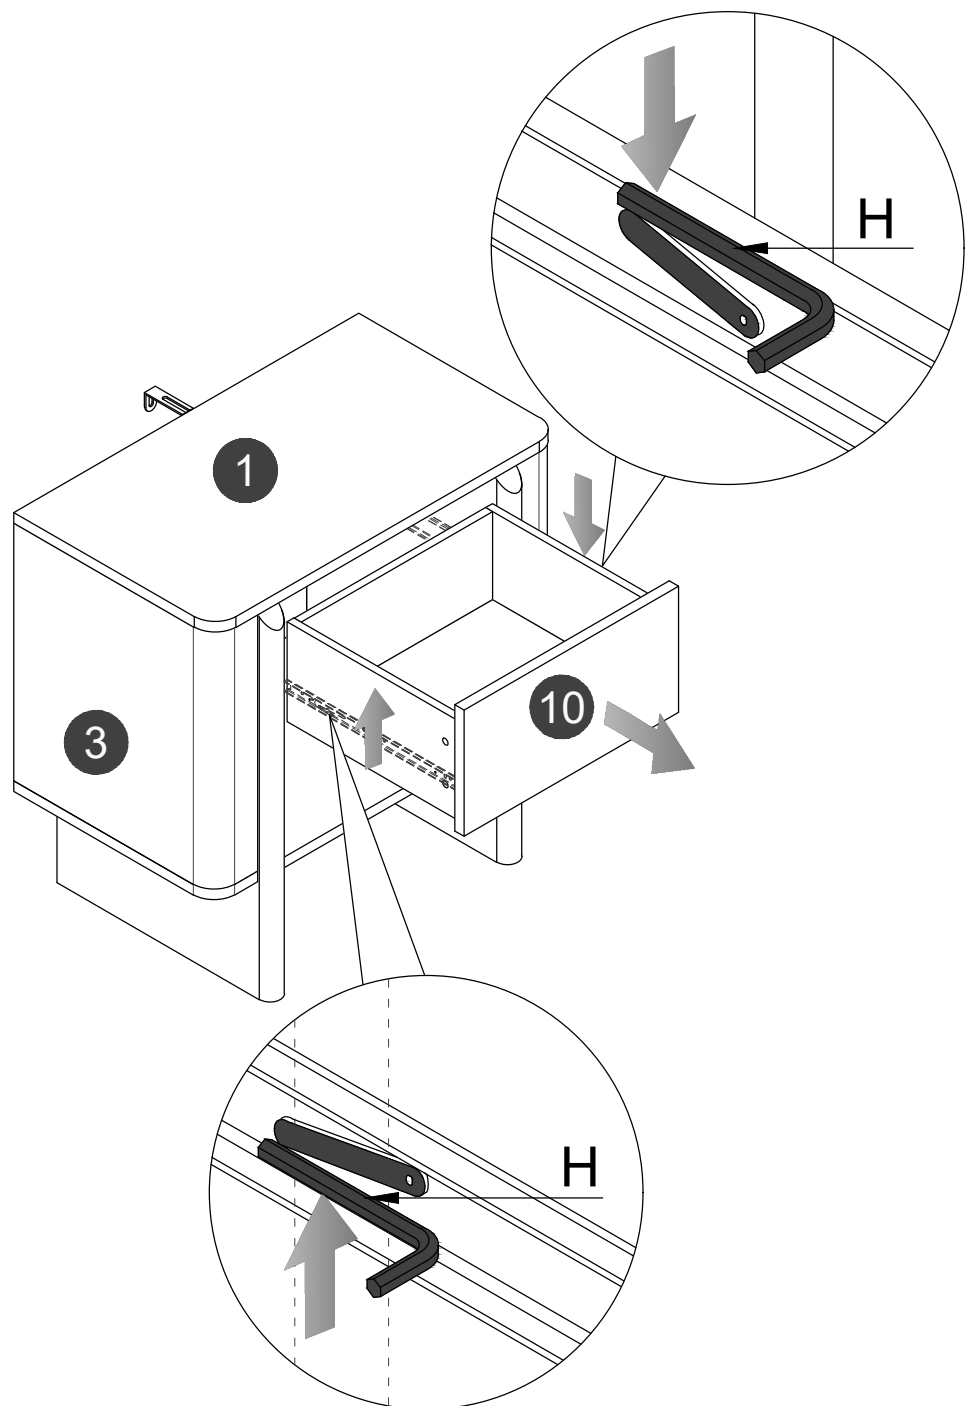

# *STEP 18*

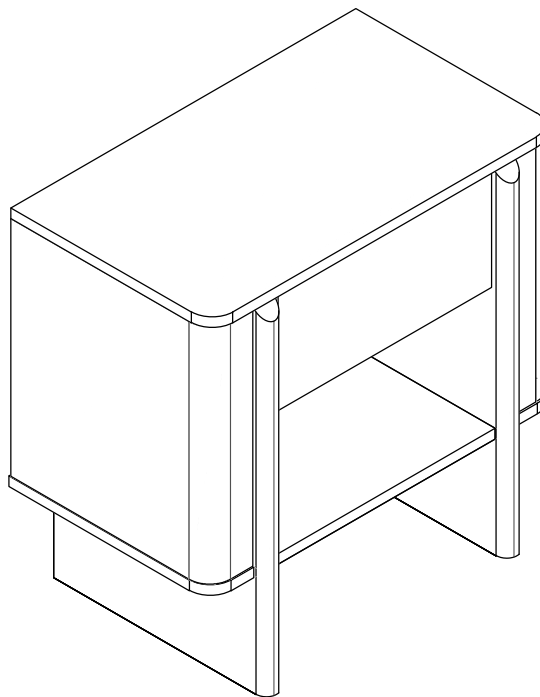

*Finish*