

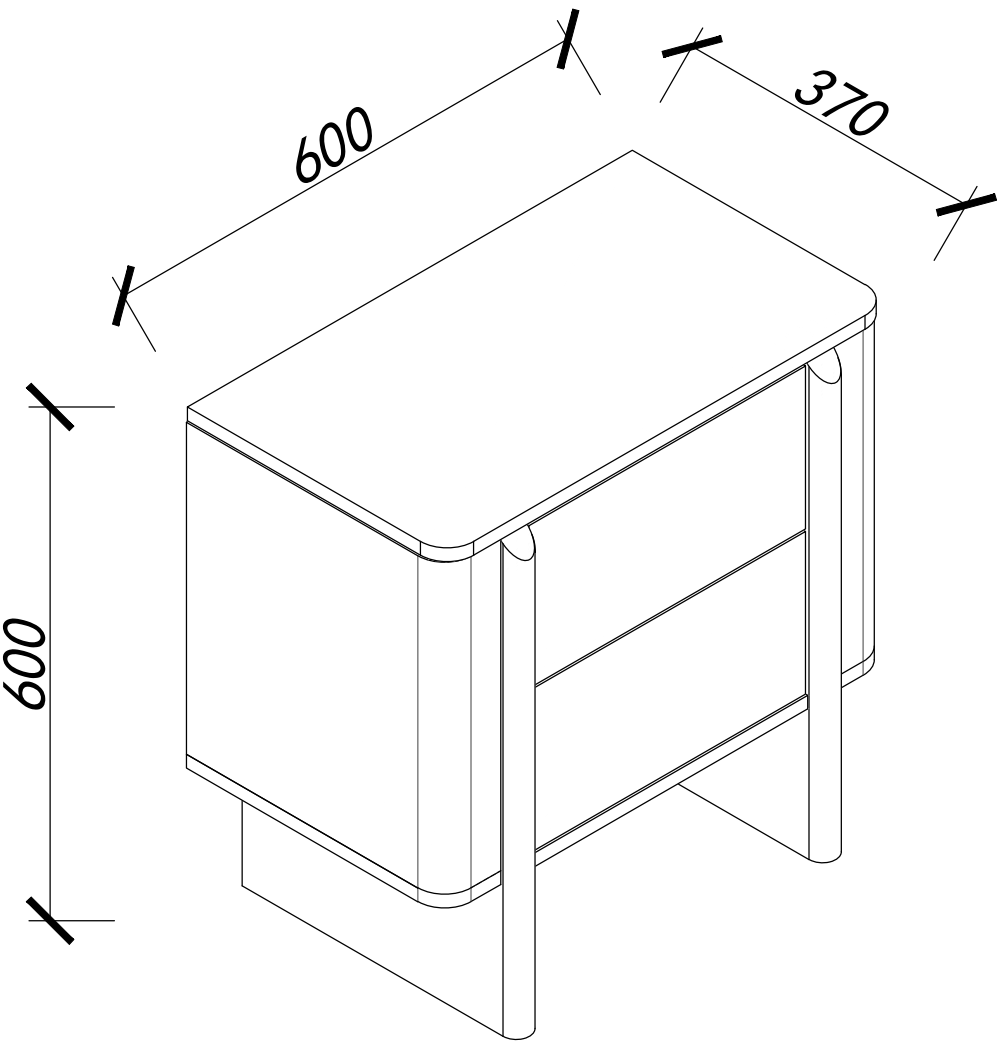
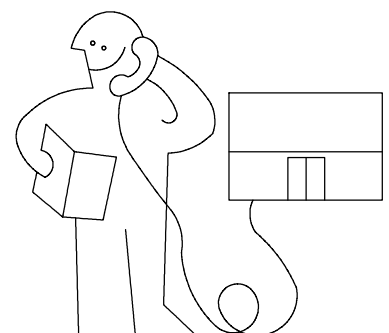
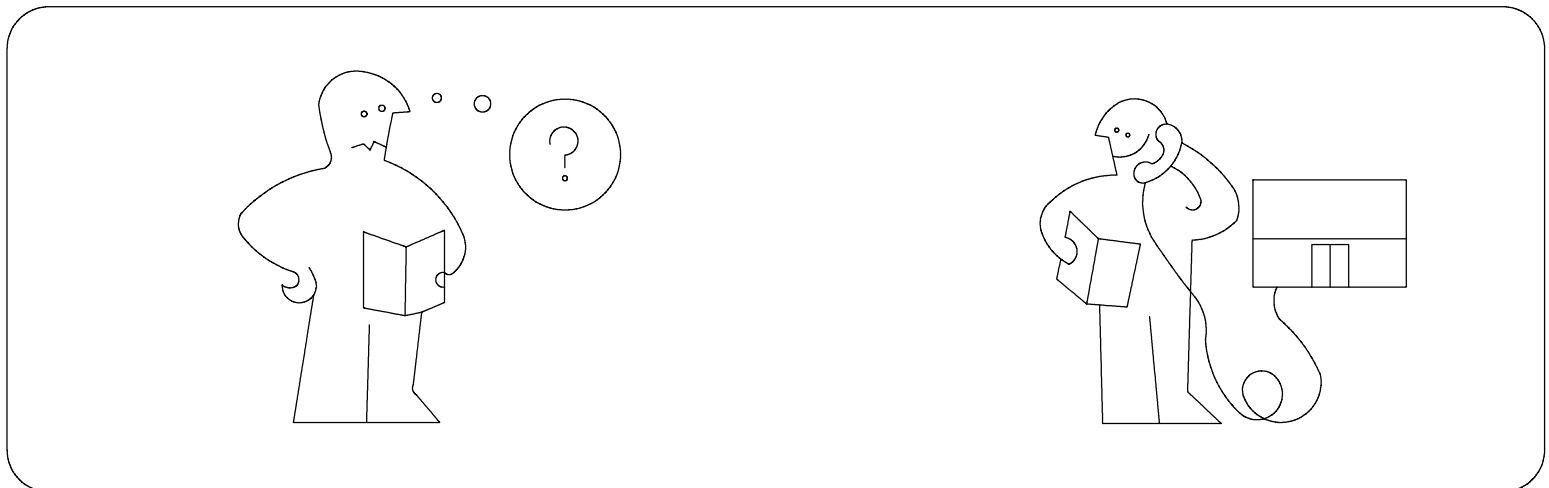
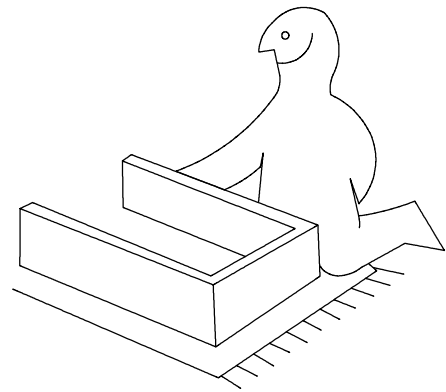
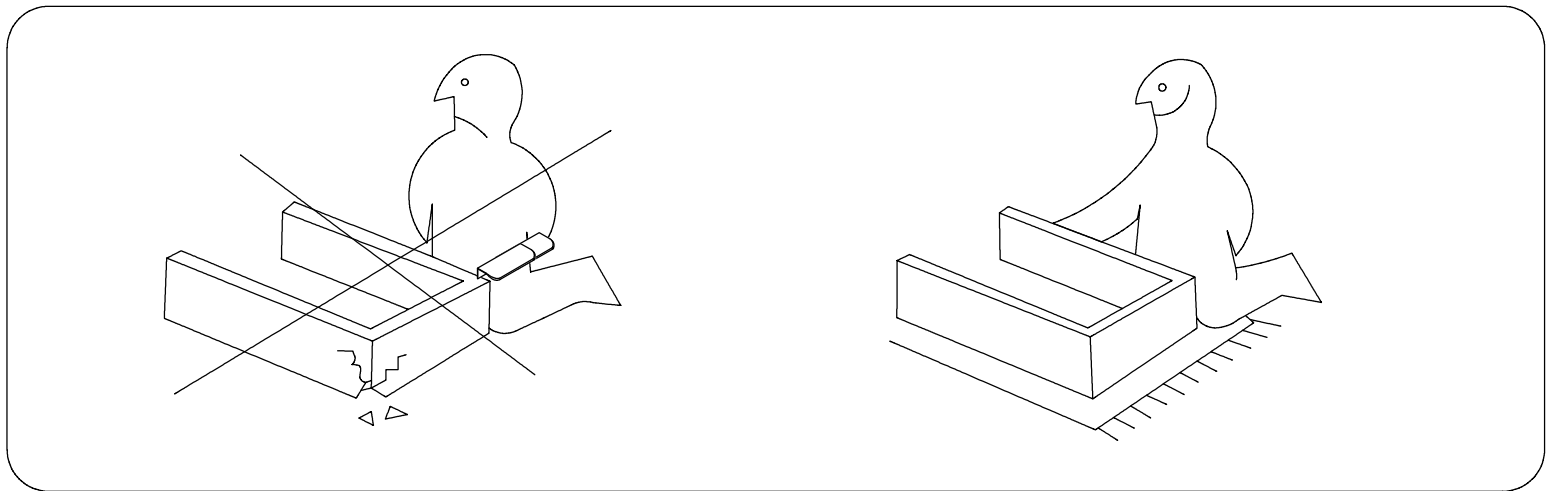
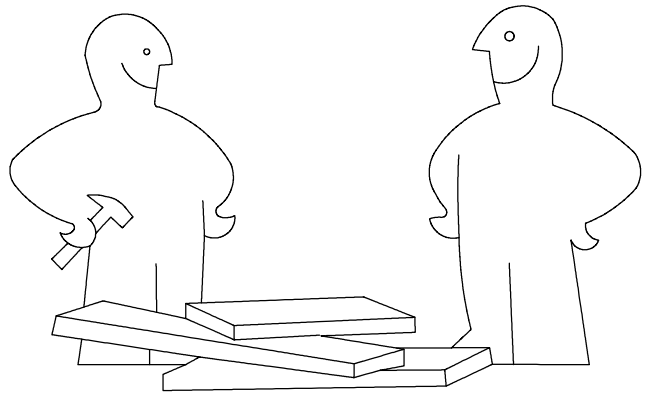
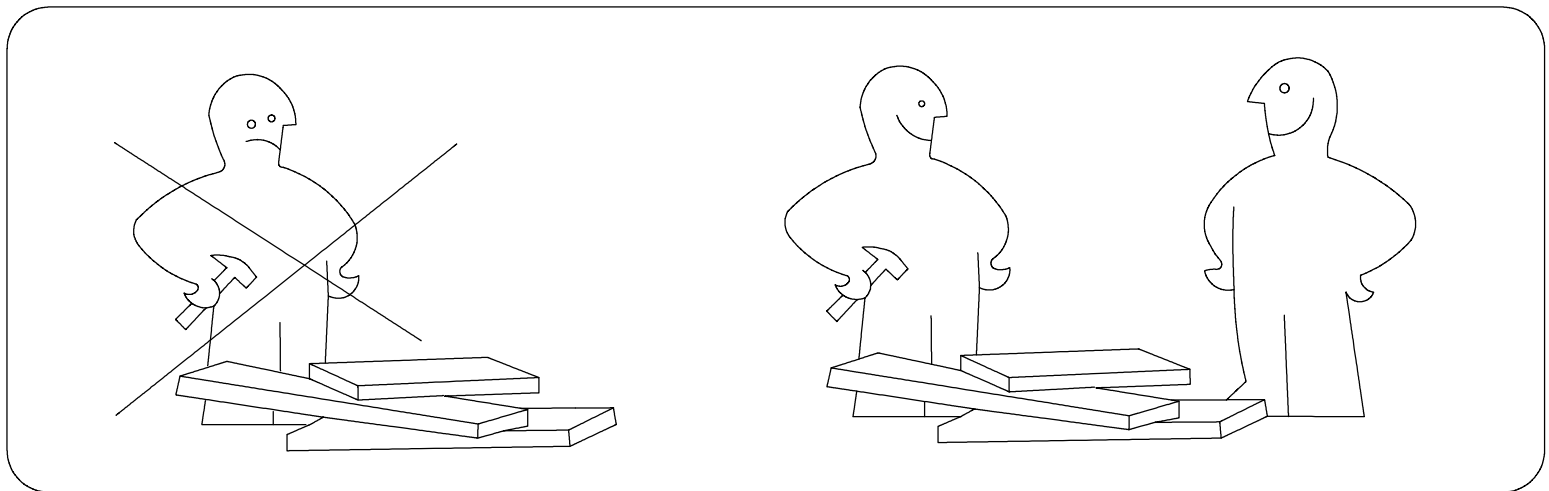


KOKETTO


Assembly Instruction

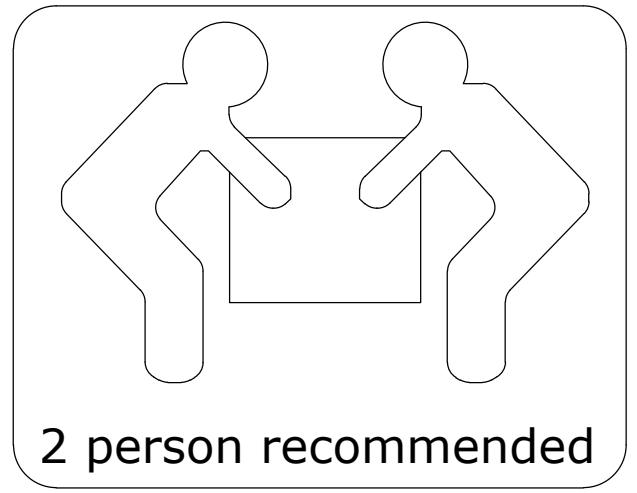

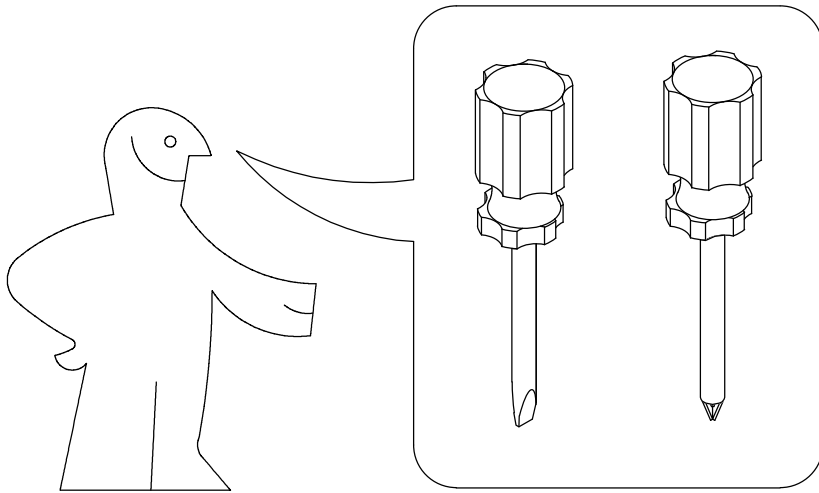

Panel No	Panel Sizes	Quantity
1	600*350*16	1
2	377*350*16	1
3	404*346*75	1
4	404*346*75	1
5	377*80*16	1
6	579*370*36	1
7	579*370*36	1
8	377*60*18	1

Panel No	Panel Sizes	Quantity
9	377*100*18	1
10	398*387*5	1
11	371*190*16	2
12	333*150*12	2
13	300*150*12	2
14	300*150*12	2
15	343*298*5	2

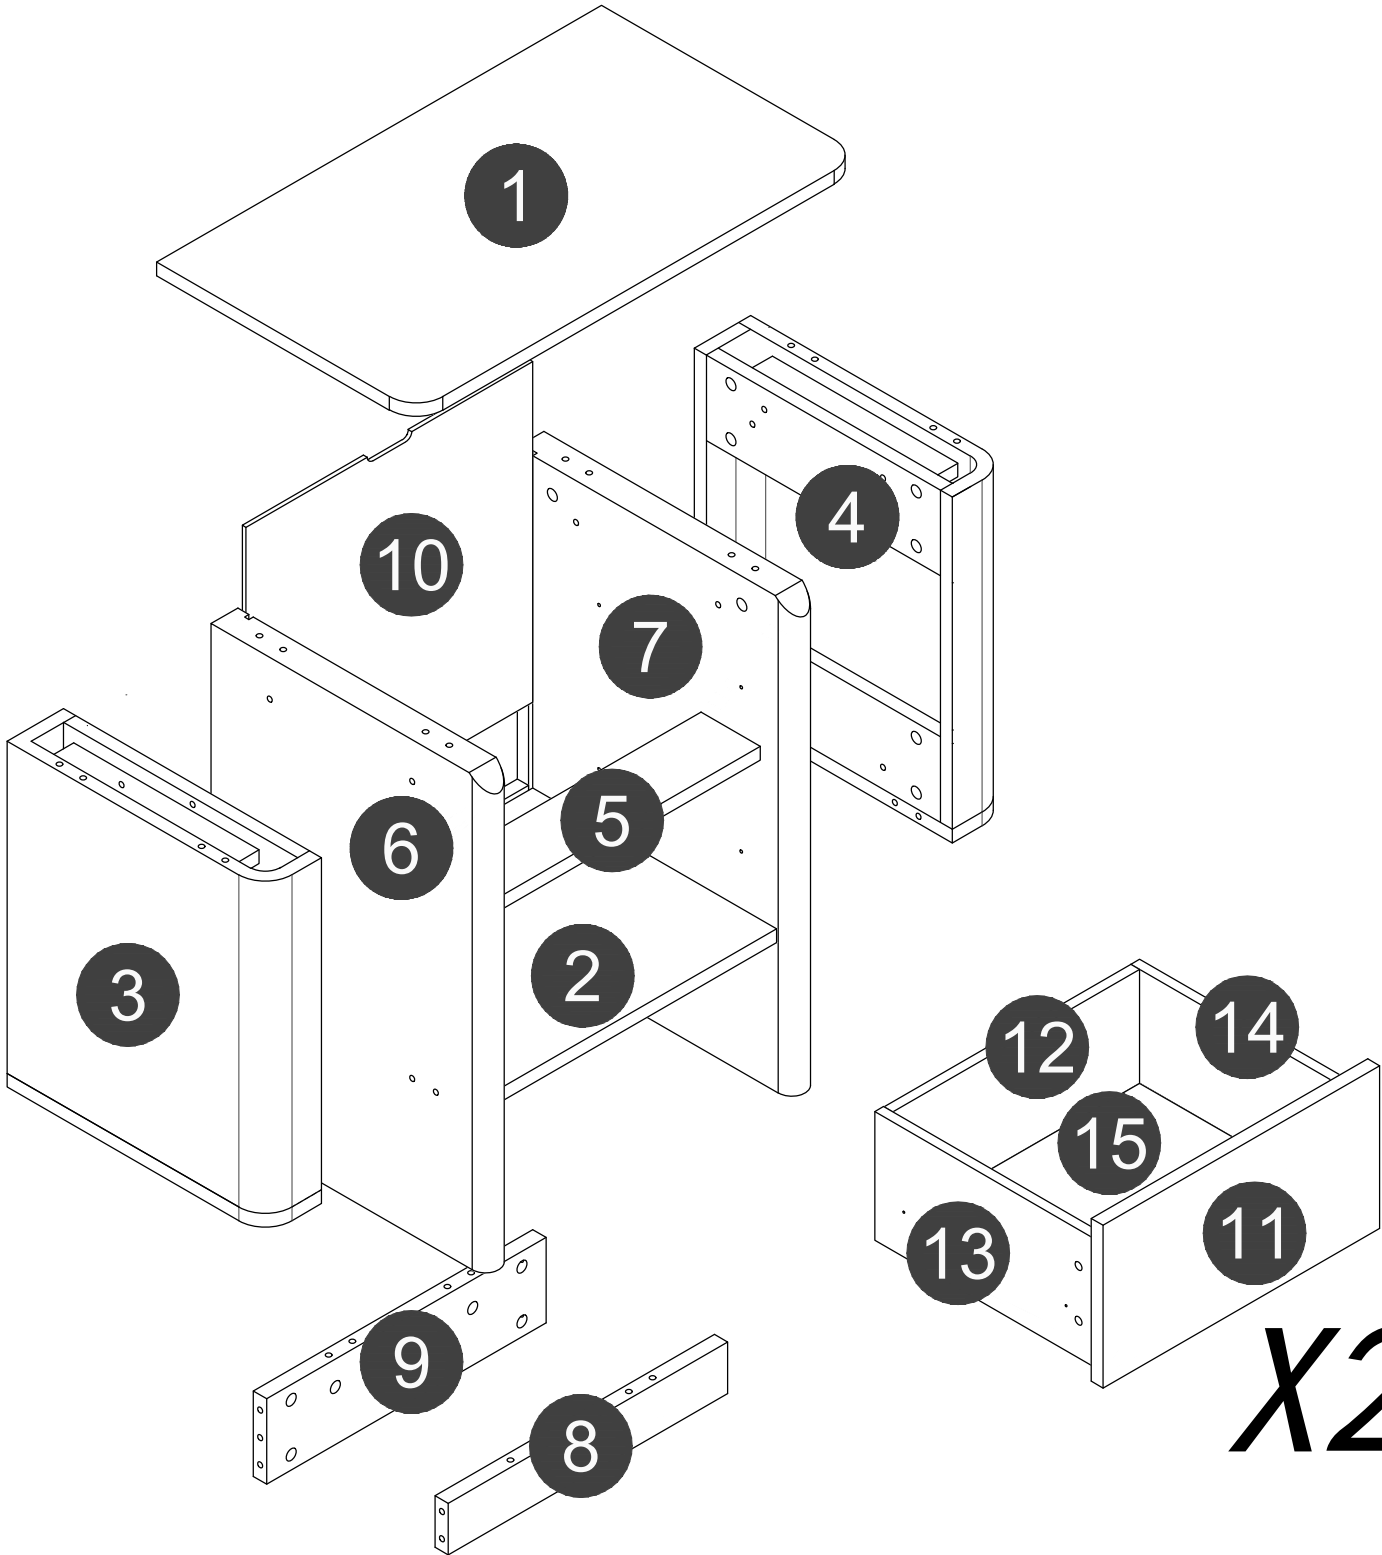


X2

Fittings




M6*40

A1=24




Φ8*40

A2=4



Φ8*30

B=26

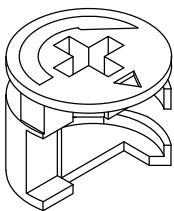


Φ15*12

C=24




Φ21

D=40

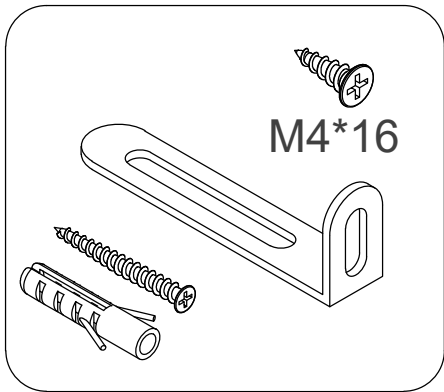


M4*16


F2=1

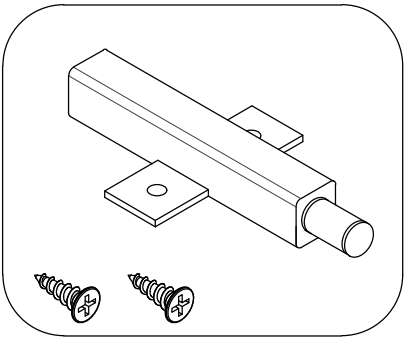


K=2

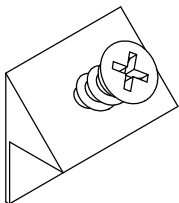

E=4

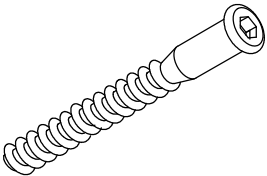

Q=4

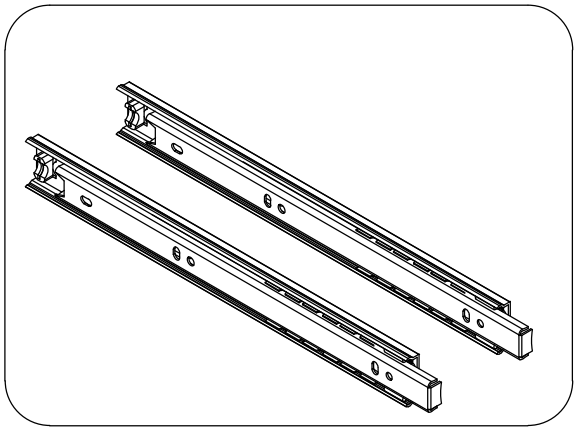


N=2




P=16



O=16

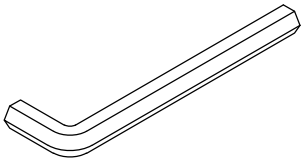


H =1




M3.5*12

V1=16


STEP 1

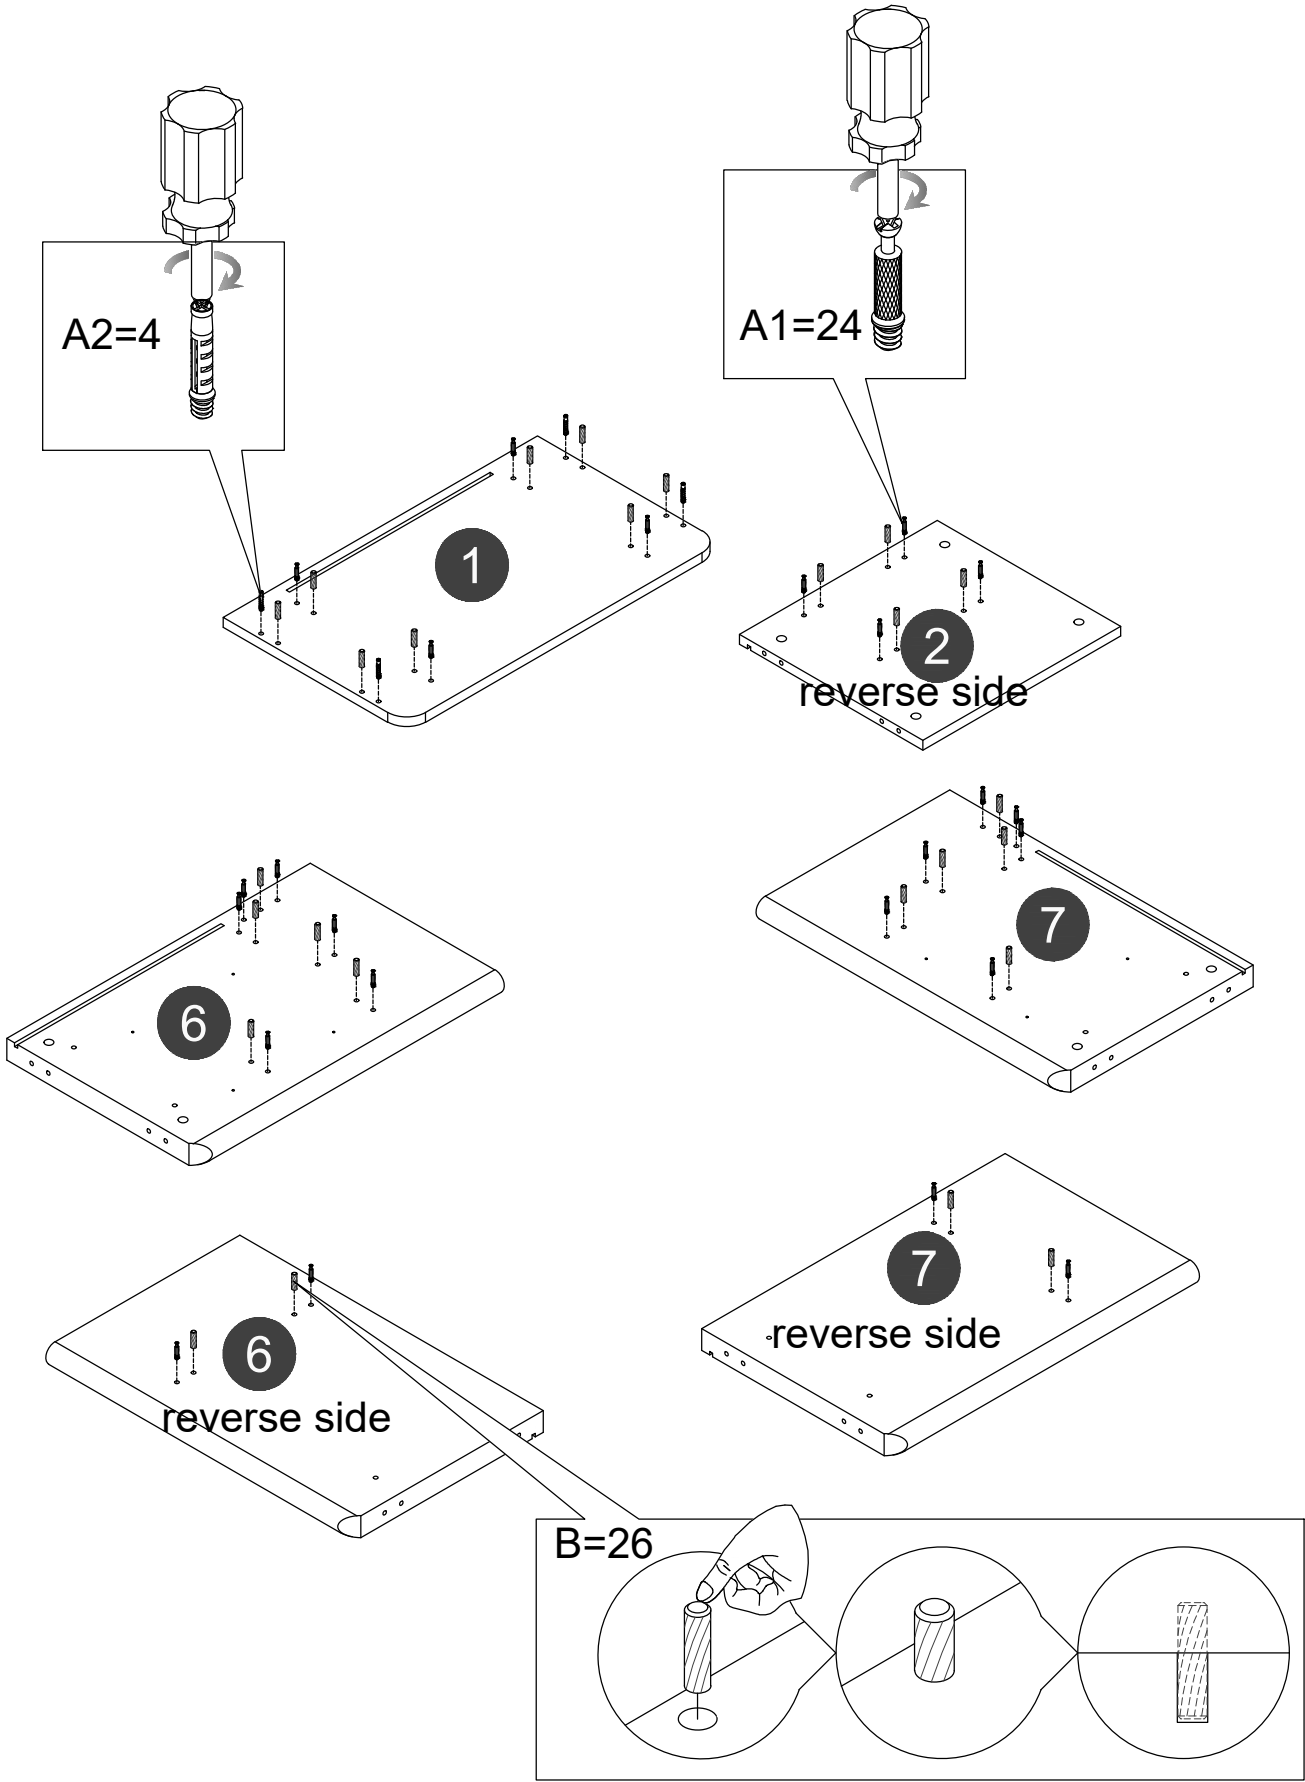


STEP 2

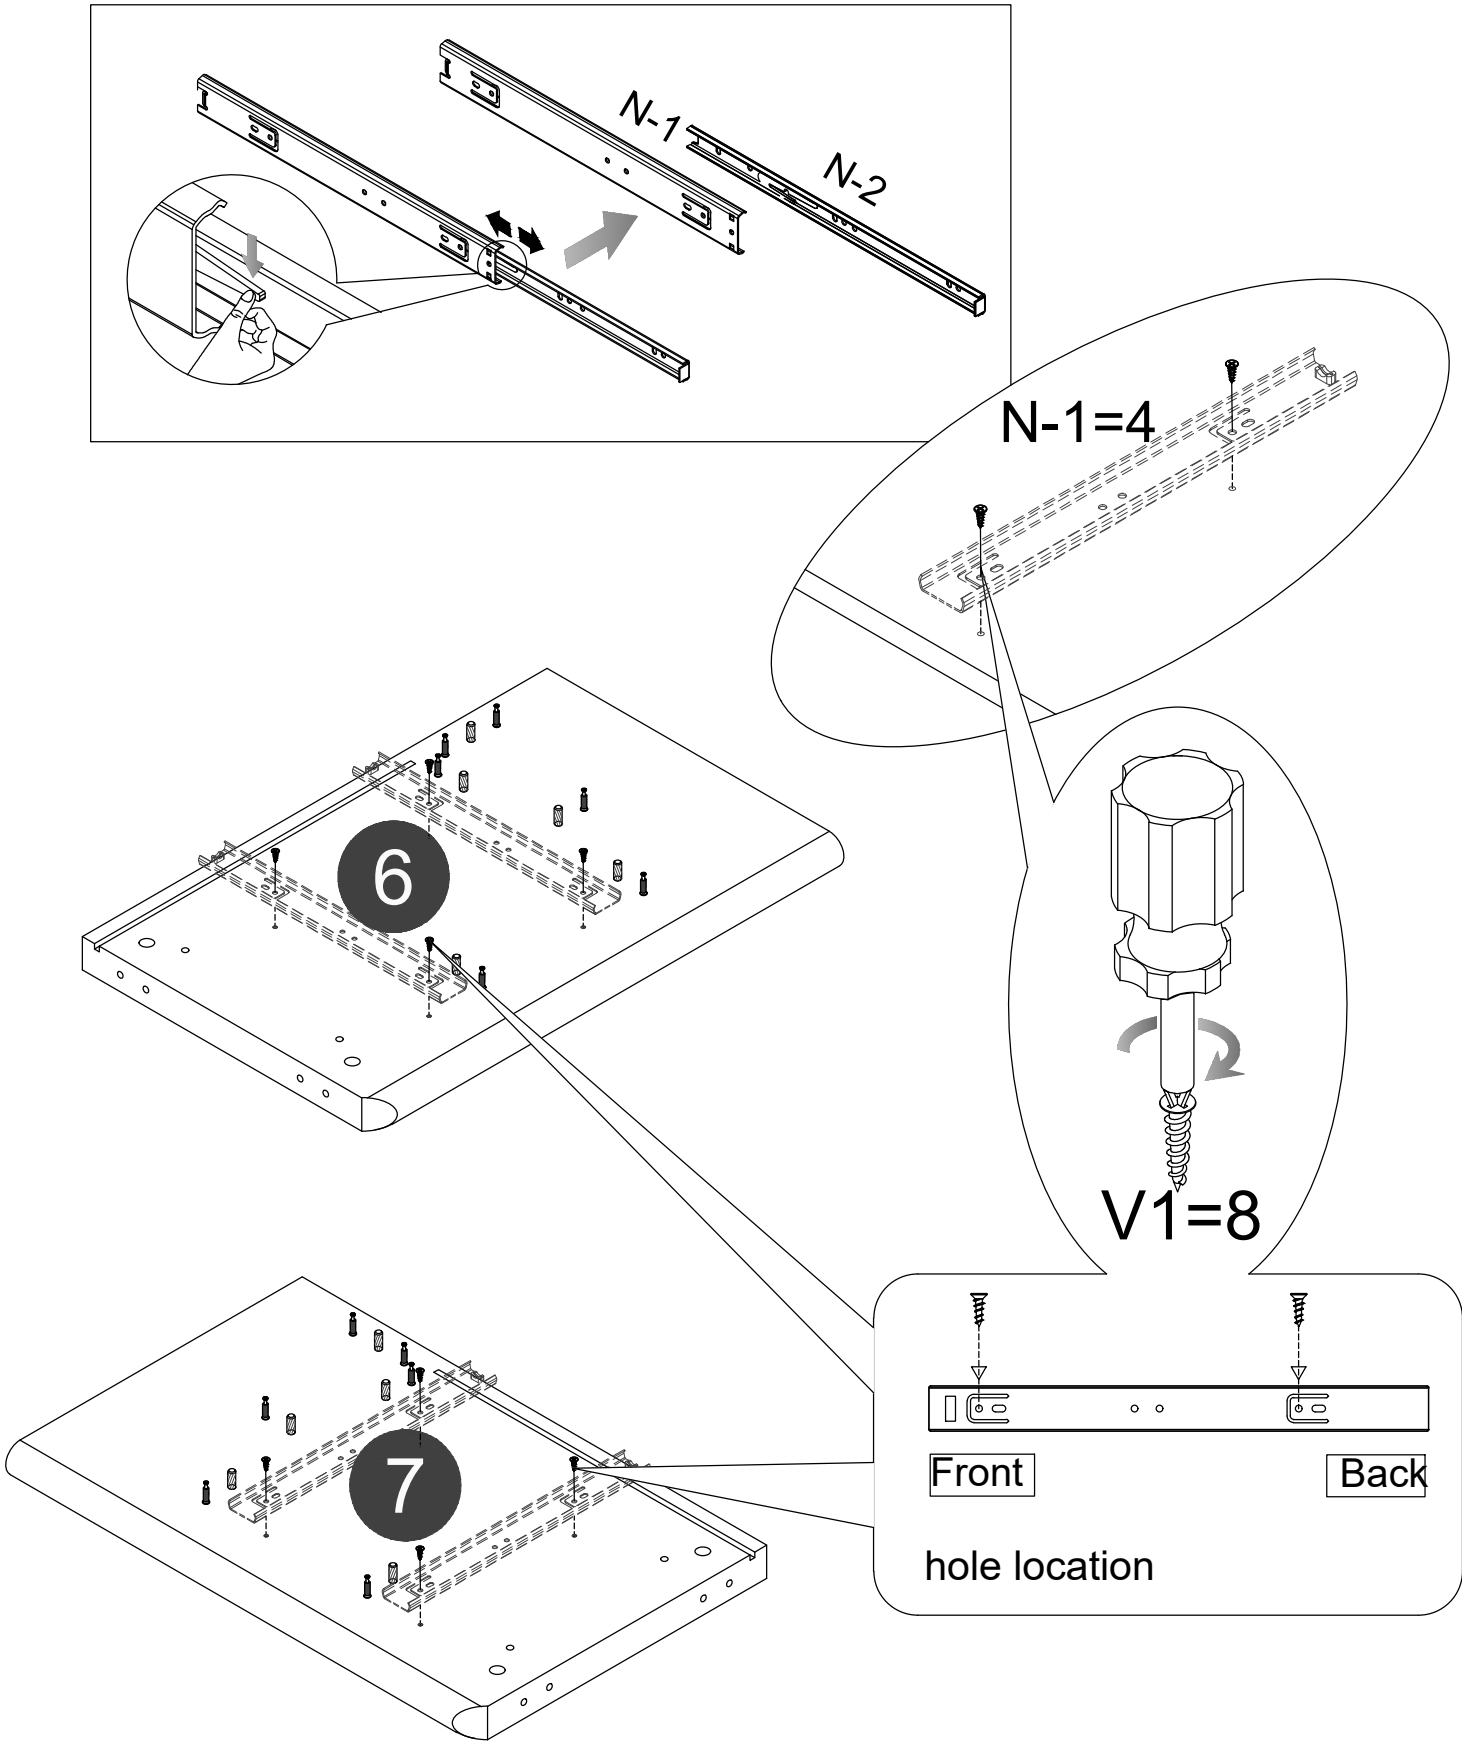


STEP 3

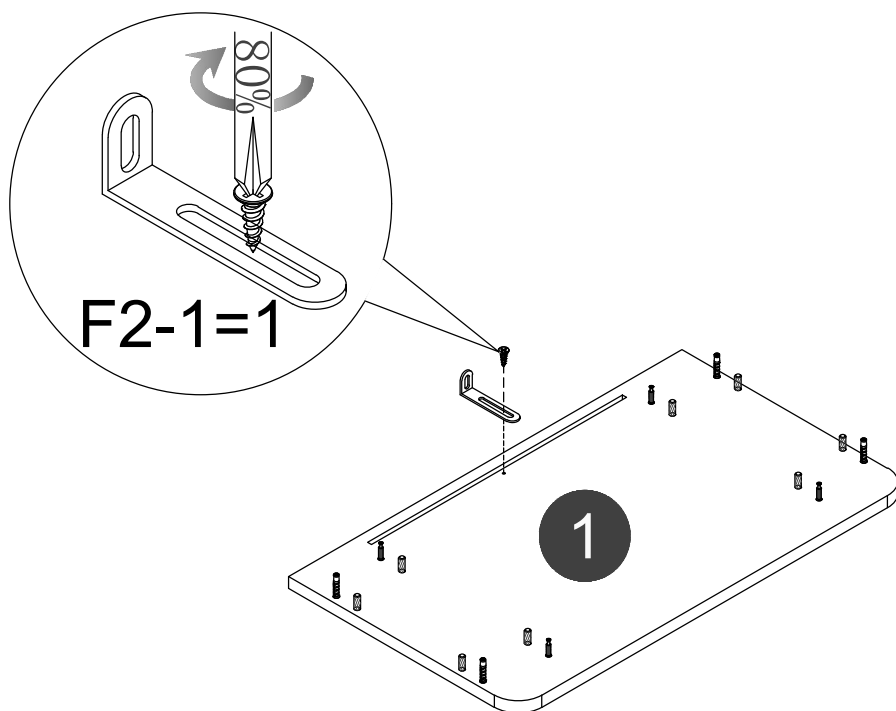


STEP 4

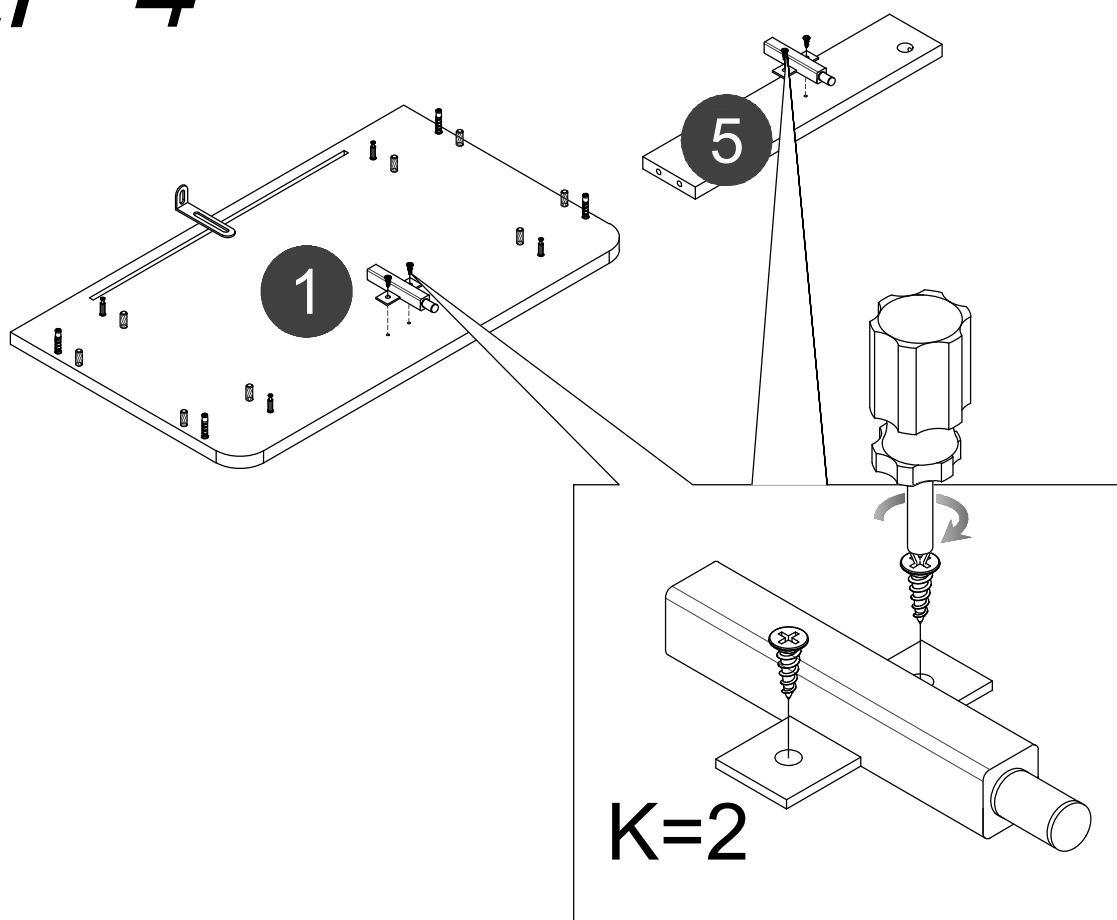


STEP 5

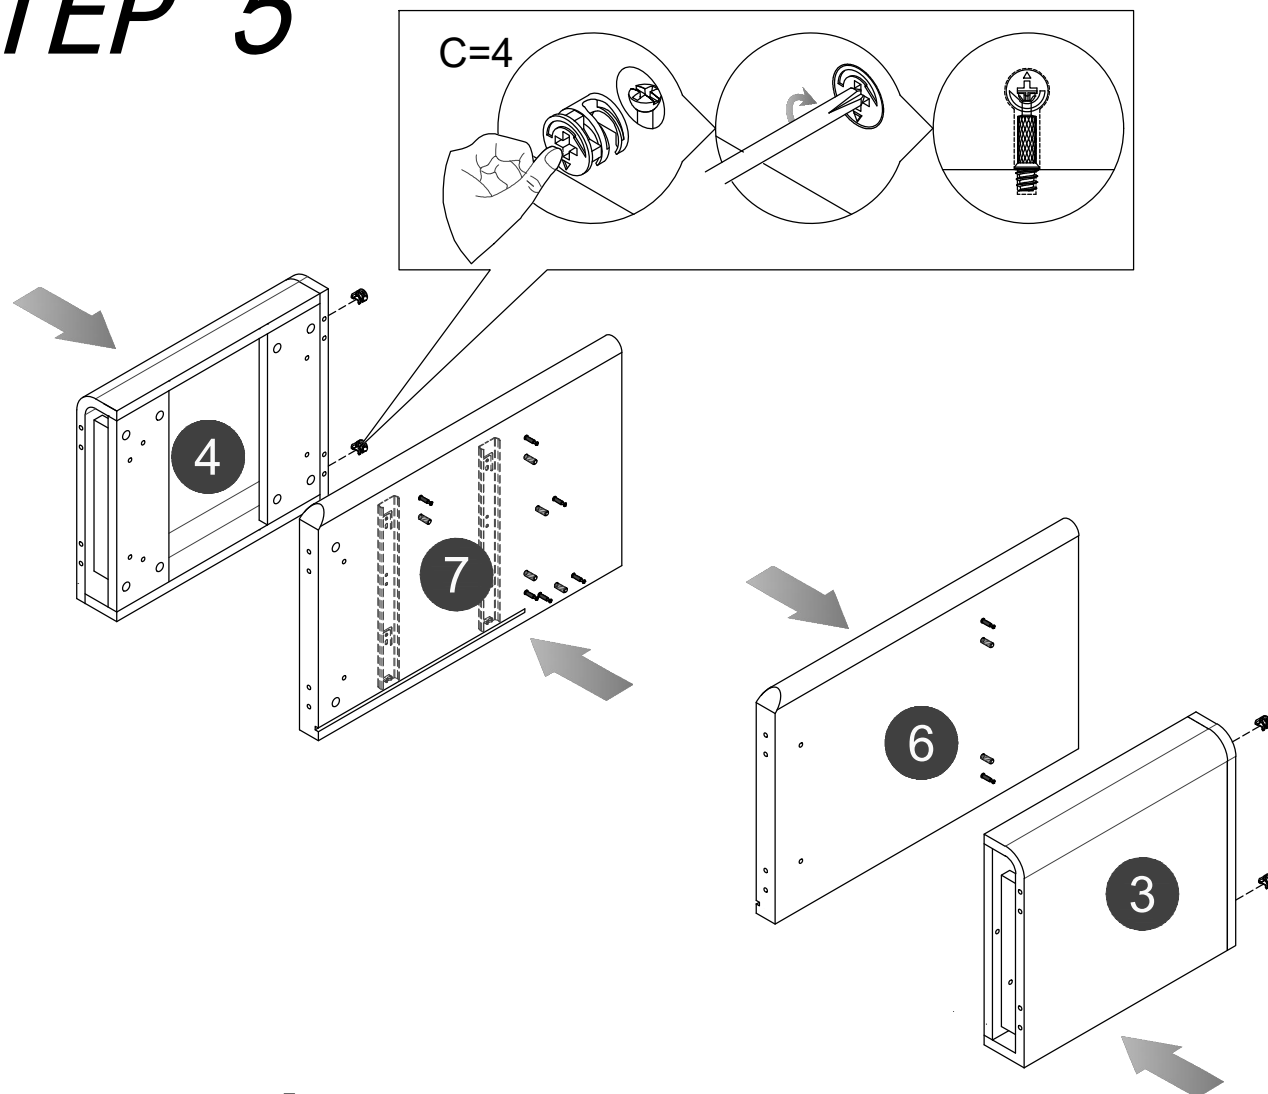


STEP 6

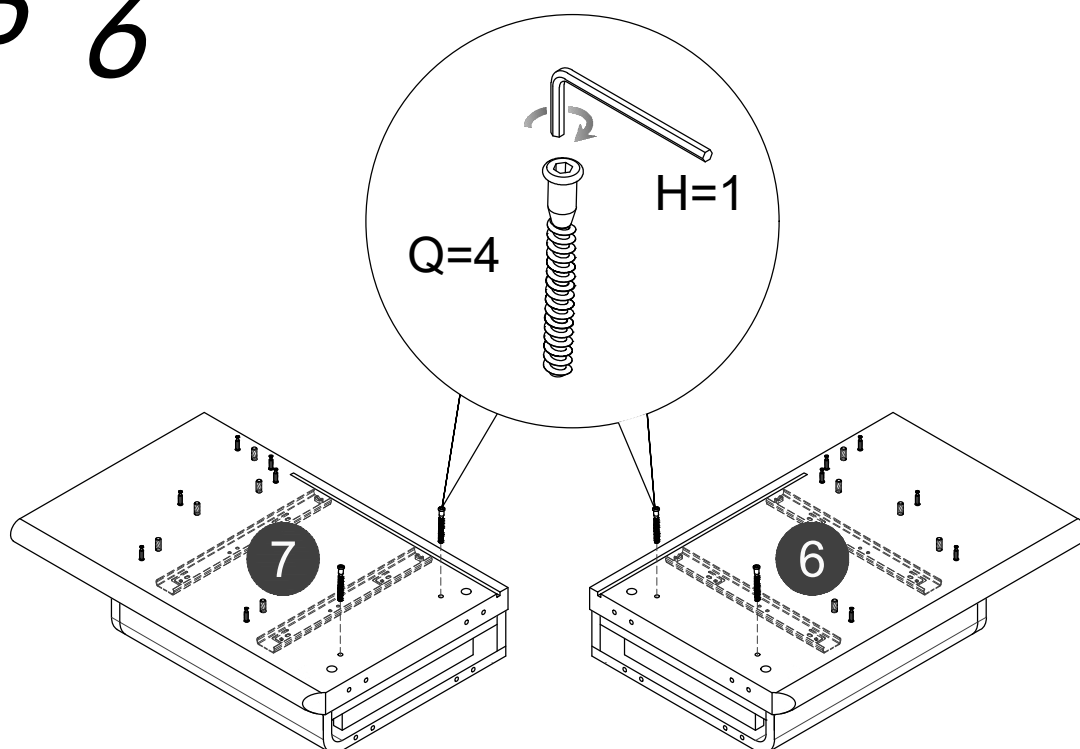


STEP 7

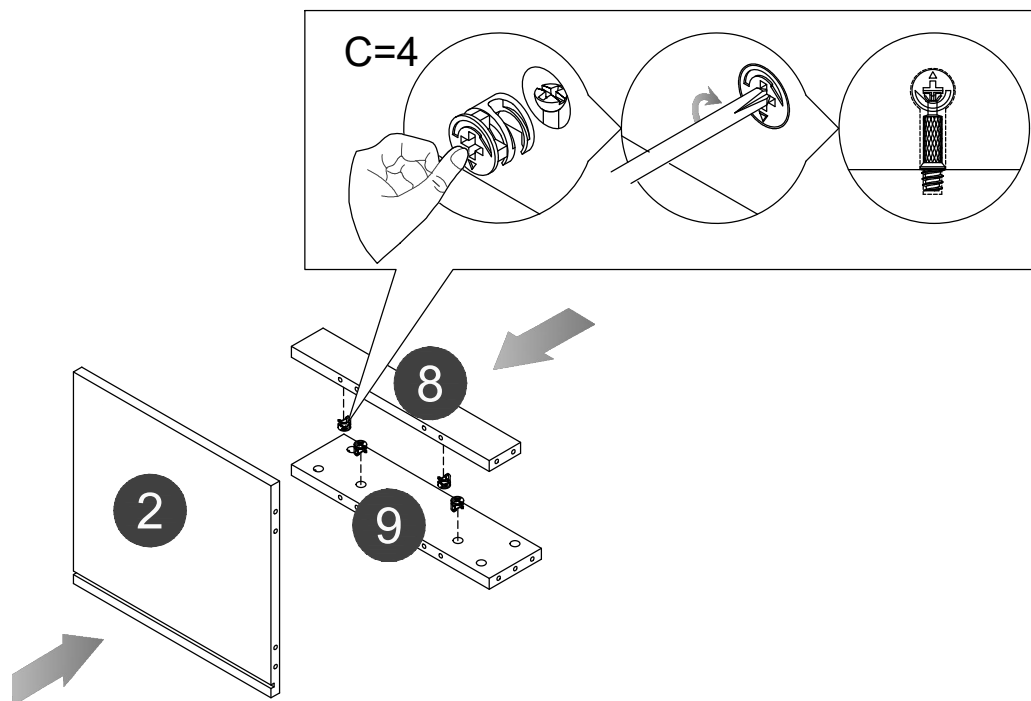


STEP 8

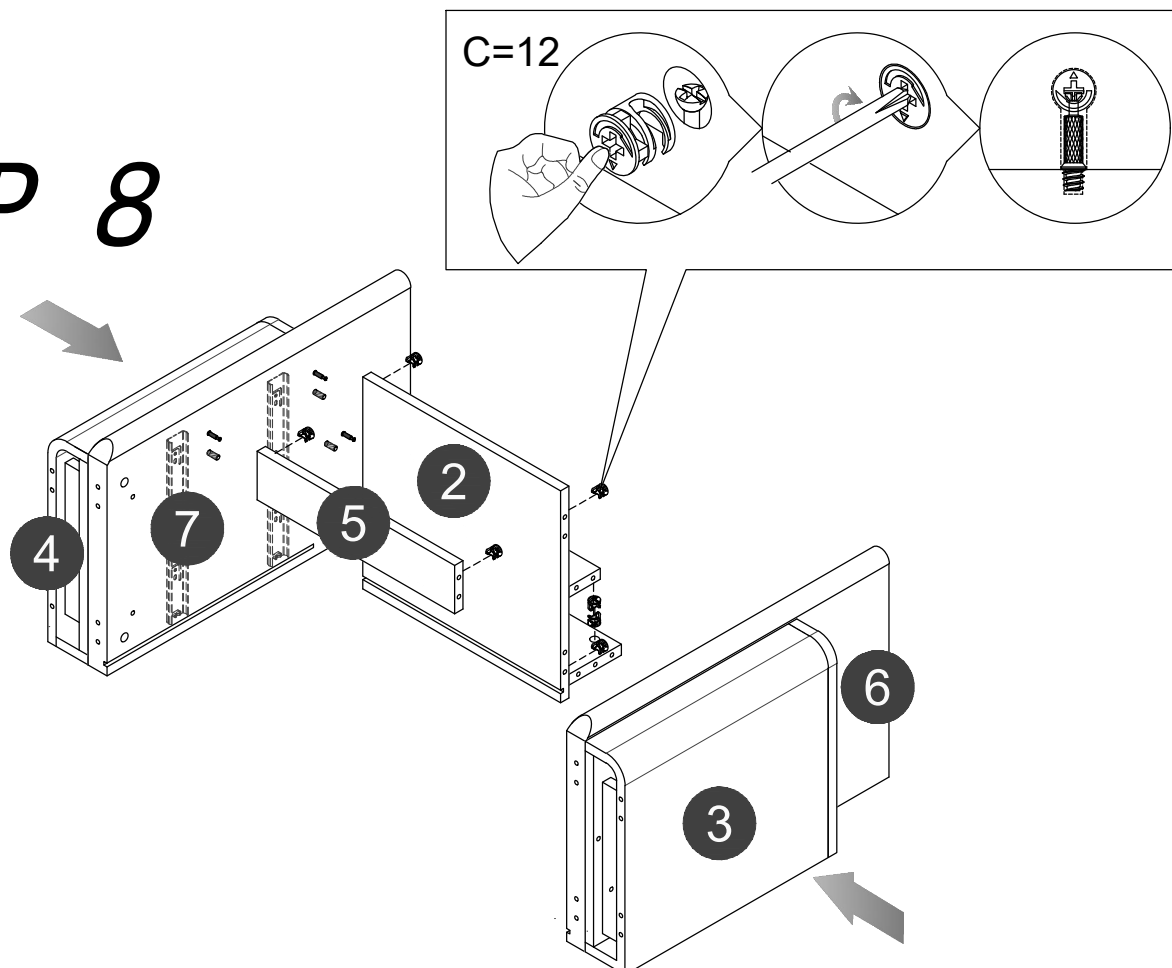


STEP 9

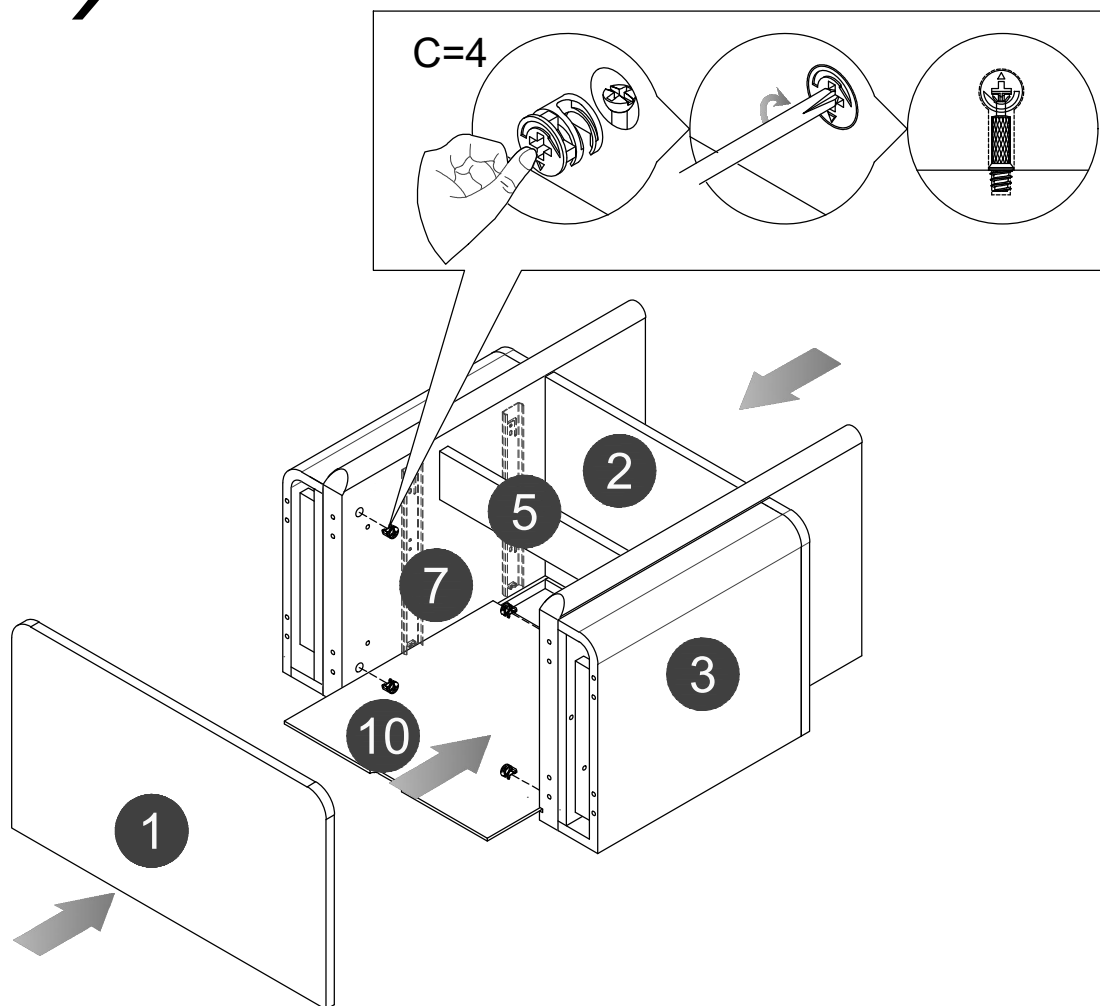


STEP 10

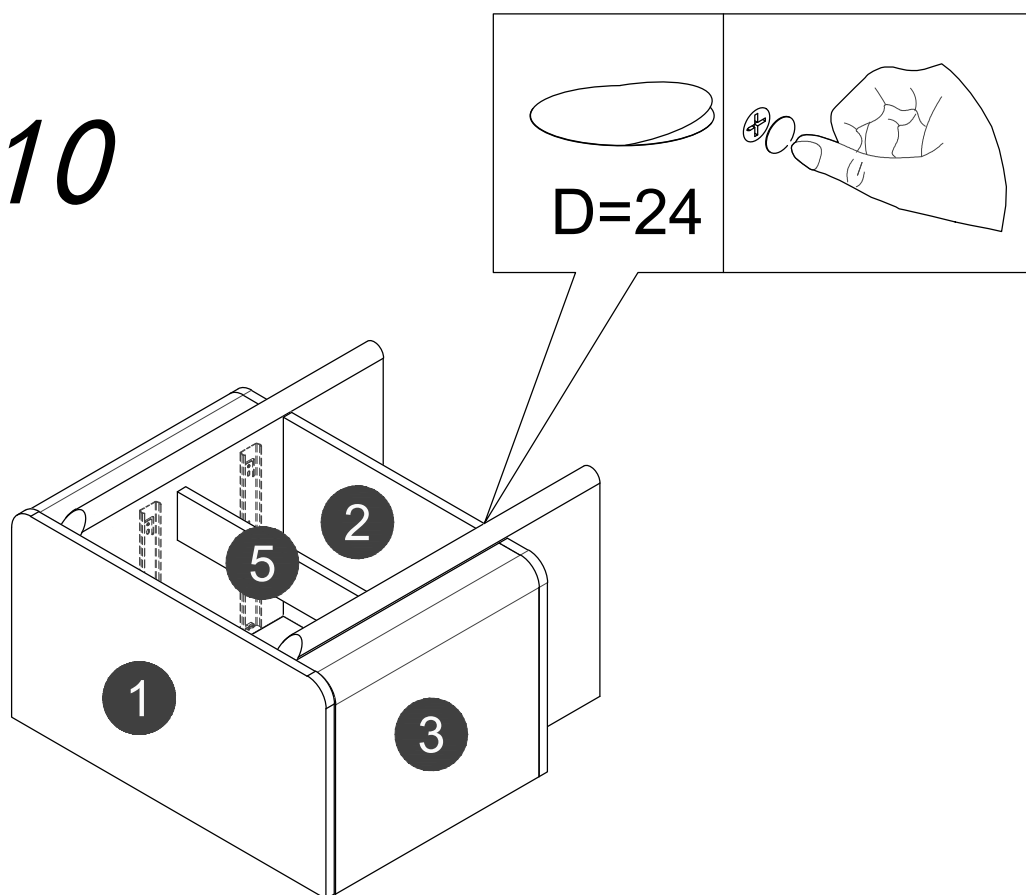


STEP 11

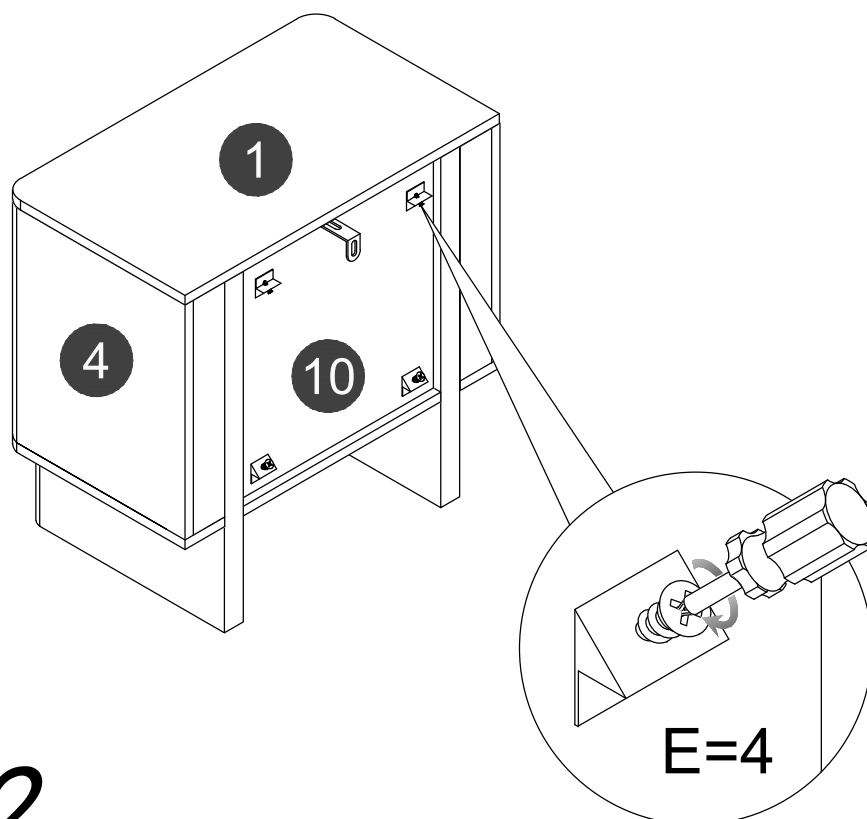

STEP 12

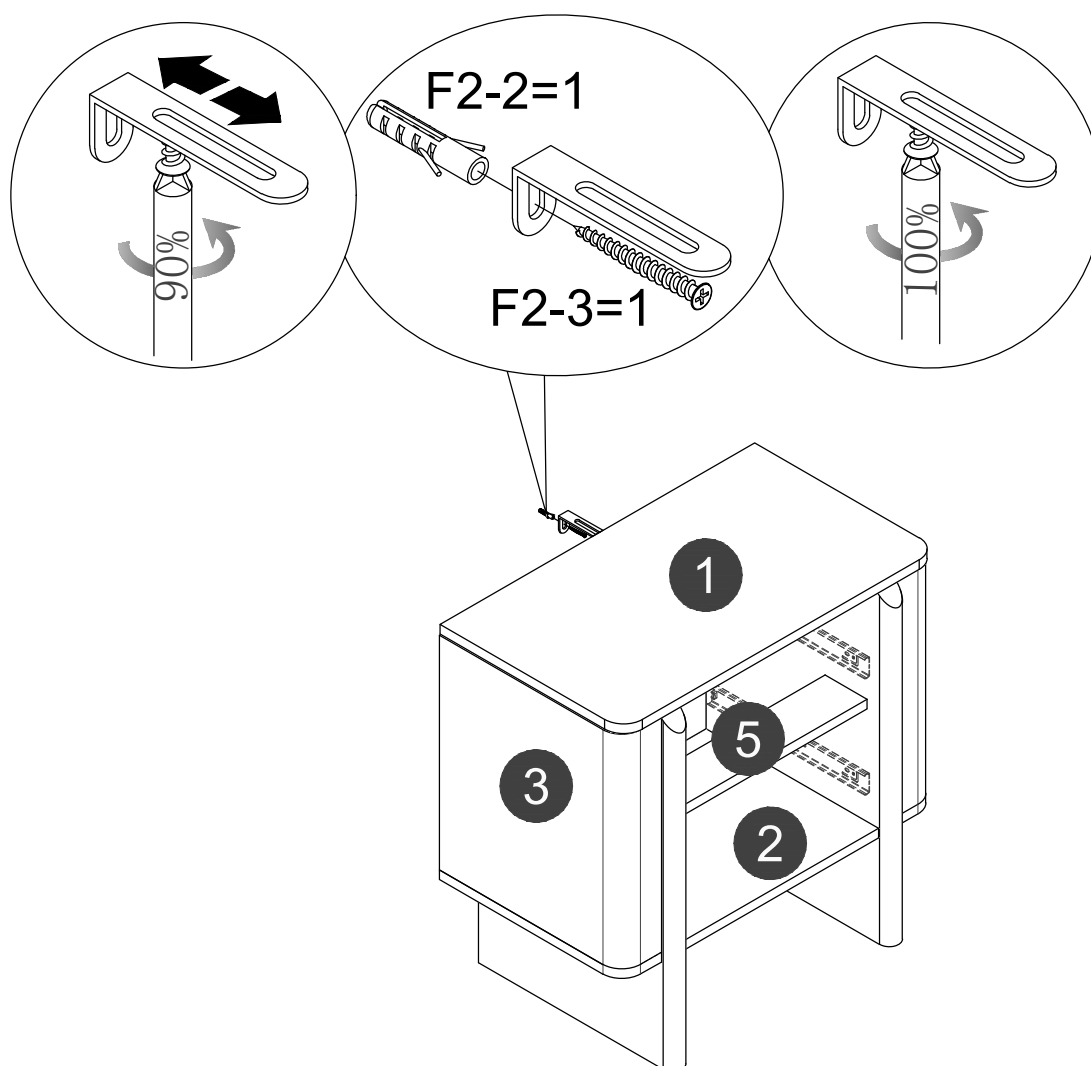


STEP 13

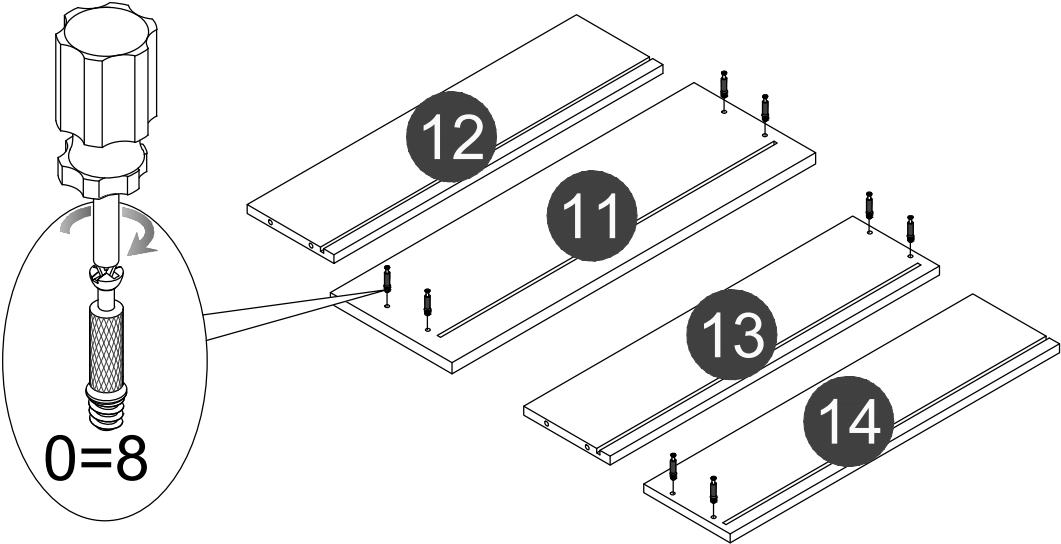


X2

STEP 14

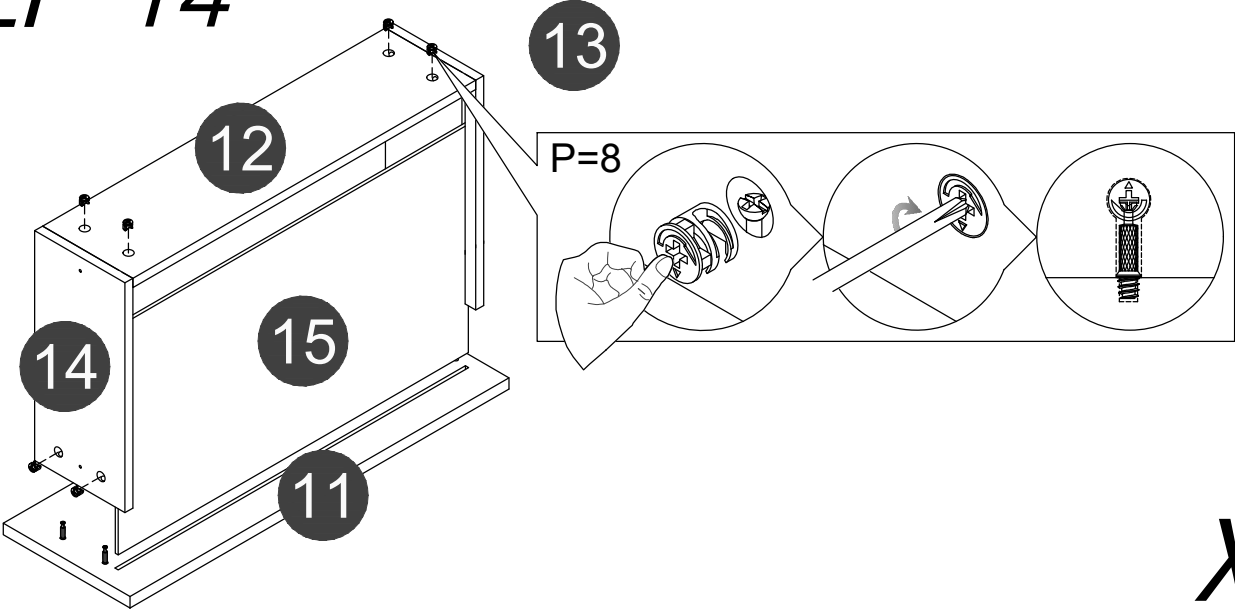


X2

STEP 15

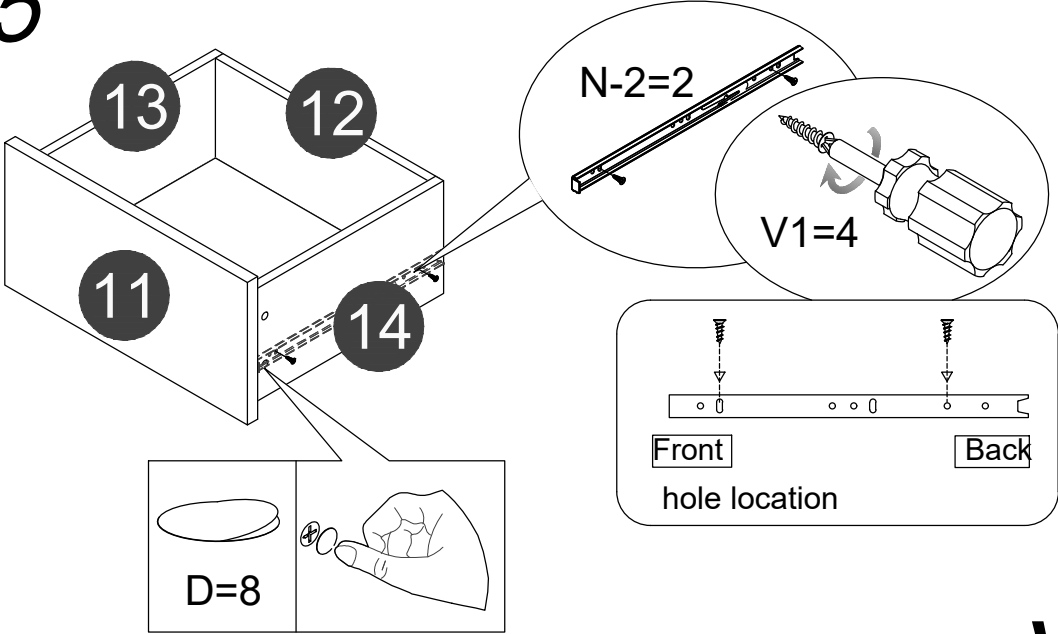


X2


STEP 16

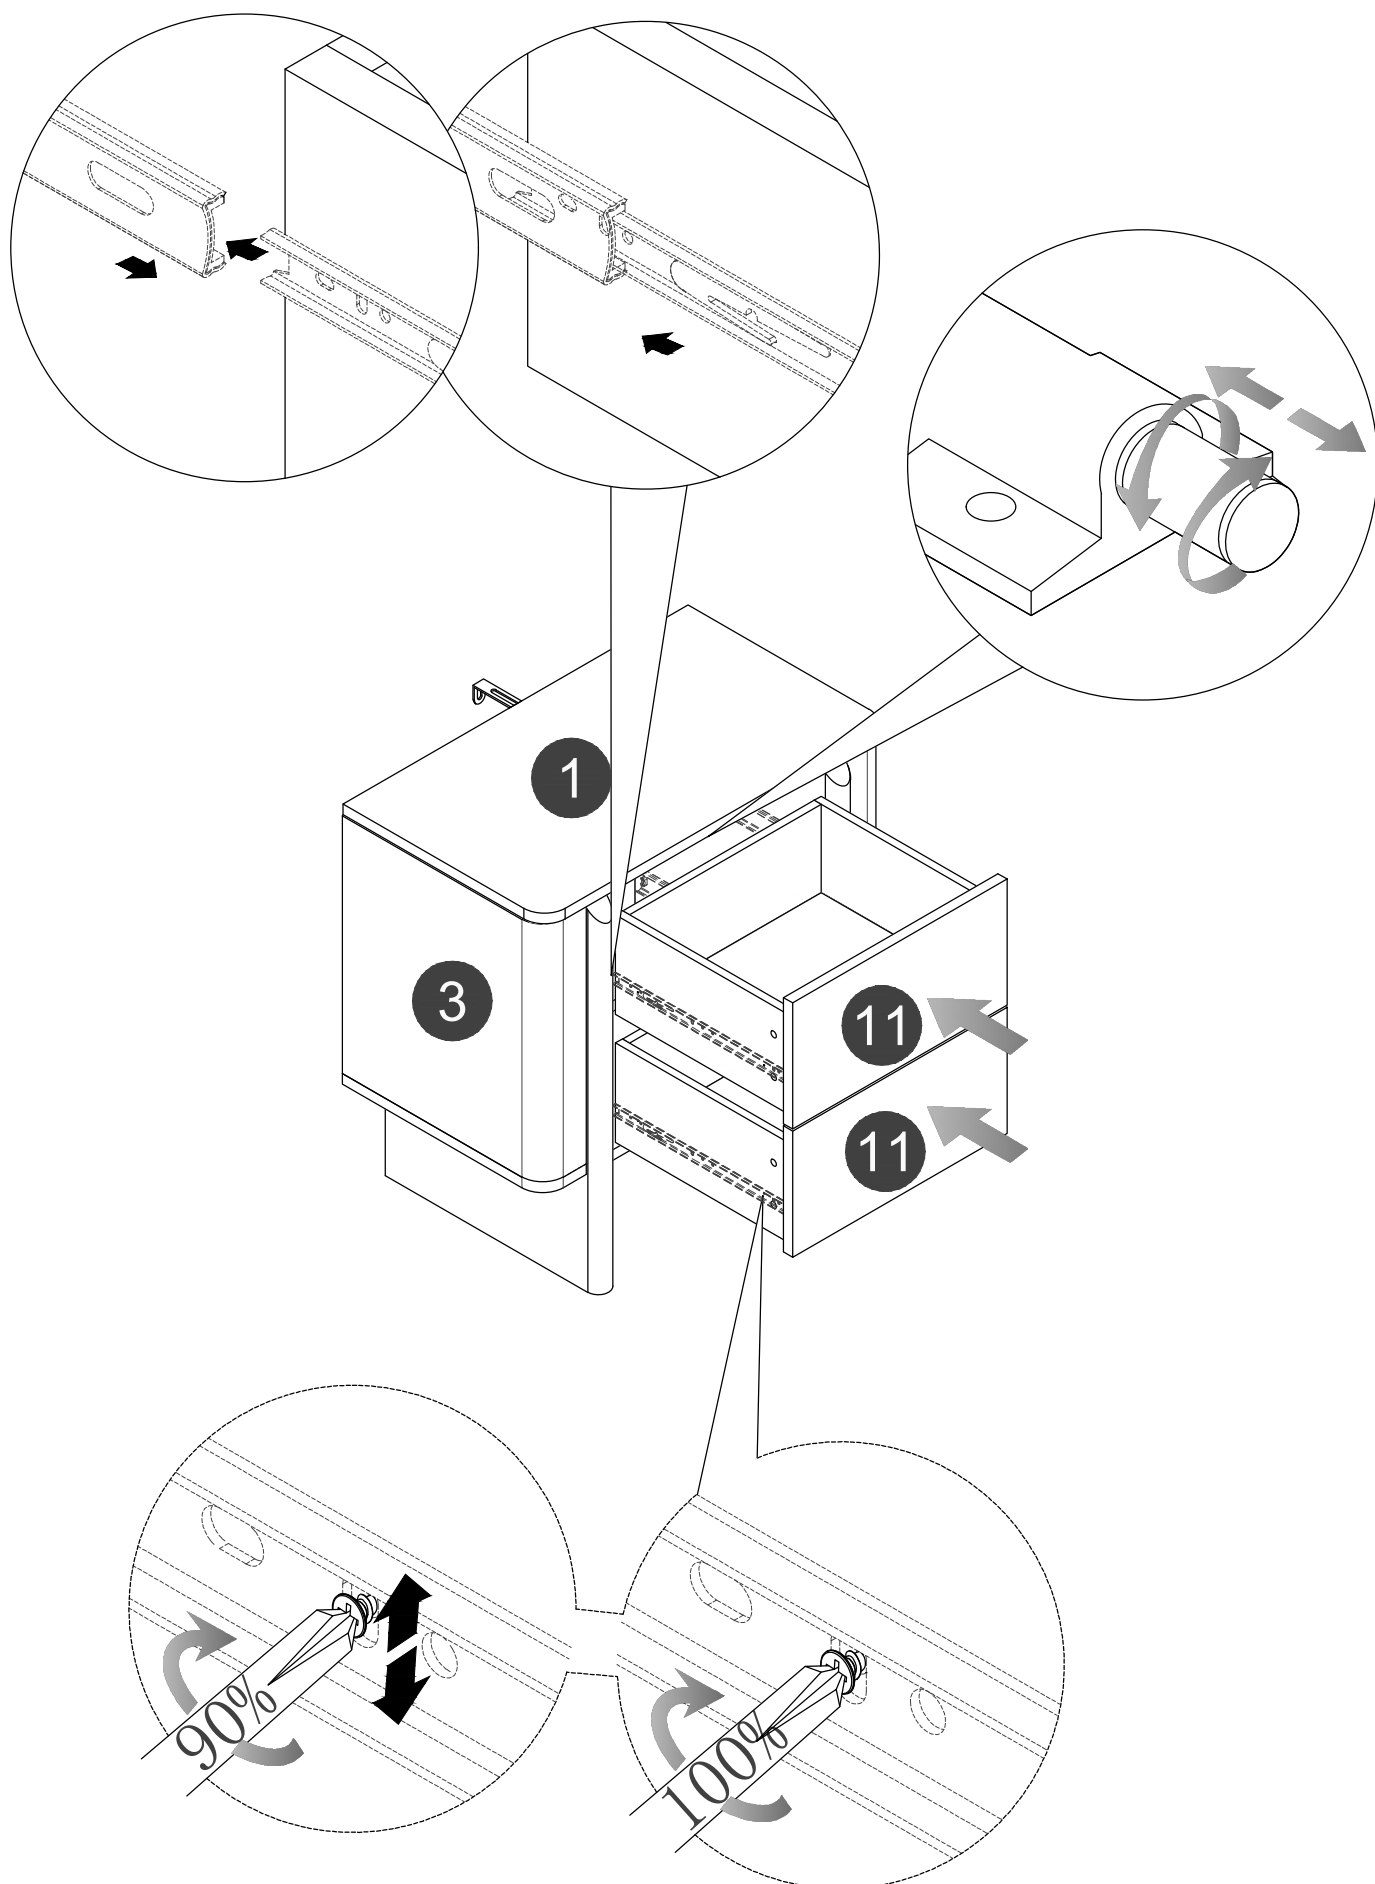

STEP 17

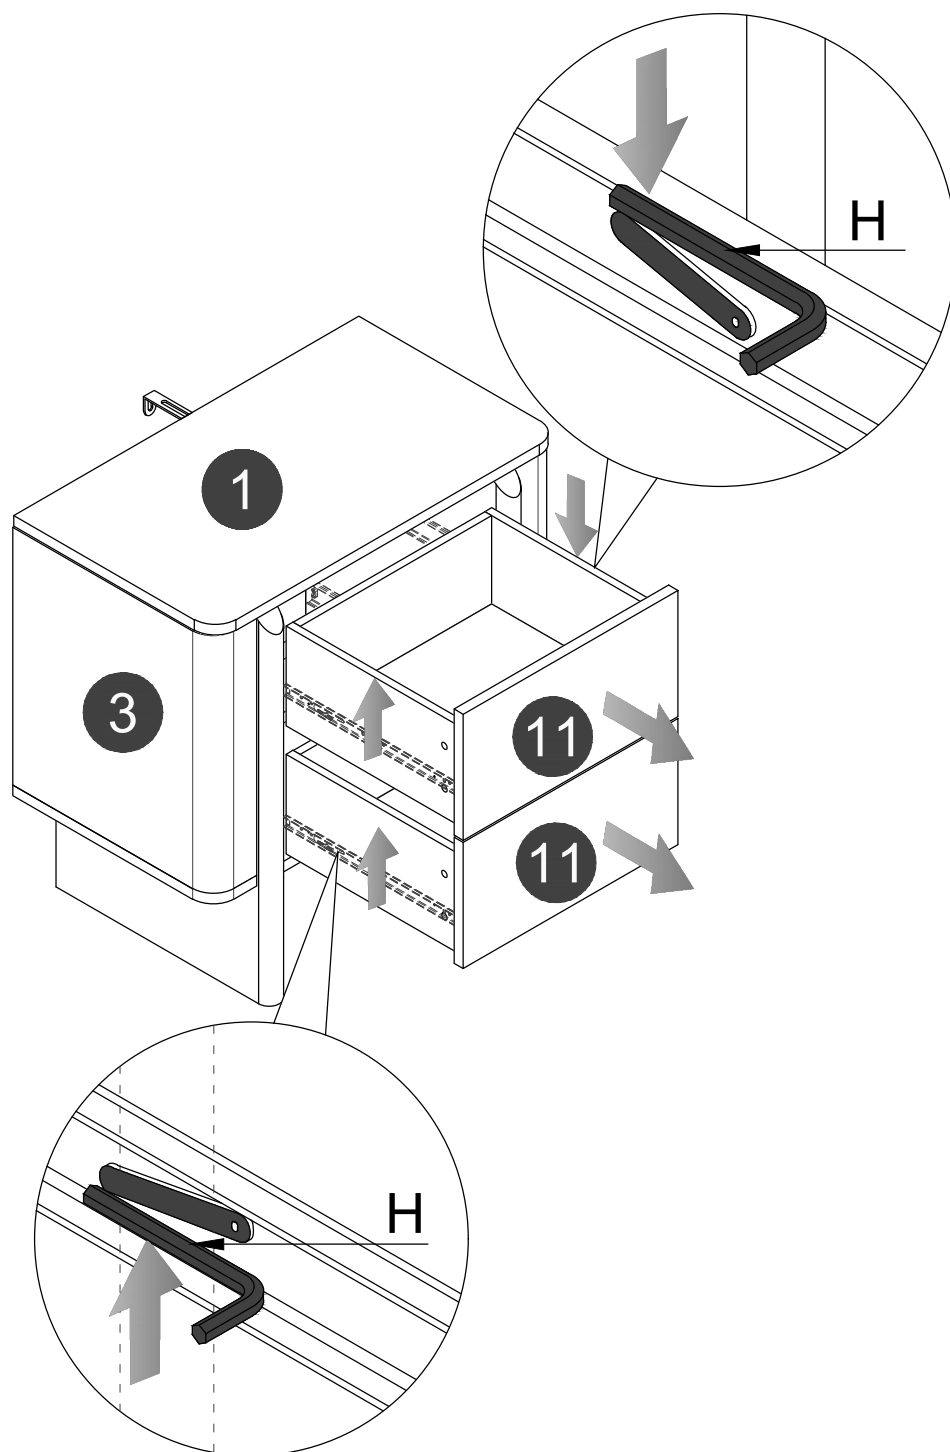

STEP 18

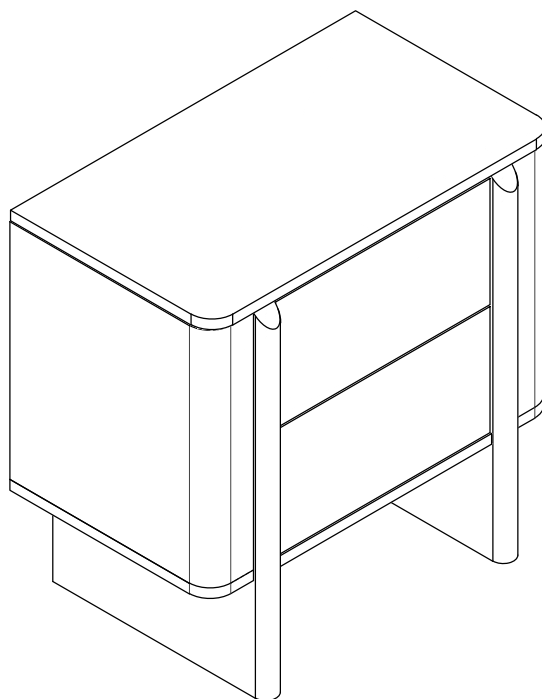

Finish