

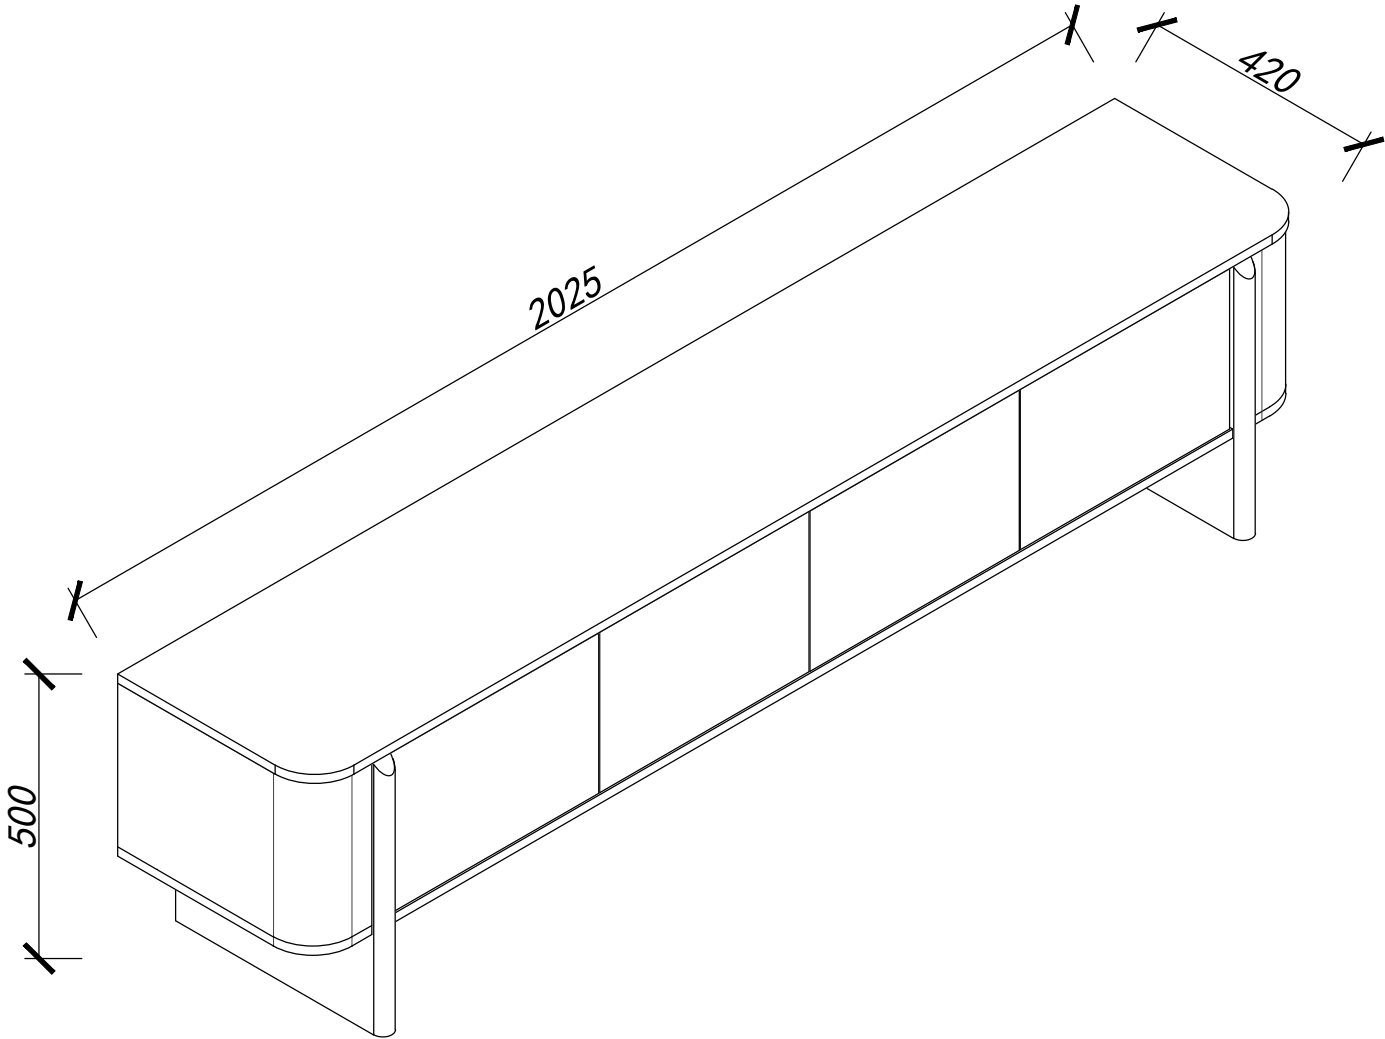
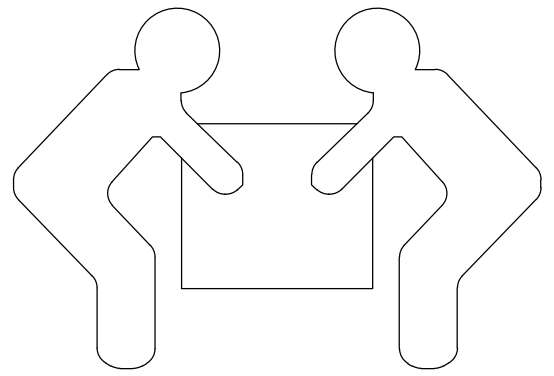








KOKETTO

Assembly Instruction

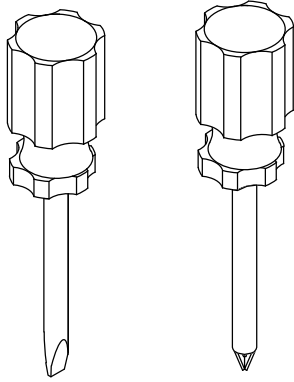

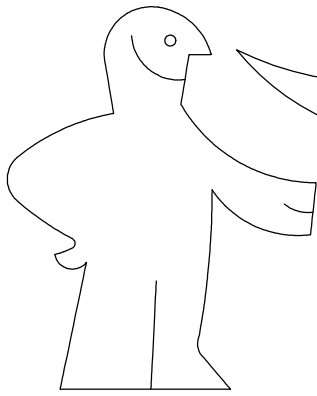


2 person recommended

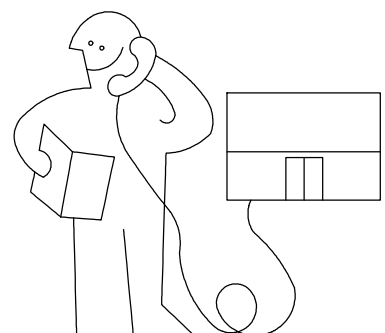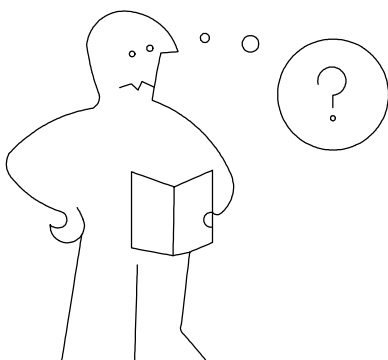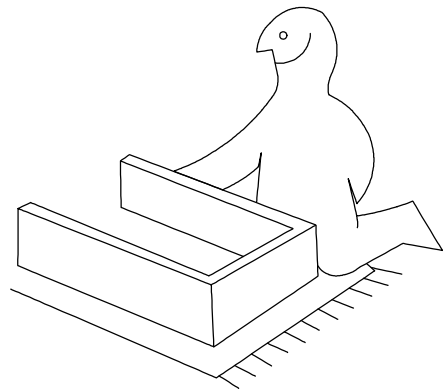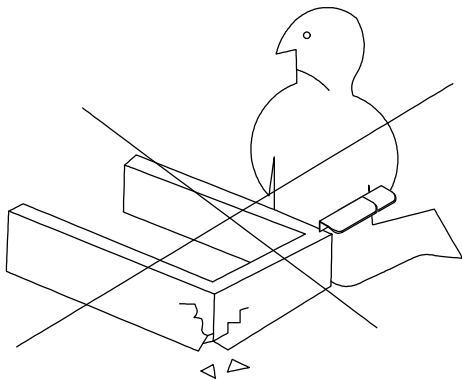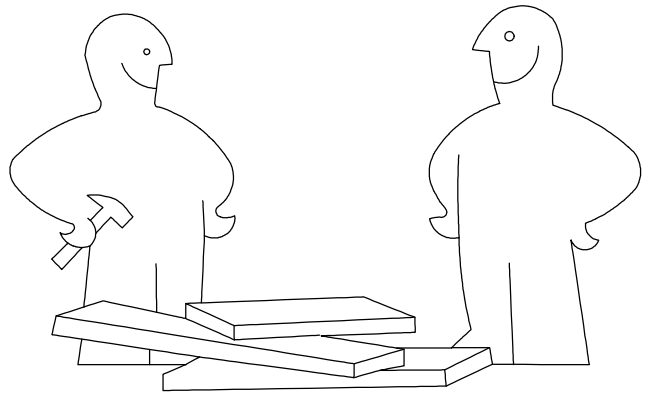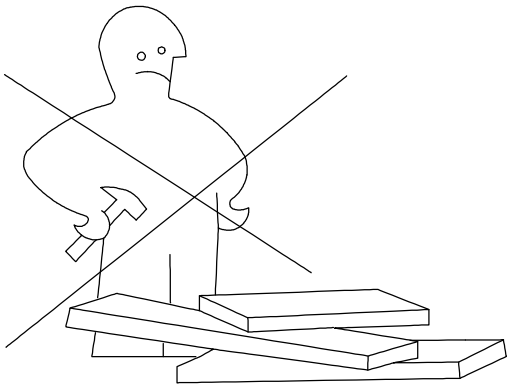

Panel No	Panel Sizes	Quantity
1		1
2		1
3	304*396*120	1
4	304*396*120	1
5	288*357*16	1
6	288*357*16	1
7	288*377*16	1
8	479*420*36	1
9	479*420*36	1

Panel No	Panel Sizes	Quantity
10	418*350*16	2
11	409*350*16	2
12	1711*60*18	1
13	1711*100*18	1
14	152*60*16	2
15	1721*298*5	1
16	282*425*16	2
17	282*425*16	2

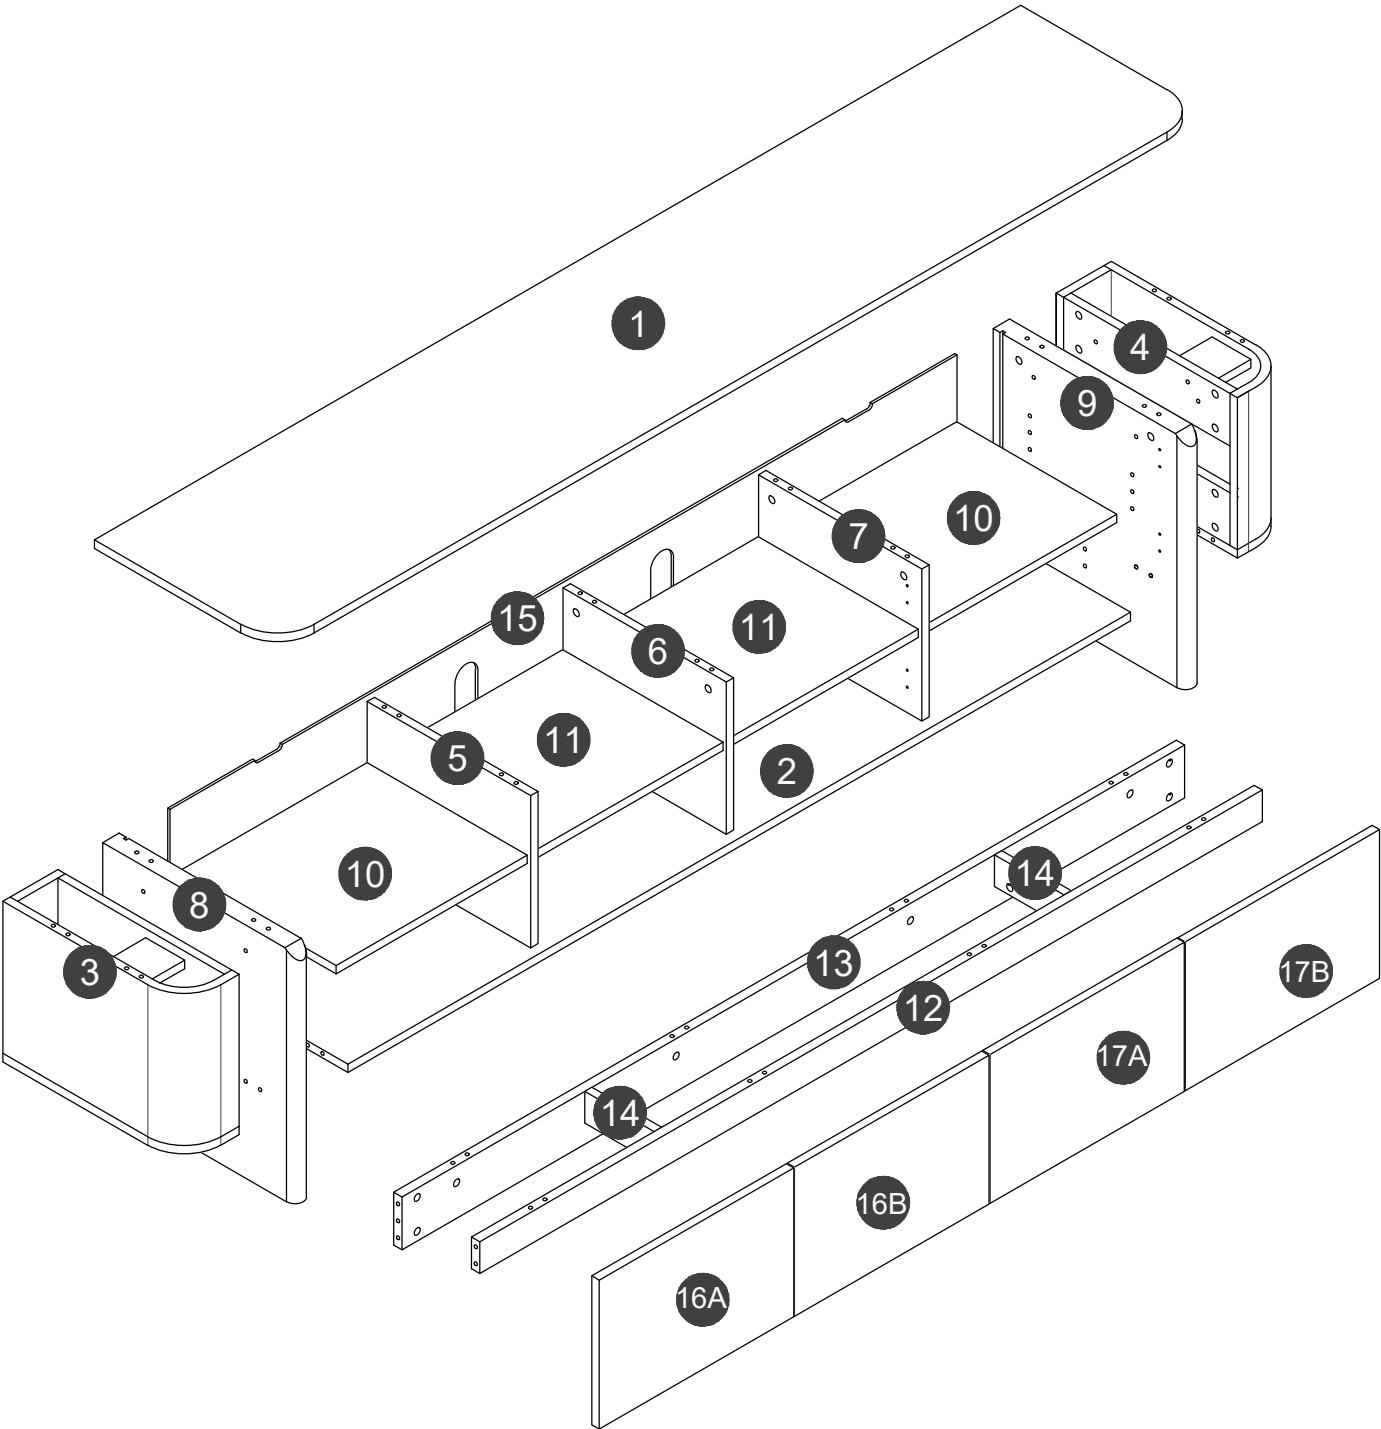


Fittings




M6*40

A1=36




Φ8*40

A2=4



Φ8*30

B=44

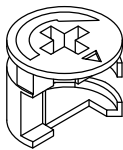

Φ15*12

C=36




Φ21

D=36




E=10

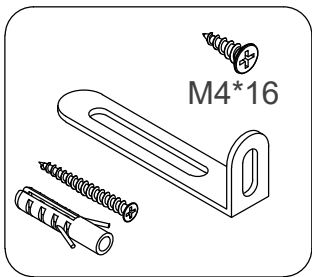


M4*16


F2=2




H =1

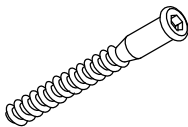

Q=10

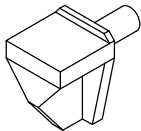


L=16

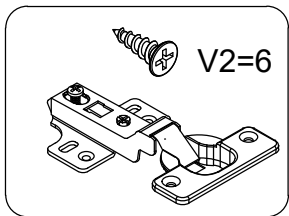


V2=6

I2=4

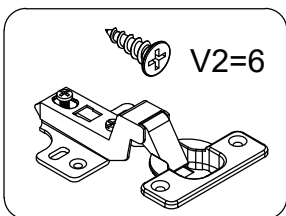


V2=6

I3=4

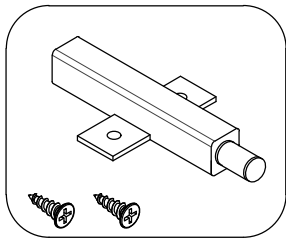


K=4


STEP 1

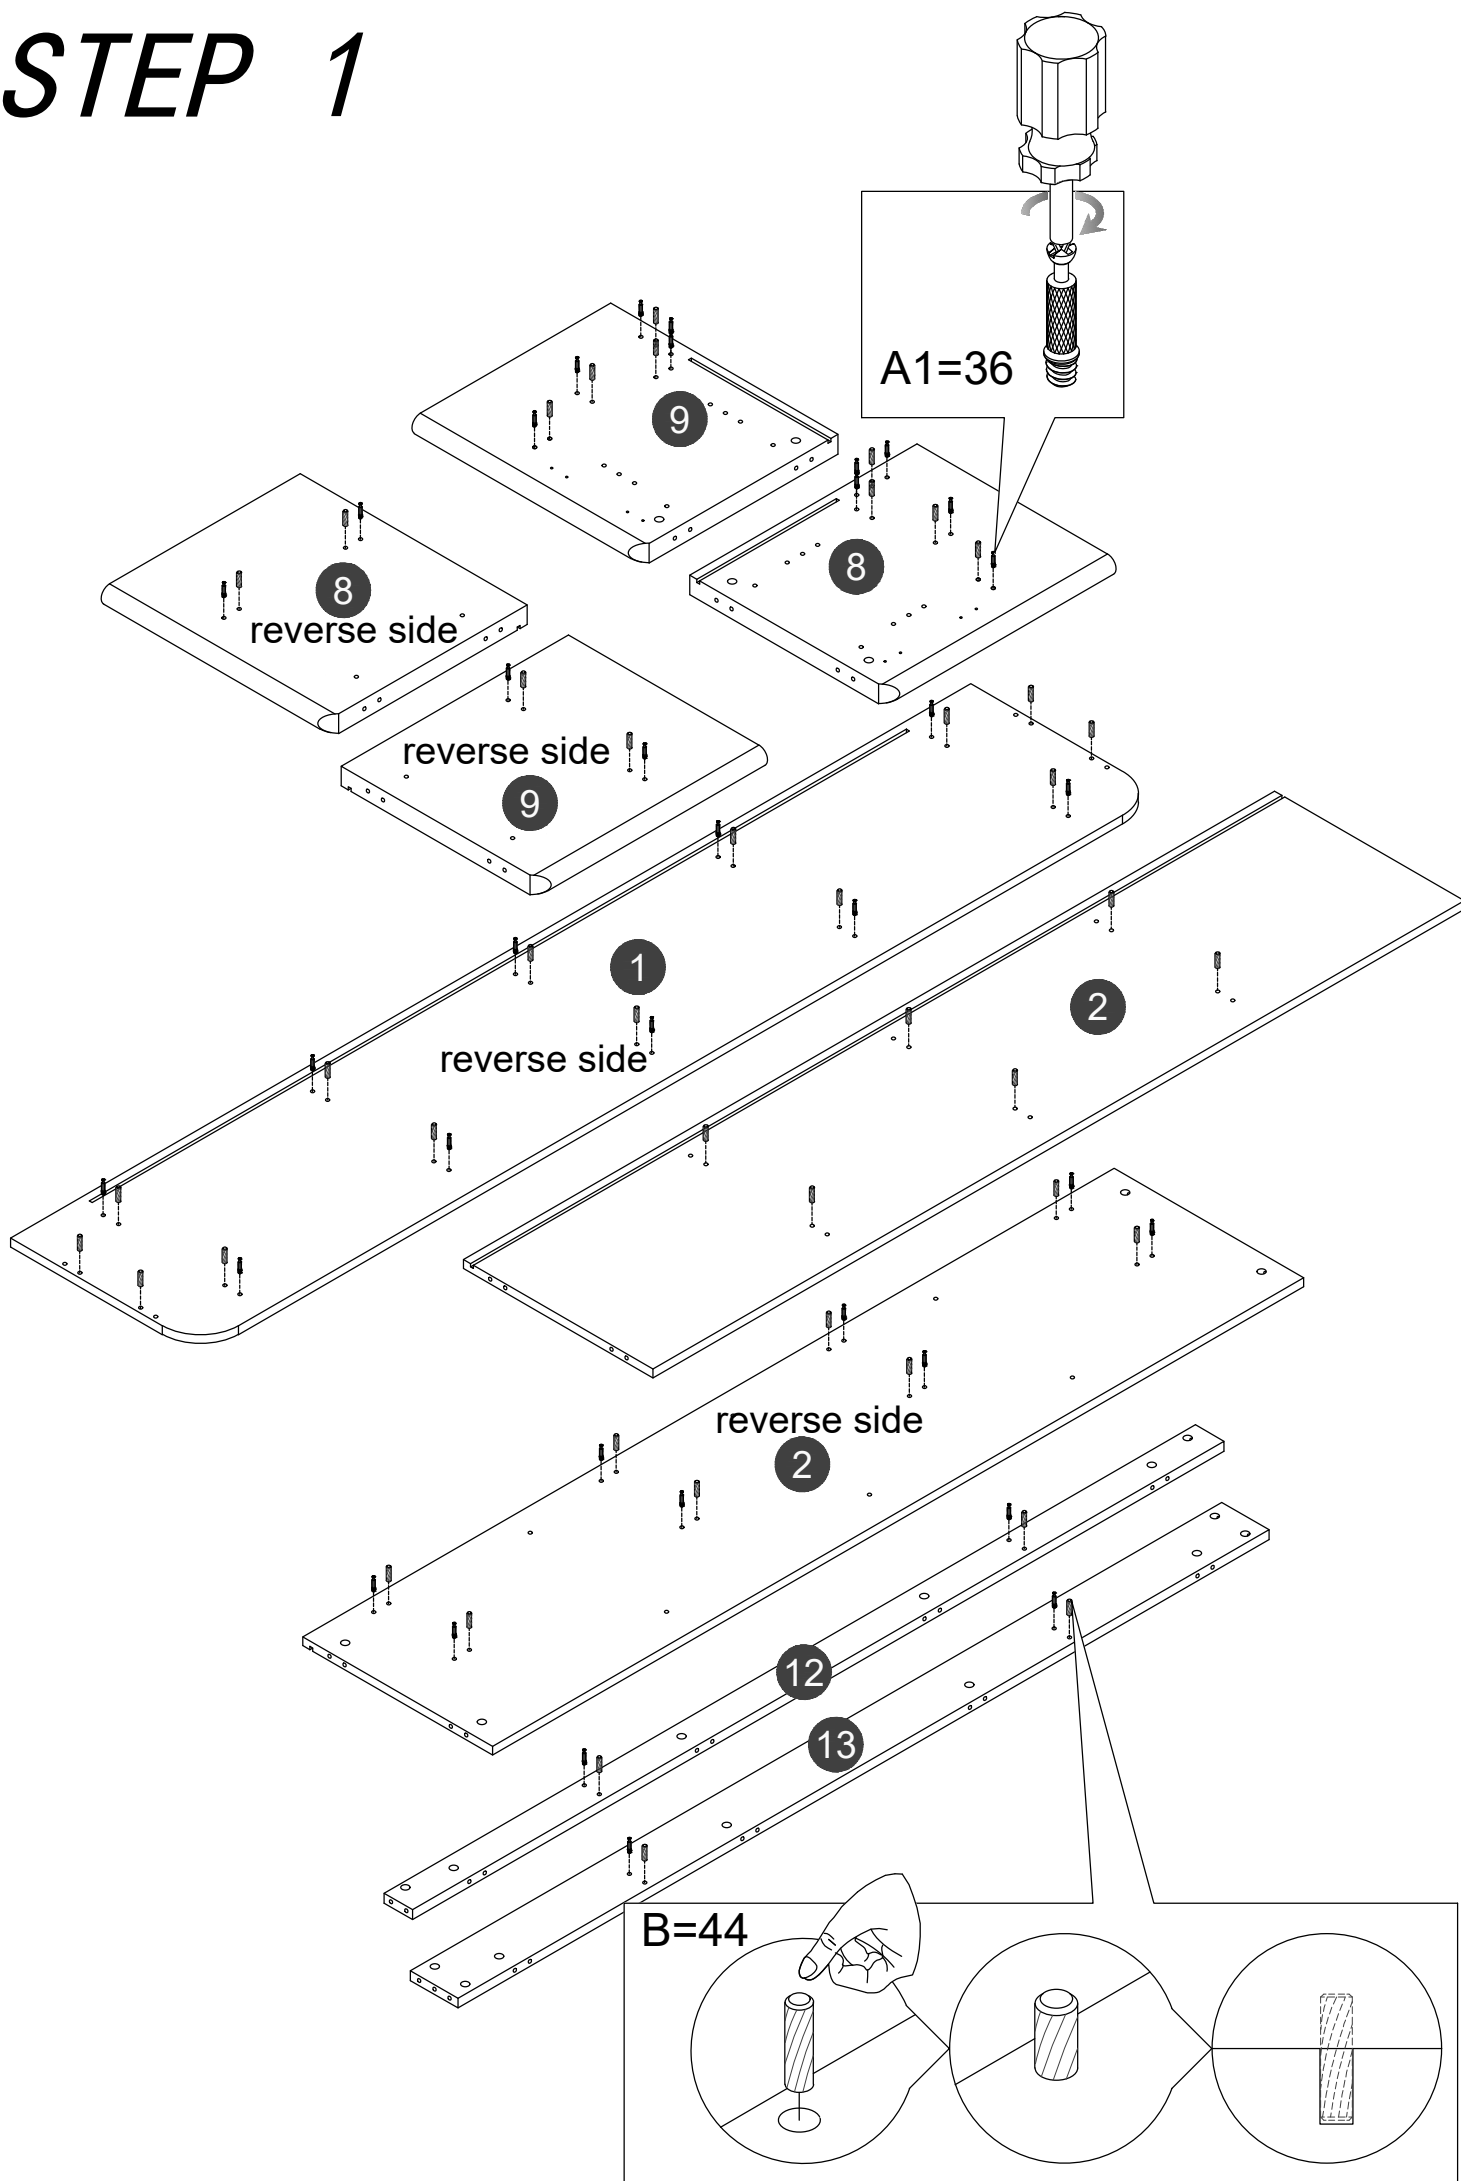


STEP 2

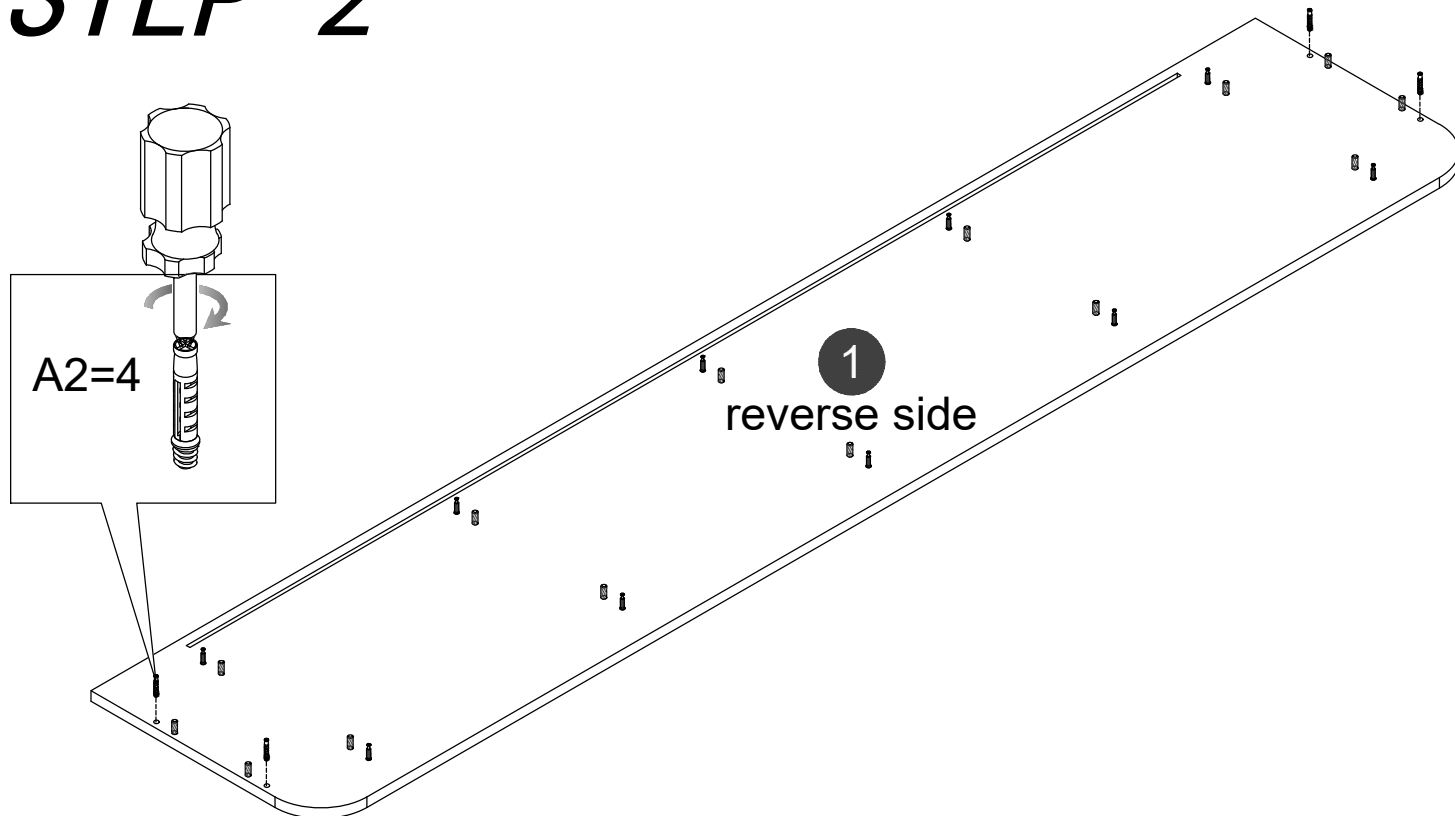


STEP 3

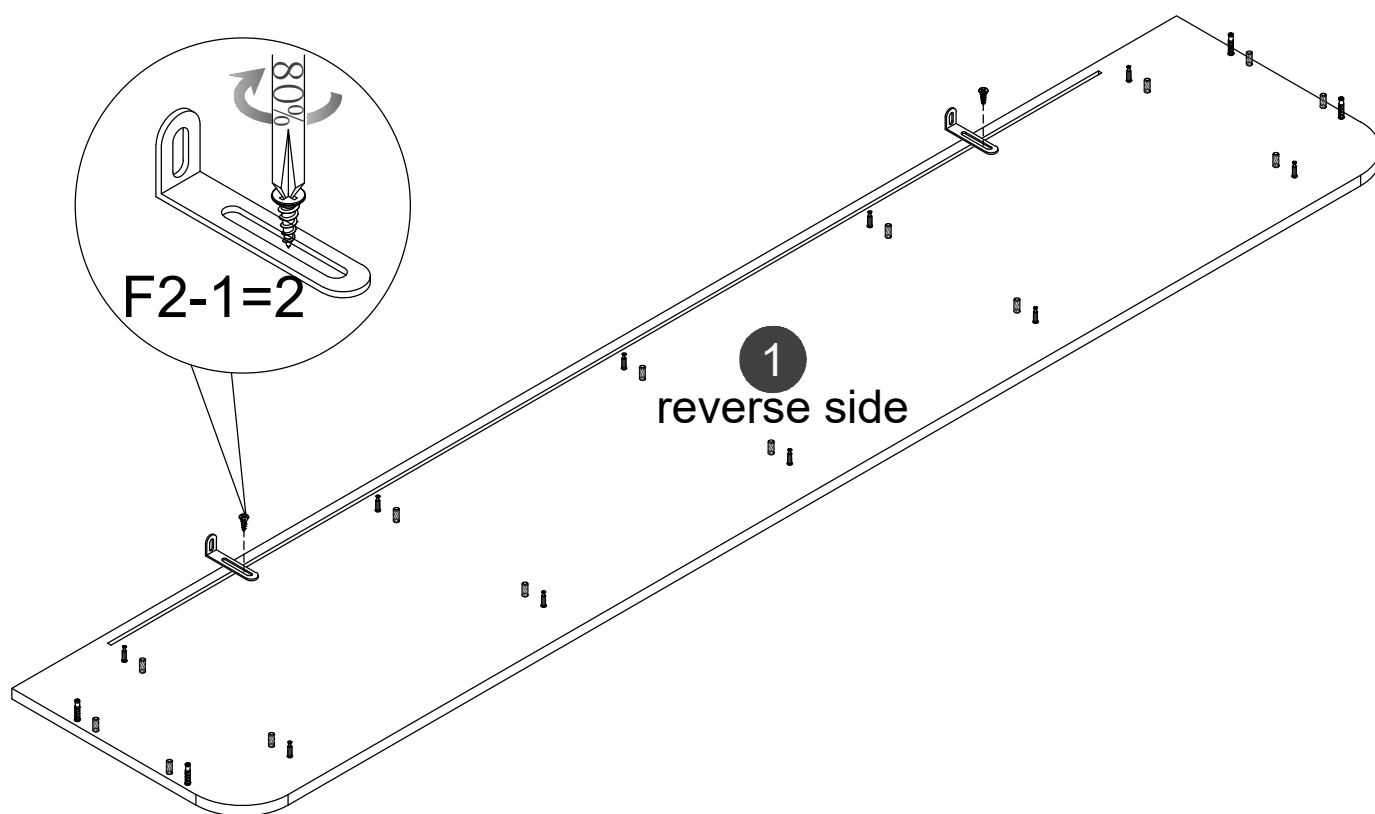


STEP 4

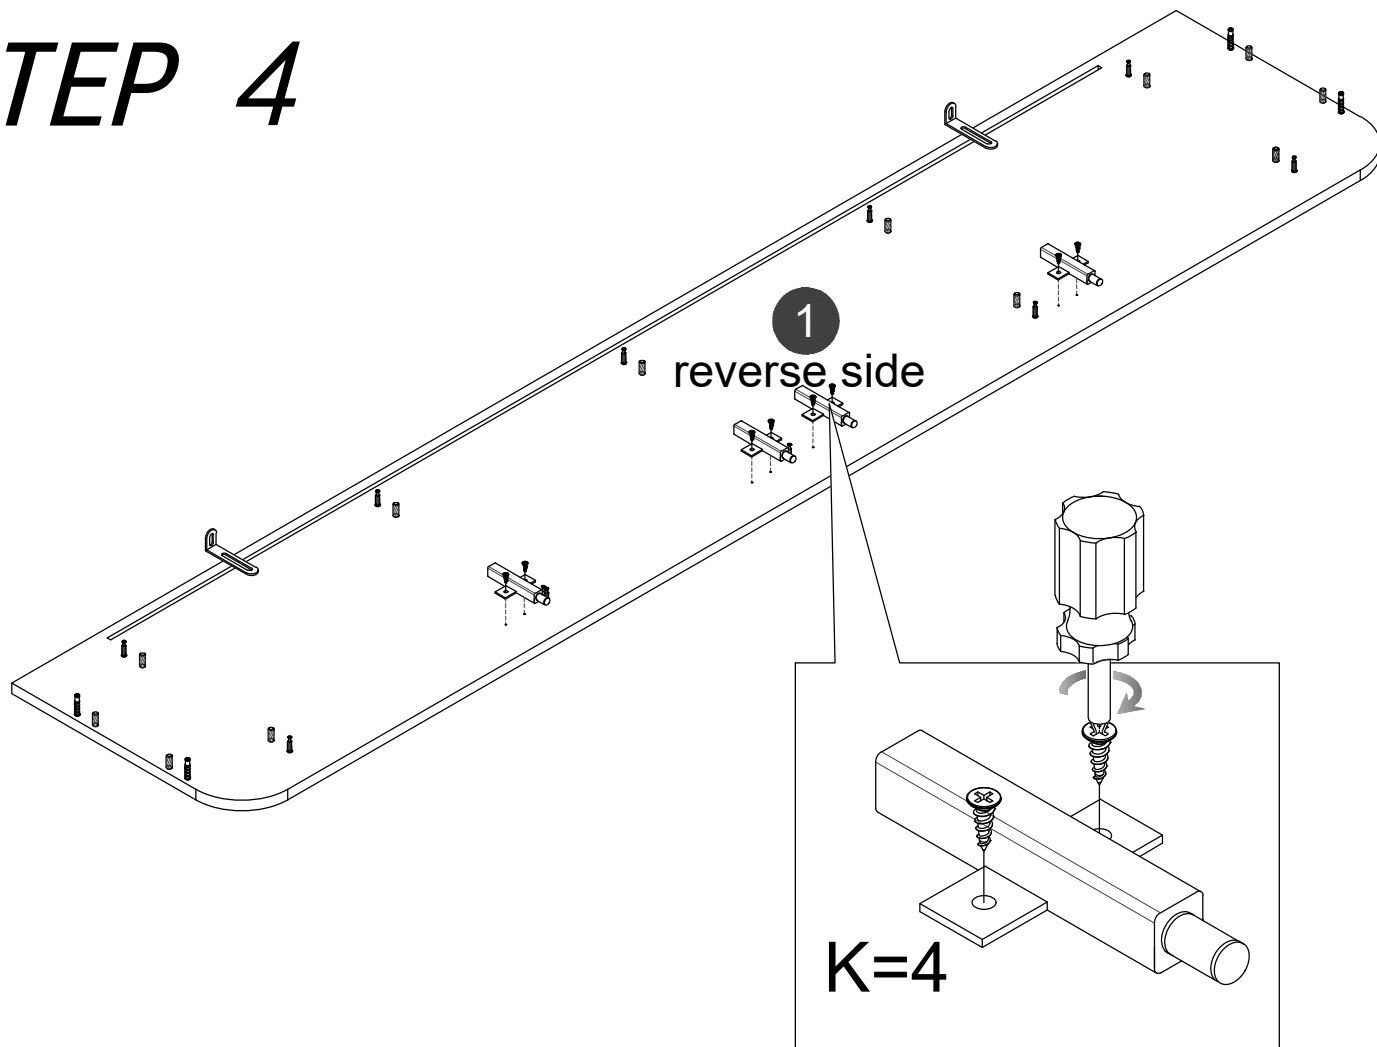


STEP 5

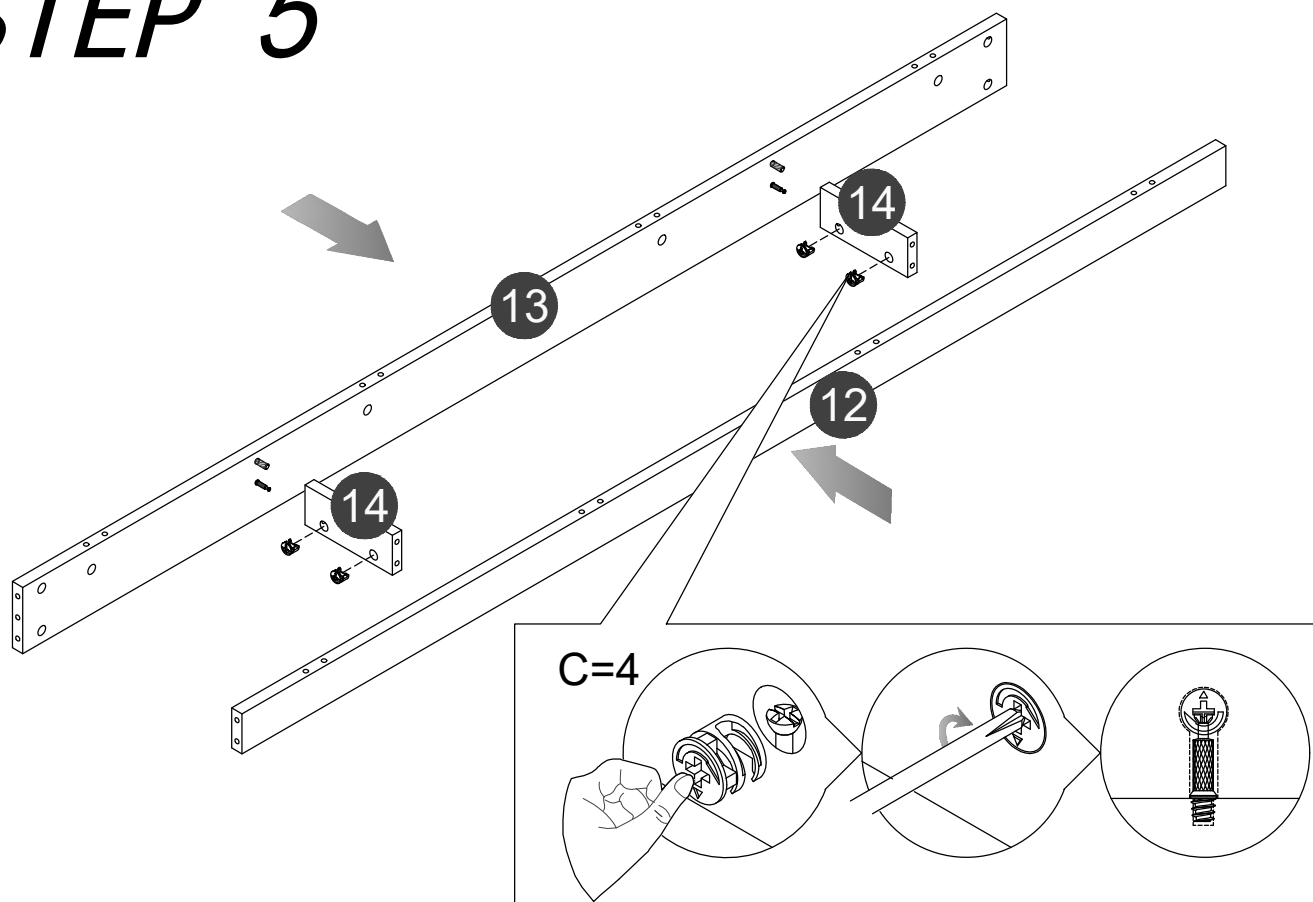




STEP 6

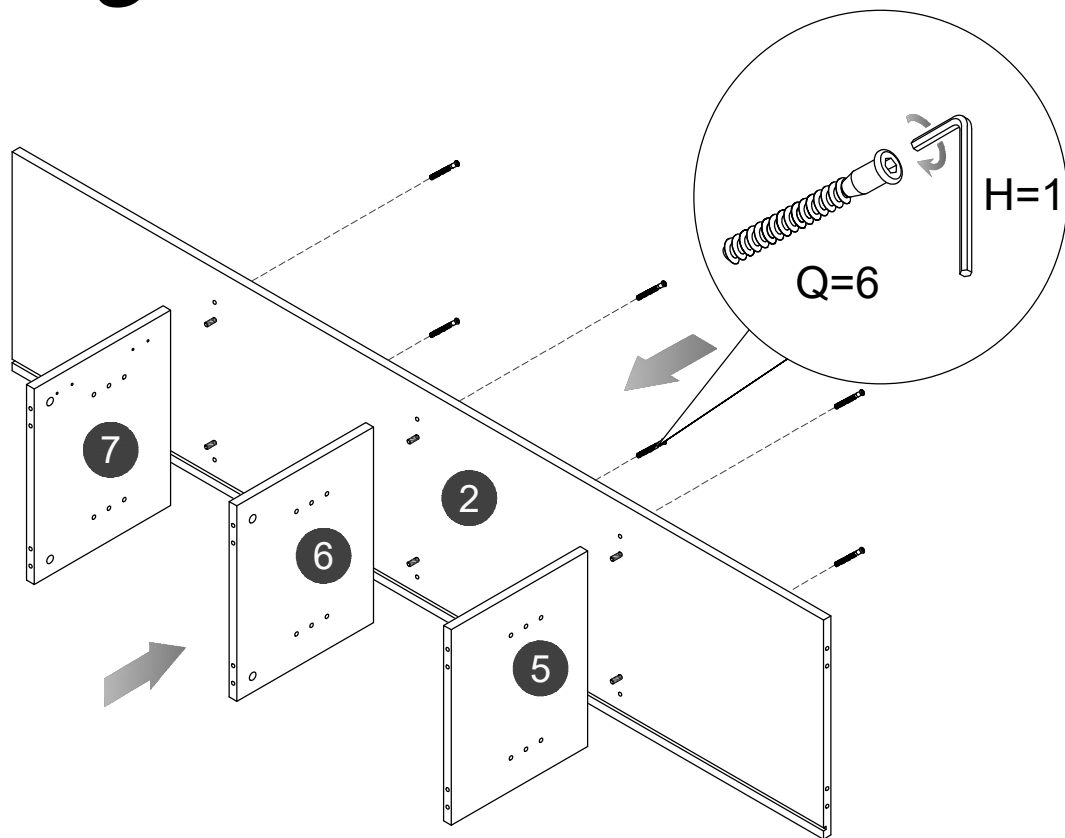


STEP 7

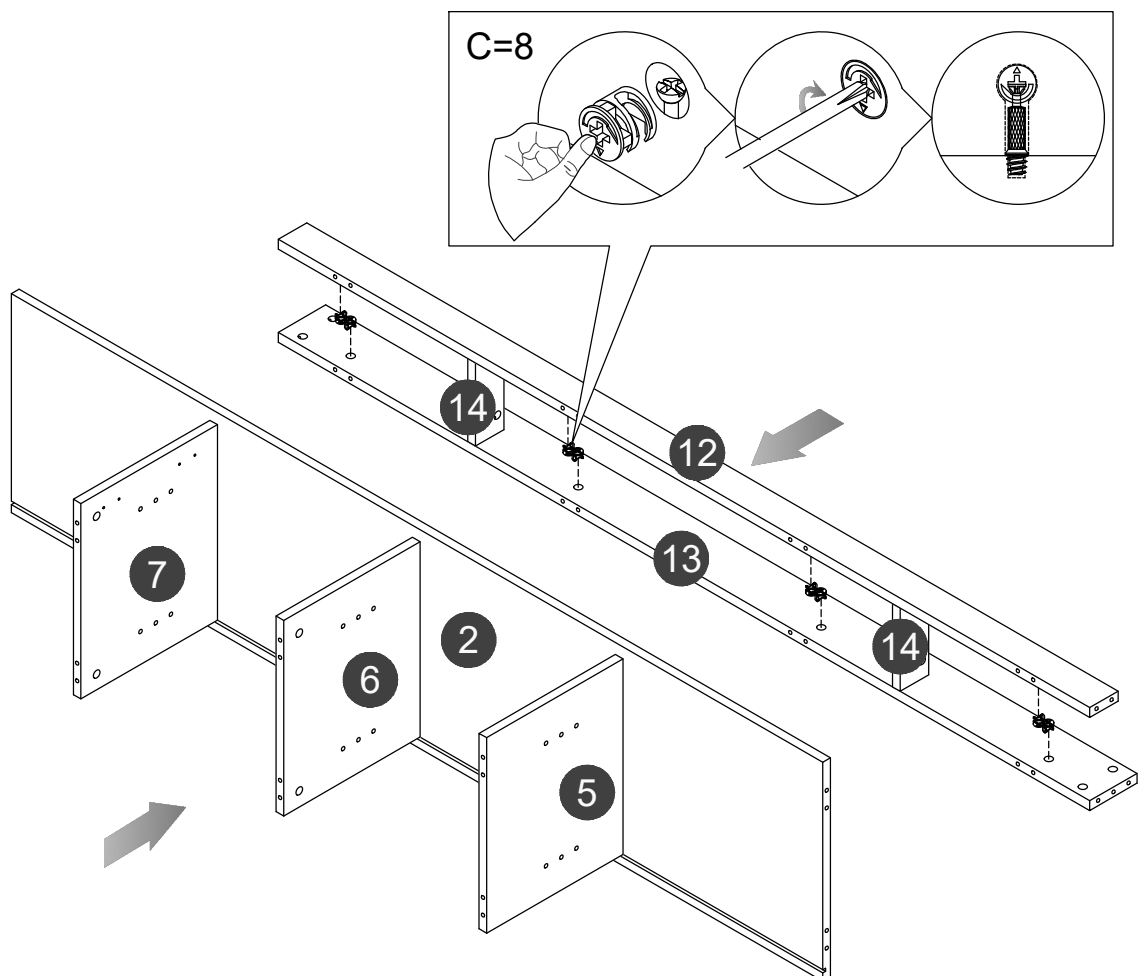


STEP 8

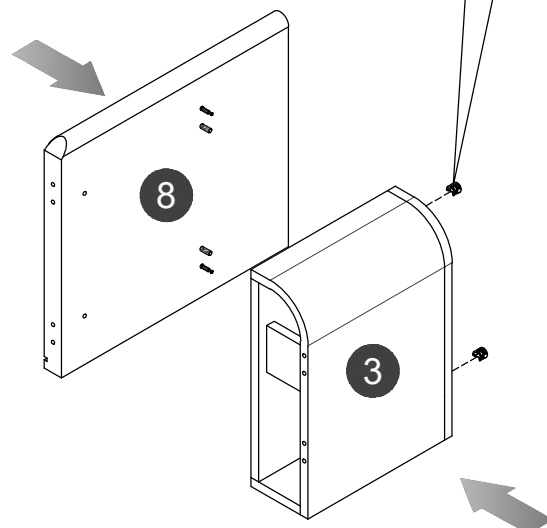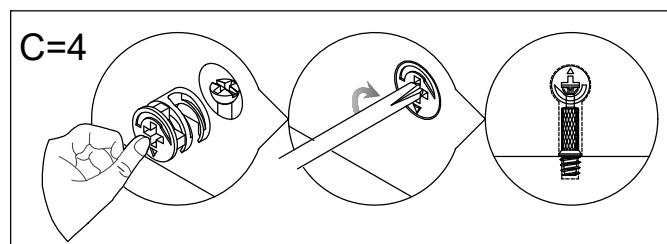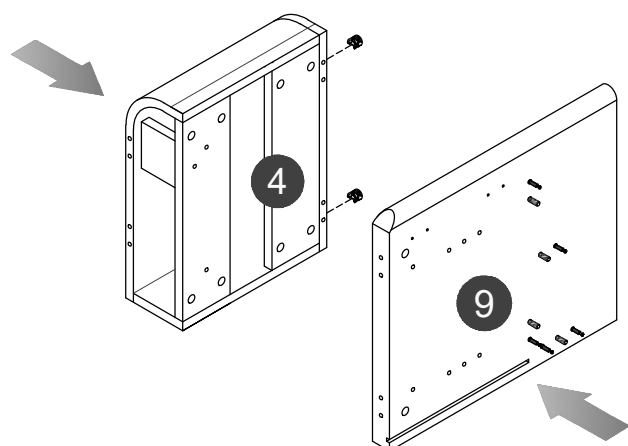


STEP 9

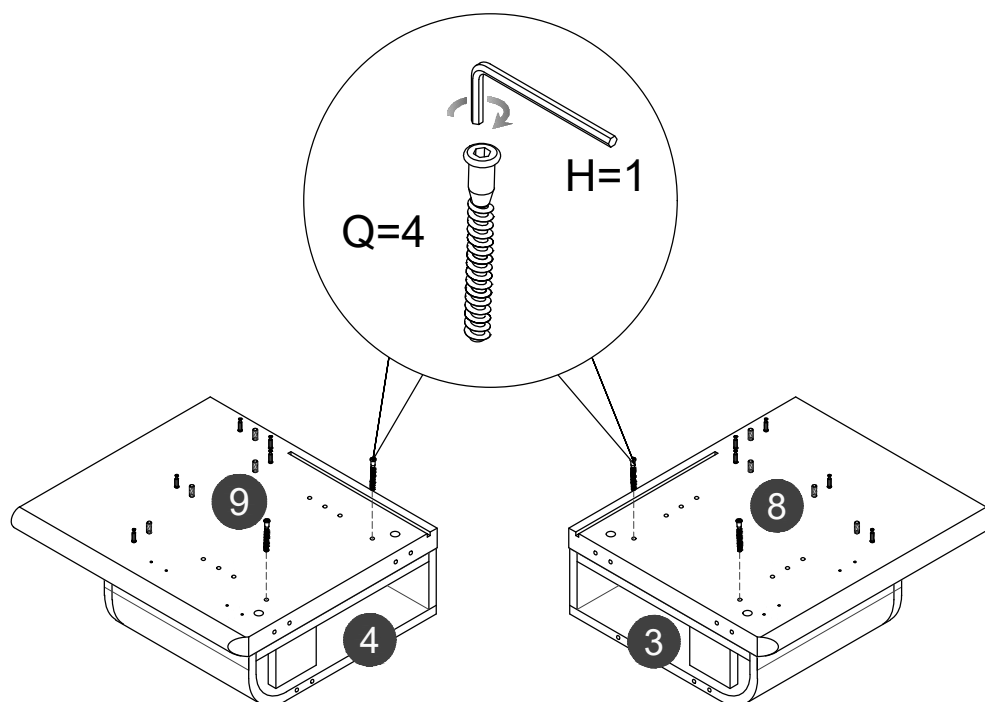


STEP 10

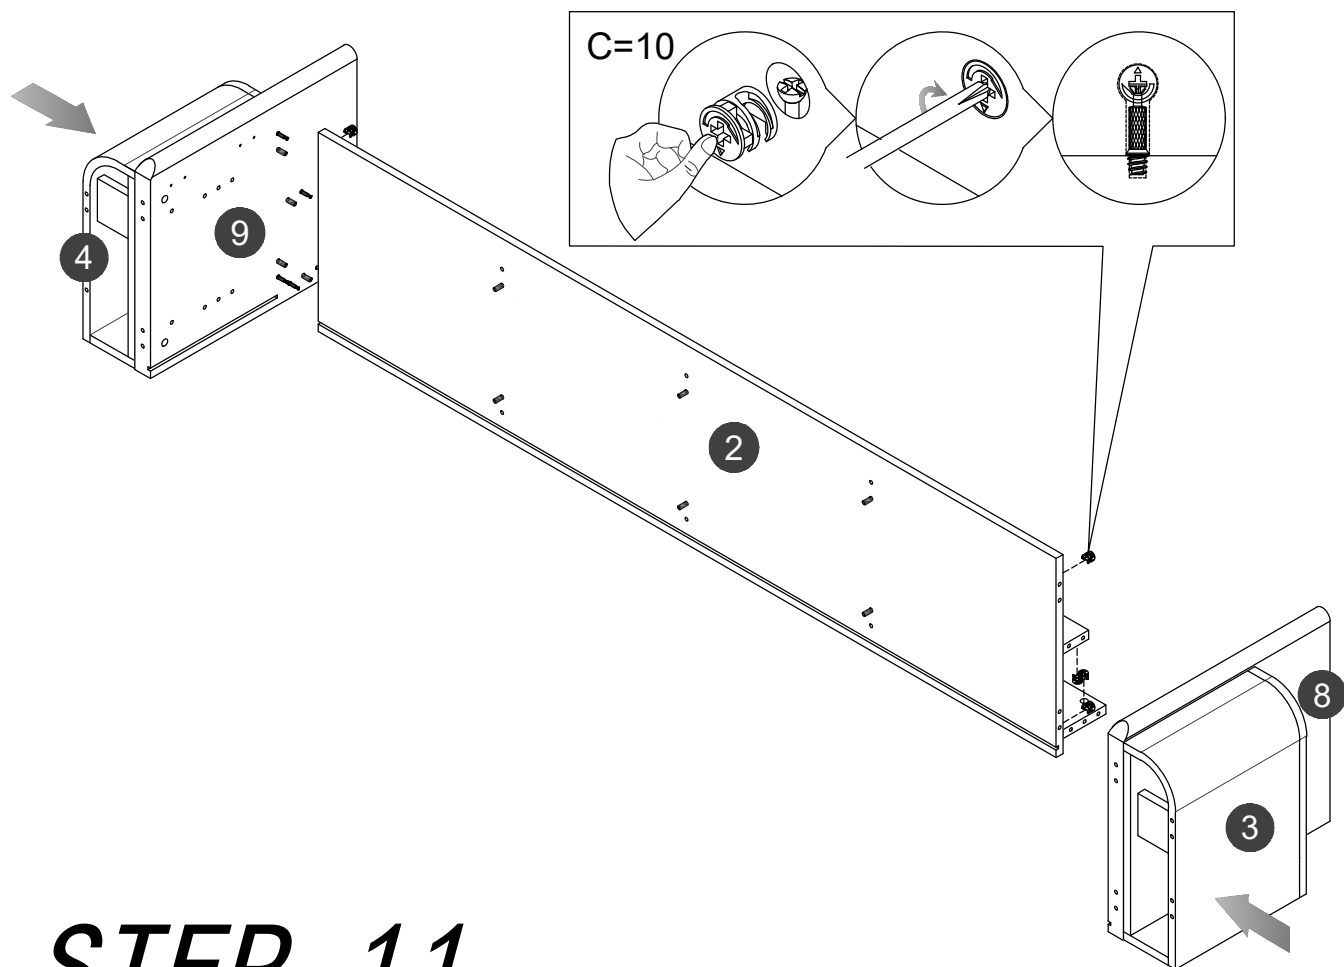


STEP 11

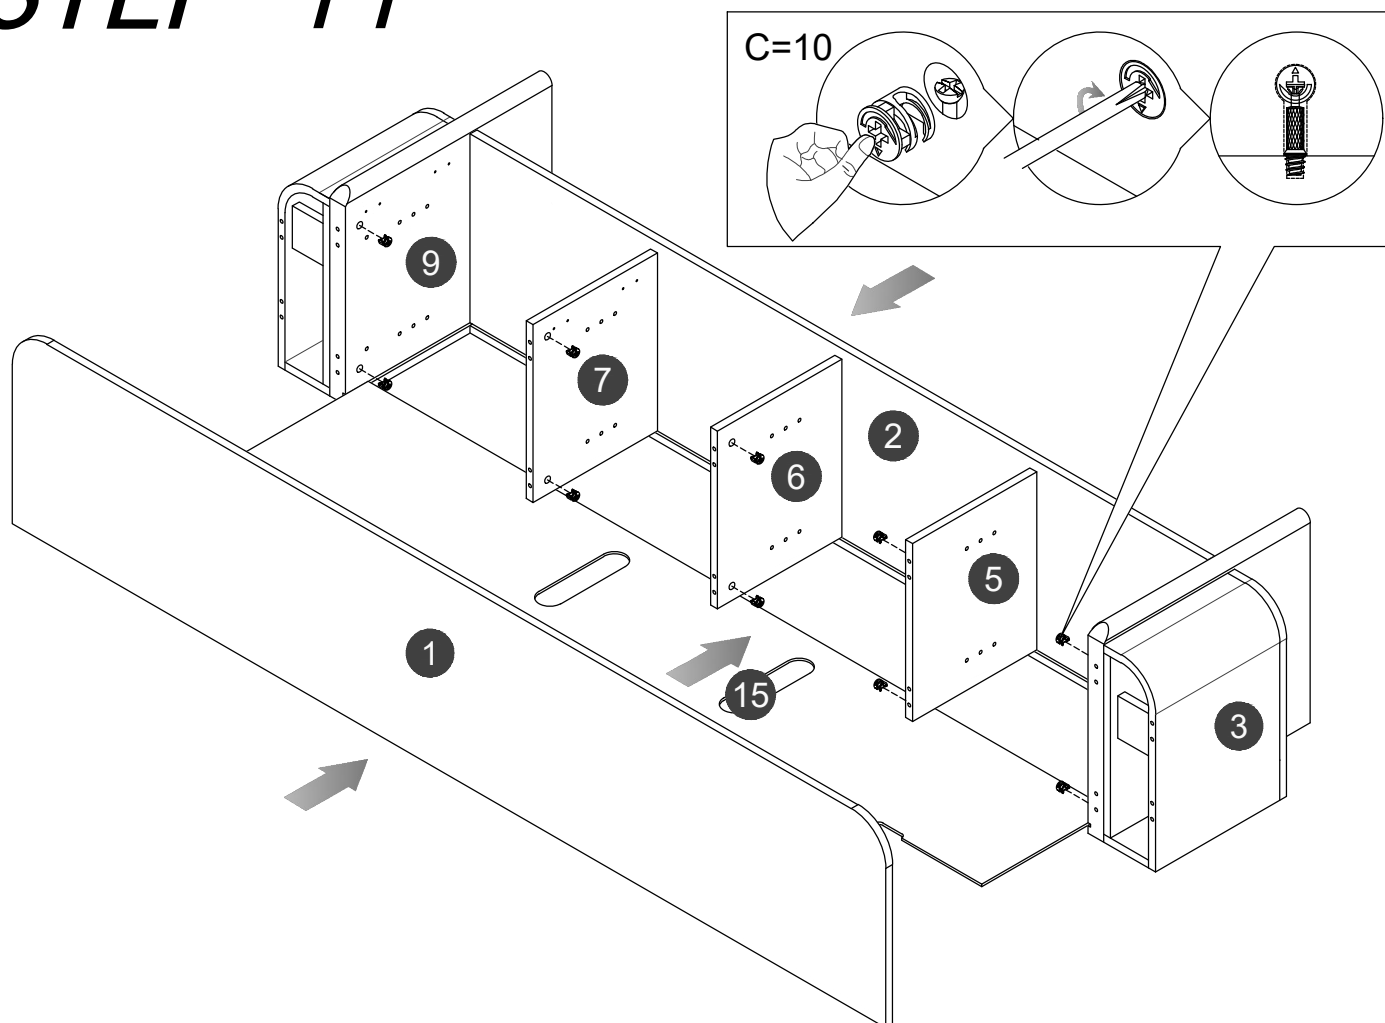


STEP 12

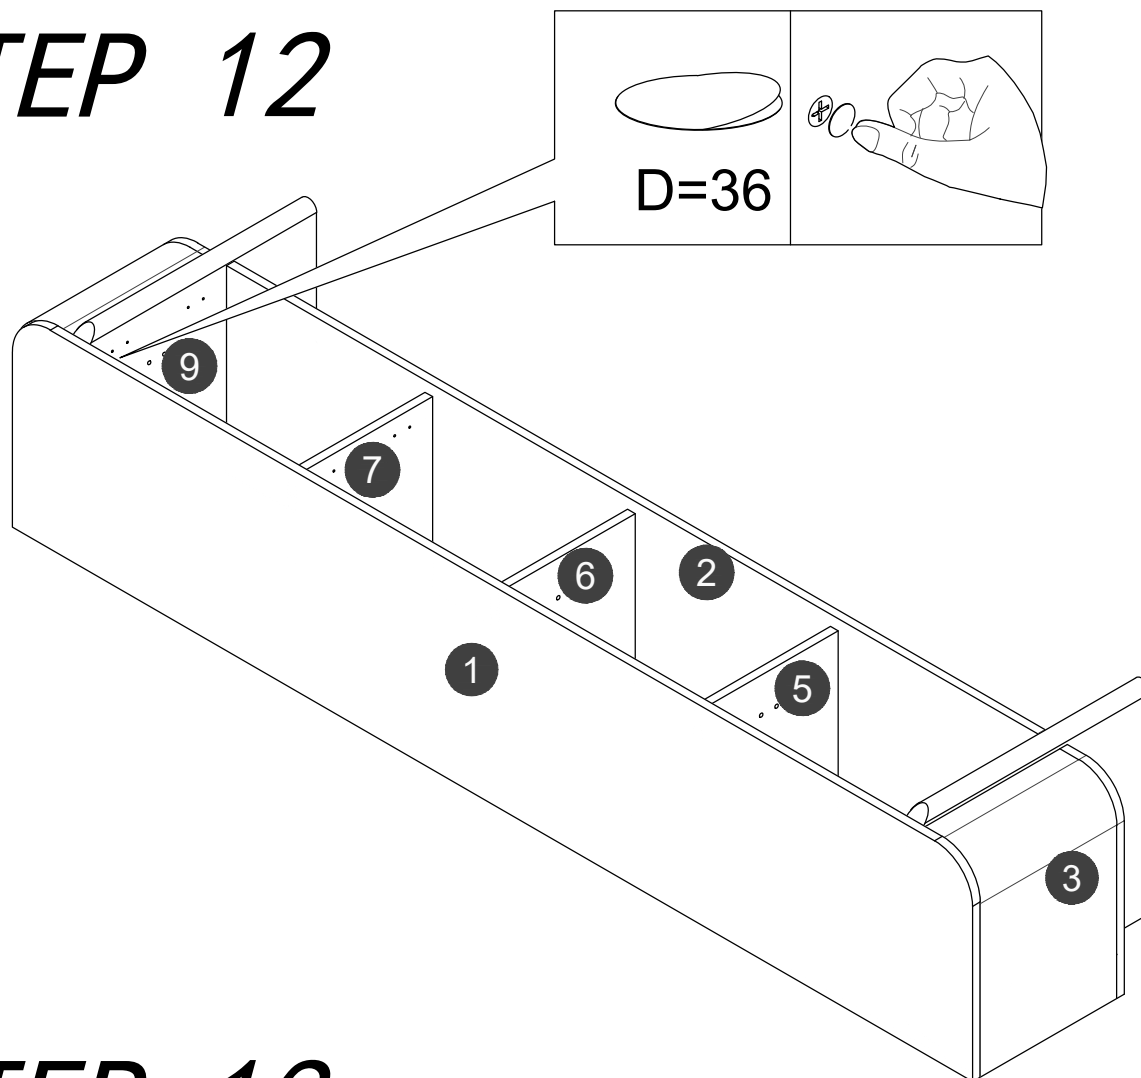


STEP 13

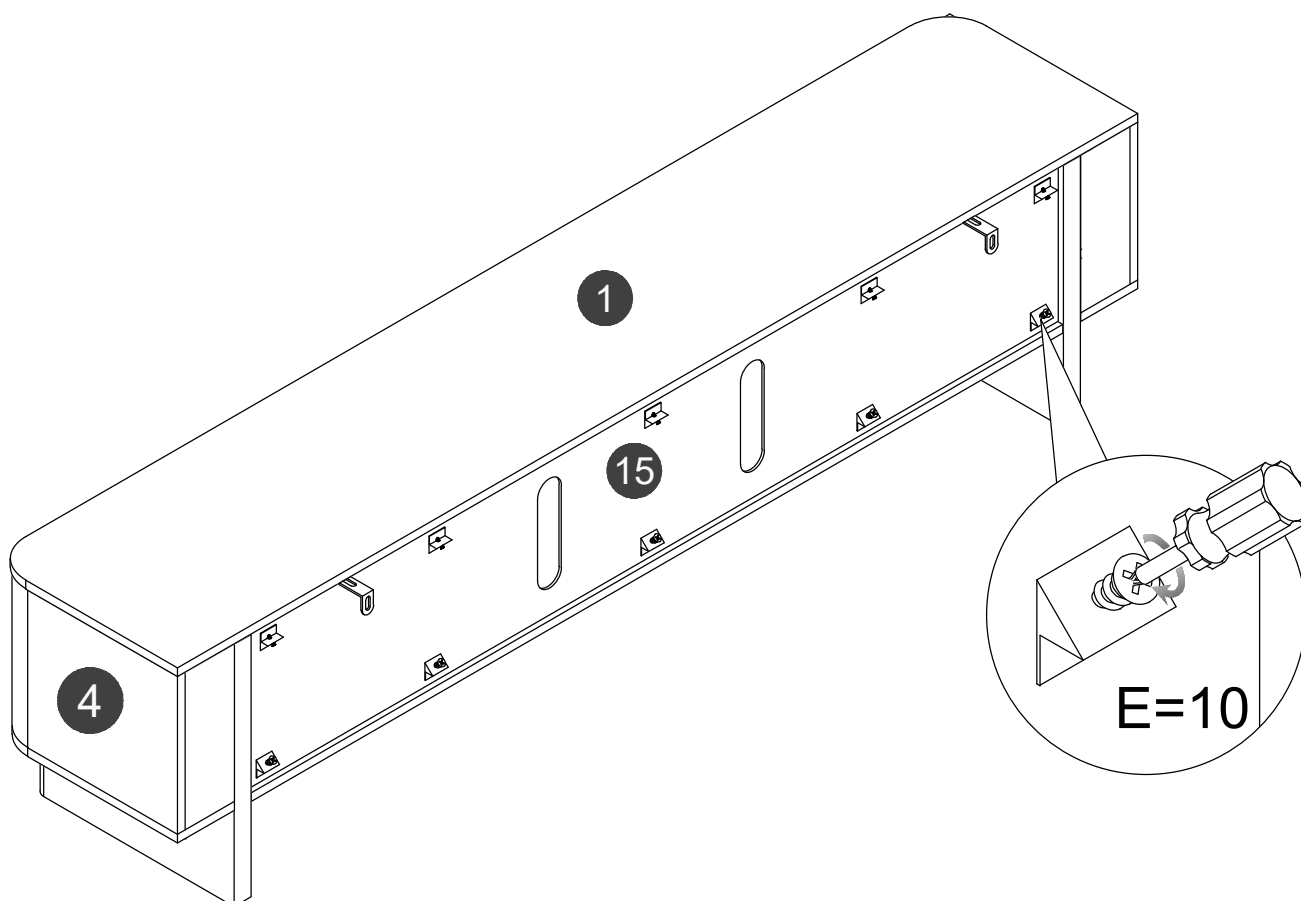


STEP 14

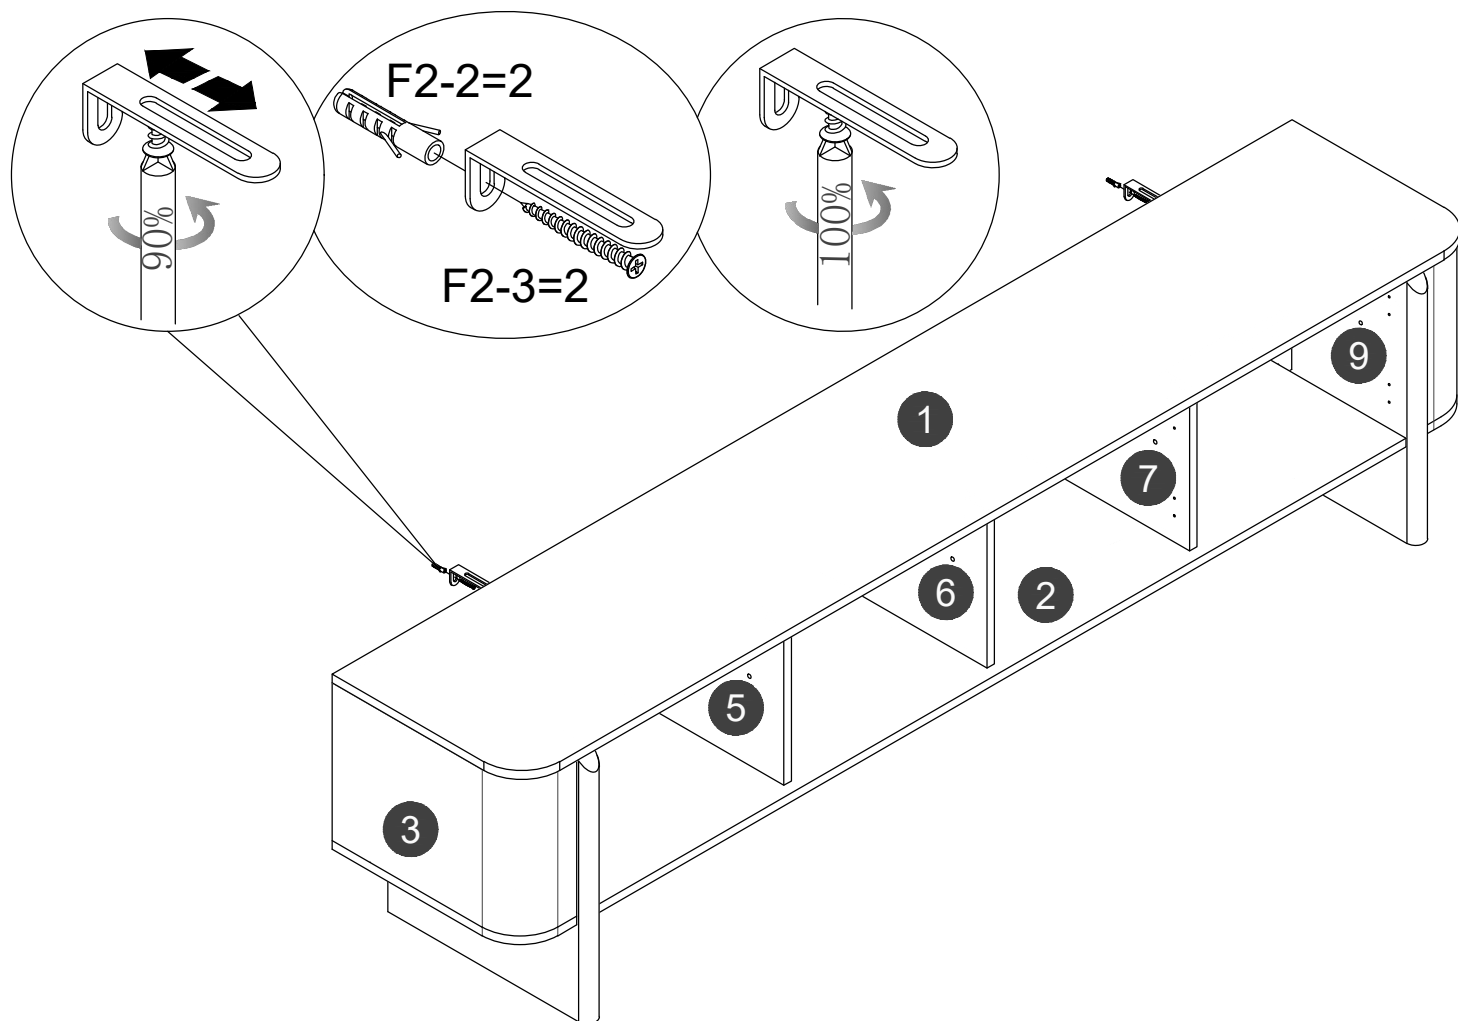


STEP 15

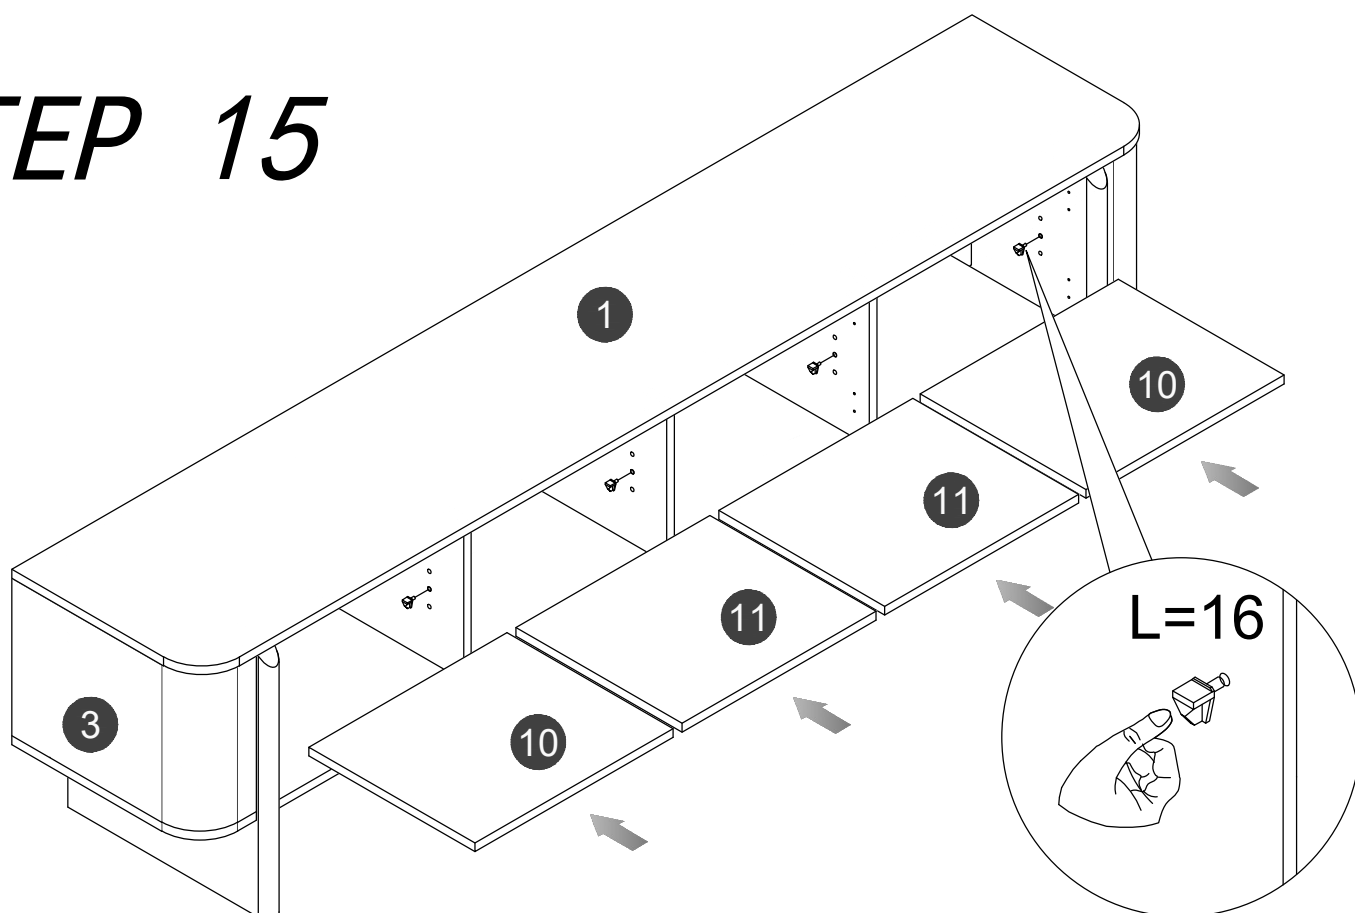


STEP 16

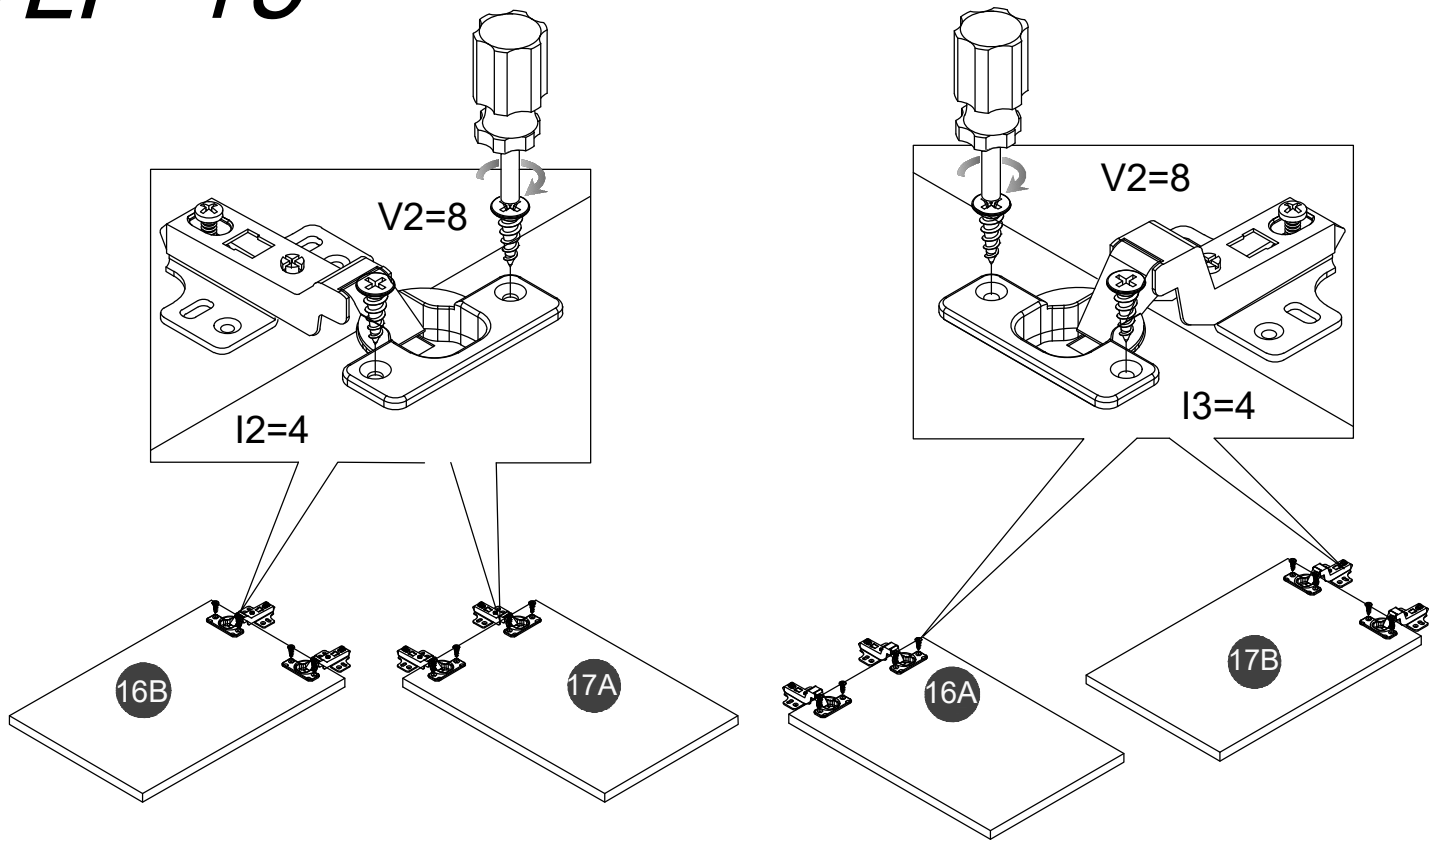


STEP 17

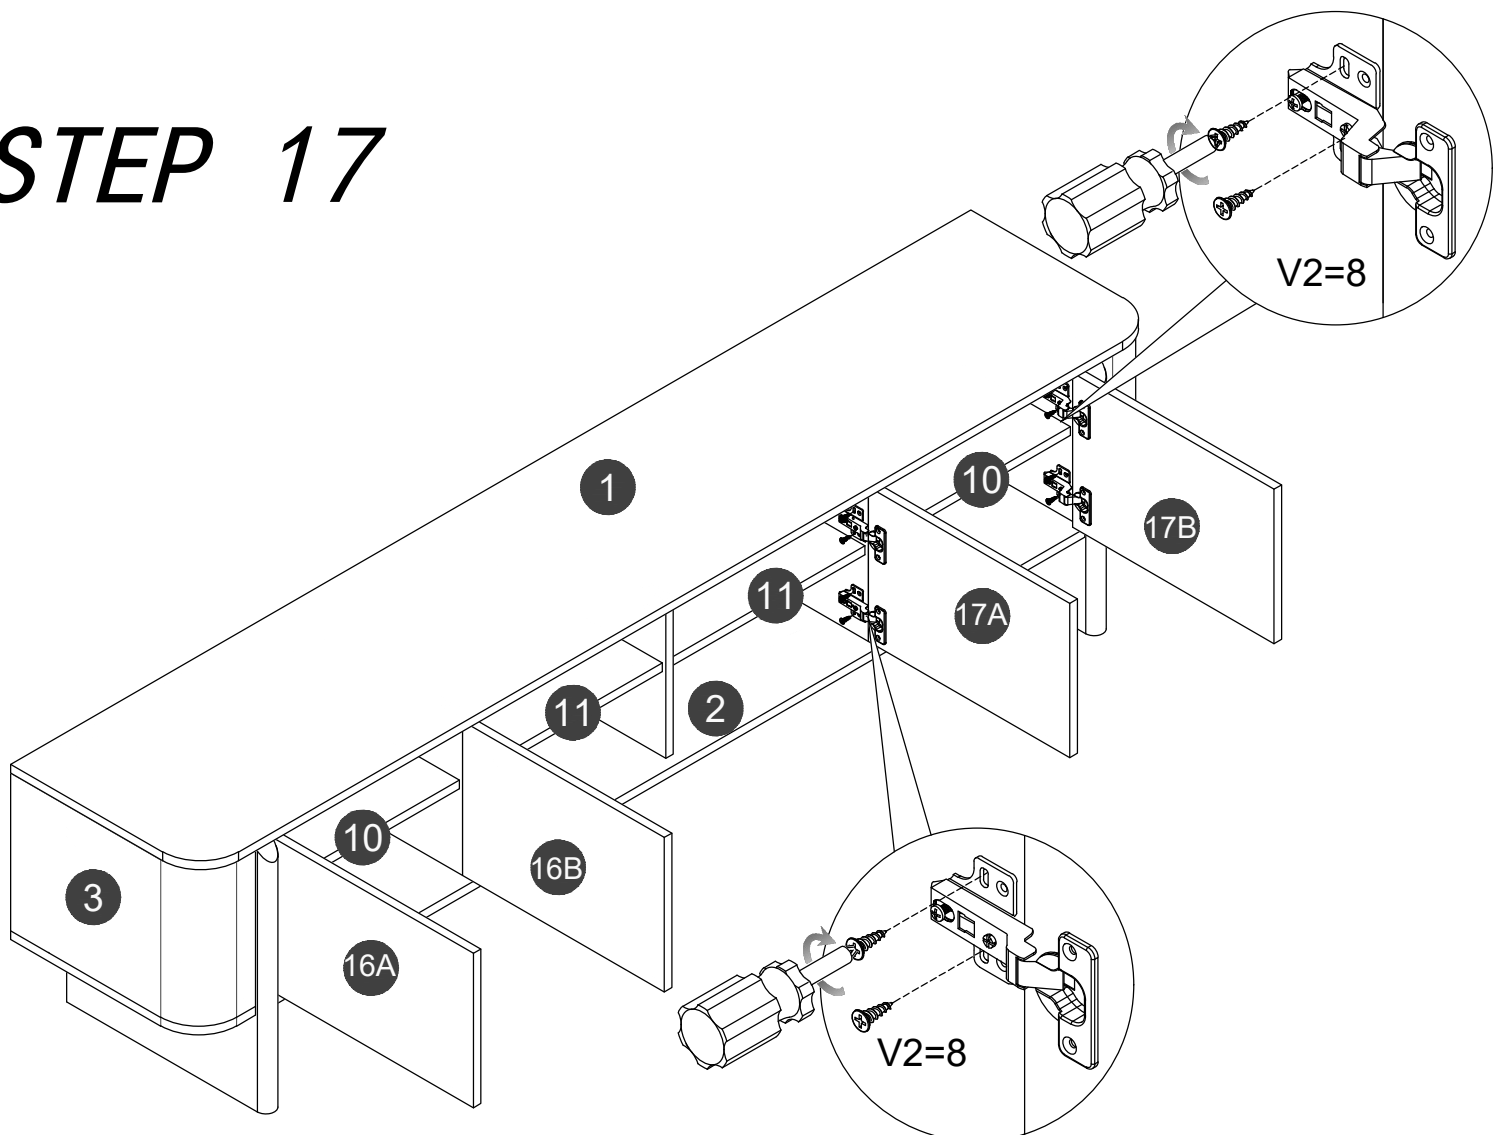

STEP 18

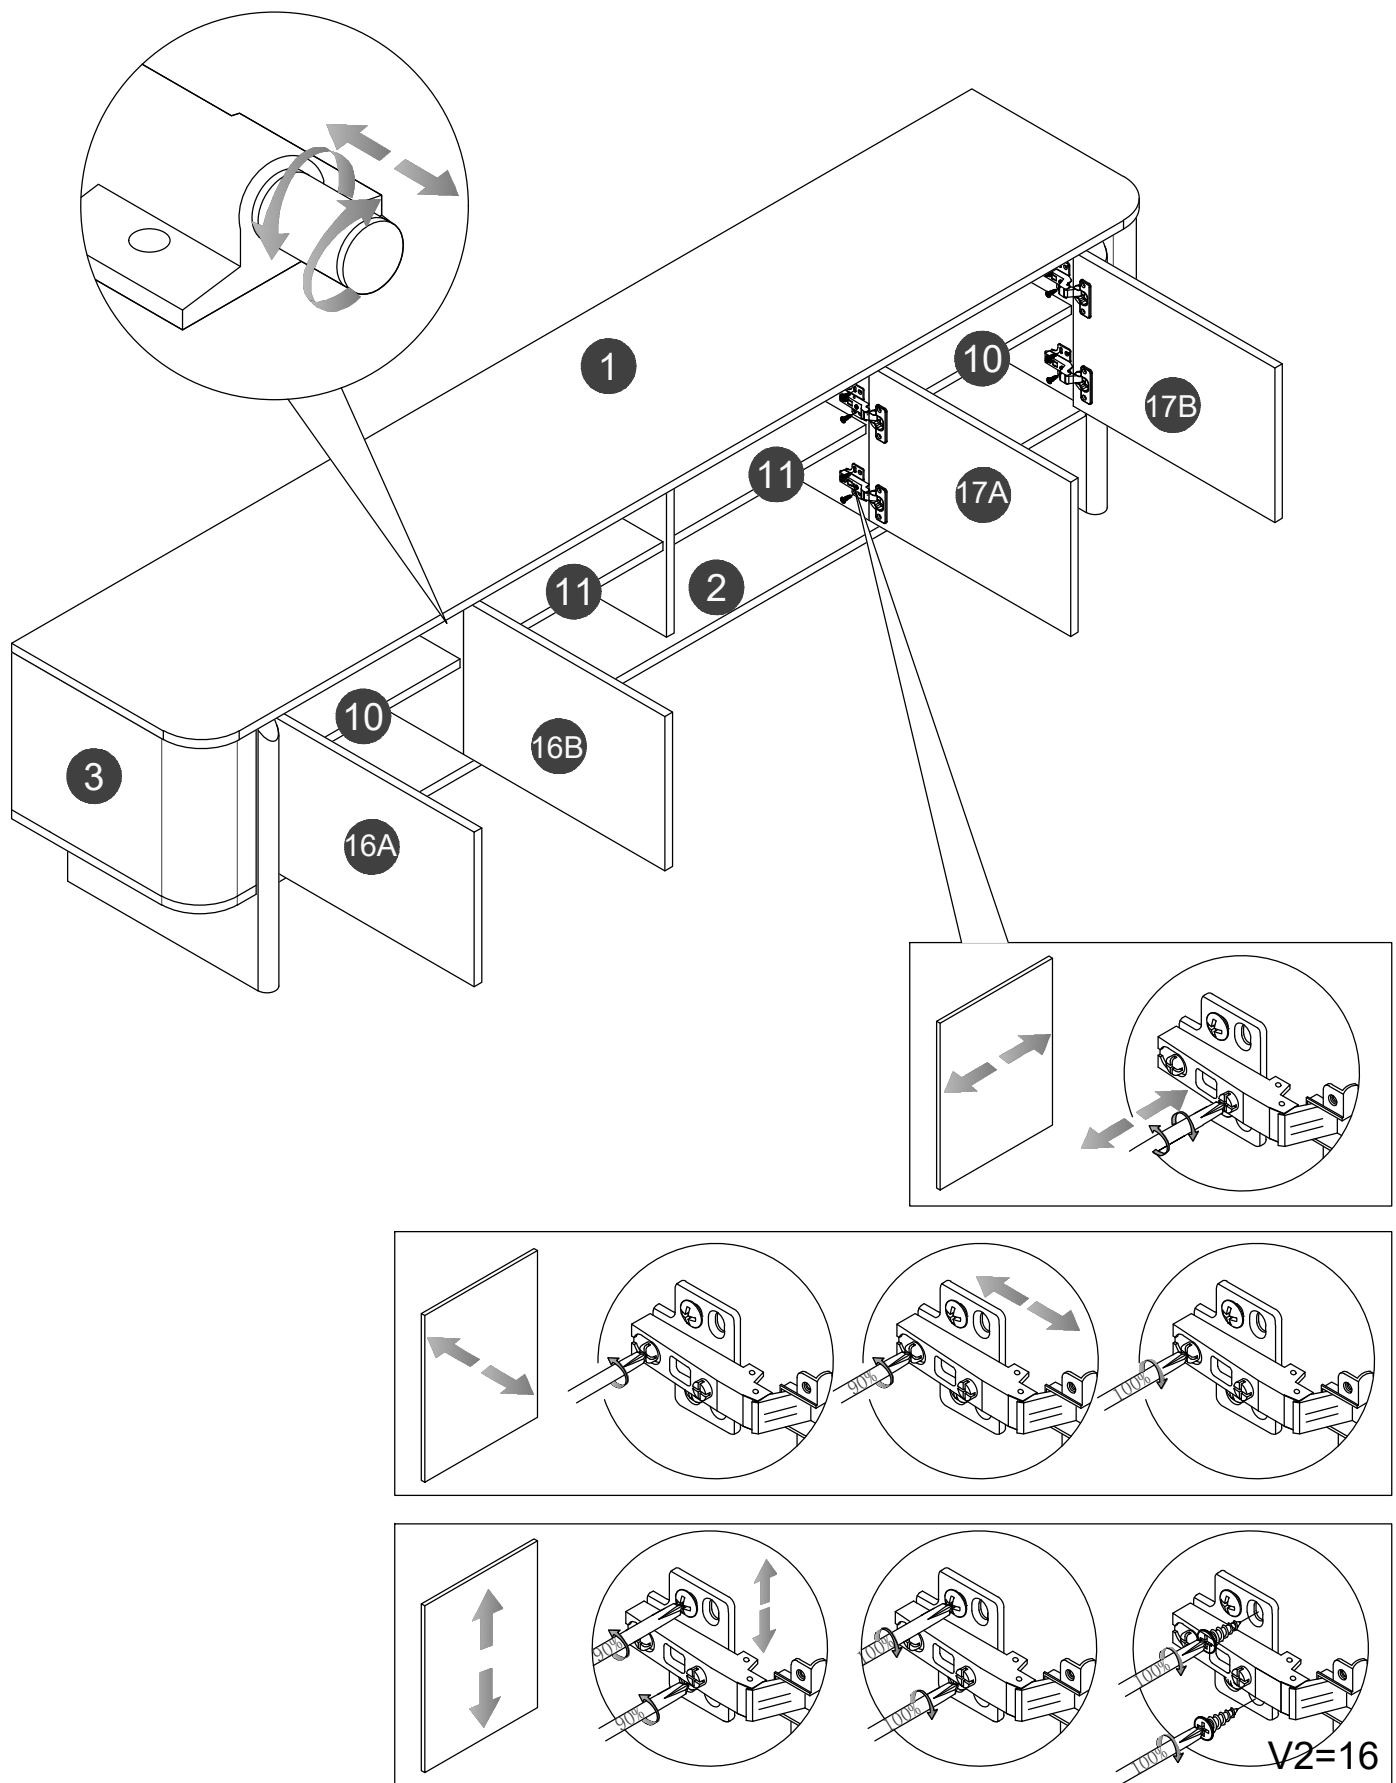

STEP 19

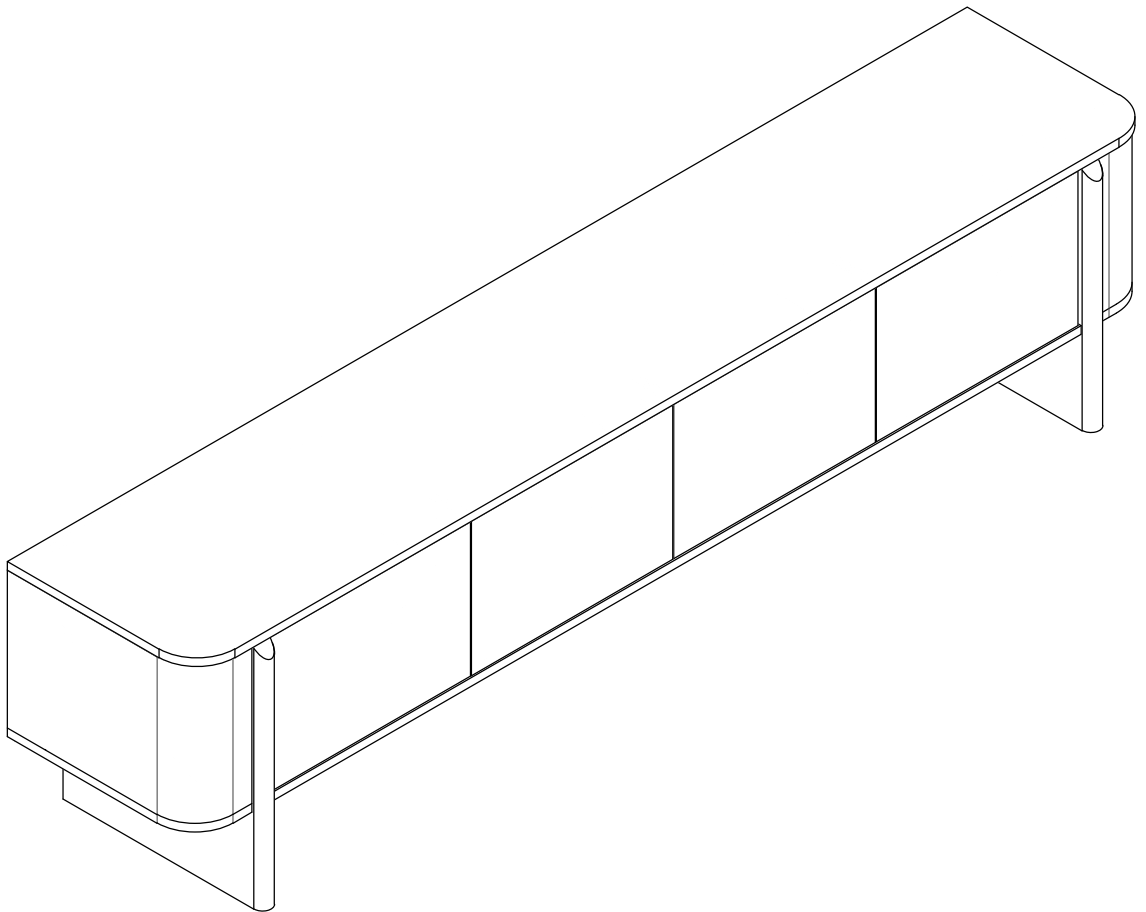

Finish